

[Manuals.plus](#) /

› [Royal Gourmet](#) /

› Royal Gourmet Outdoor Trolley PC3405S Instruction Manual

Royal Gourmet PC3405S

Royal Gourmet Outdoor Trolley Instruction Manual

Model: PC3405S

Brand: Royal Gourmet

1. PRODUCT OVERVIEW

The Royal Gourmet PC3405S Outdoor Trolley is a versatile and durable solution designed for various cooking and serving scenarios. This 3-shelf trolley is suitable for both indoor kitchens and outdoor barbecues, offering a robust stainless steel table top and a convenient folding side table.

Key features include a high-temperature resistant and easy-to-clean stainless steel tray, a pull-out center shelf for easy access to essentials, and ample storage space on the bottom shelf. Equipped with two large wheels and sturdy legs, this trolley provides stability and mobility for use in diverse environments such as backyard gatherings, camping, food festivals, or catering events.



Image 1.1: The Royal Gourmet Outdoor Trolley in use, showcasing its stainless steel worktop, folding side table, and storage shelves.

2. SAFETY INFORMATION

Please read all safety instructions carefully before assembly and use.

- **Weight Capacity:** Do not exceed the maximum weight capacity for each surface:
 - Table surface: 20 kg (44 lbs)
 - Middle shelf: 15.5 kg (34 lbs)
 - Bottom shelf: 15.5 kg (34 lbs)
 - Side table: 7.5 kg (16.5 lbs)
- **Stability:** Ensure the trolley is placed on a stable, level surface before loading items or using.
- **Movement:** Use caution when moving the trolley, especially over uneven surfaces, to prevent tipping. Grasp the handle, lift the legs slightly to engage the wheels, and lower them to secure the trolley in place.

- **Hot Surfaces:** The stainless steel worktop can become hot when used with cooking appliances. Exercise caution and use protective gear if necessary.
- **Children and Pets:** Keep children and pets away from the trolley during use, especially when hot.

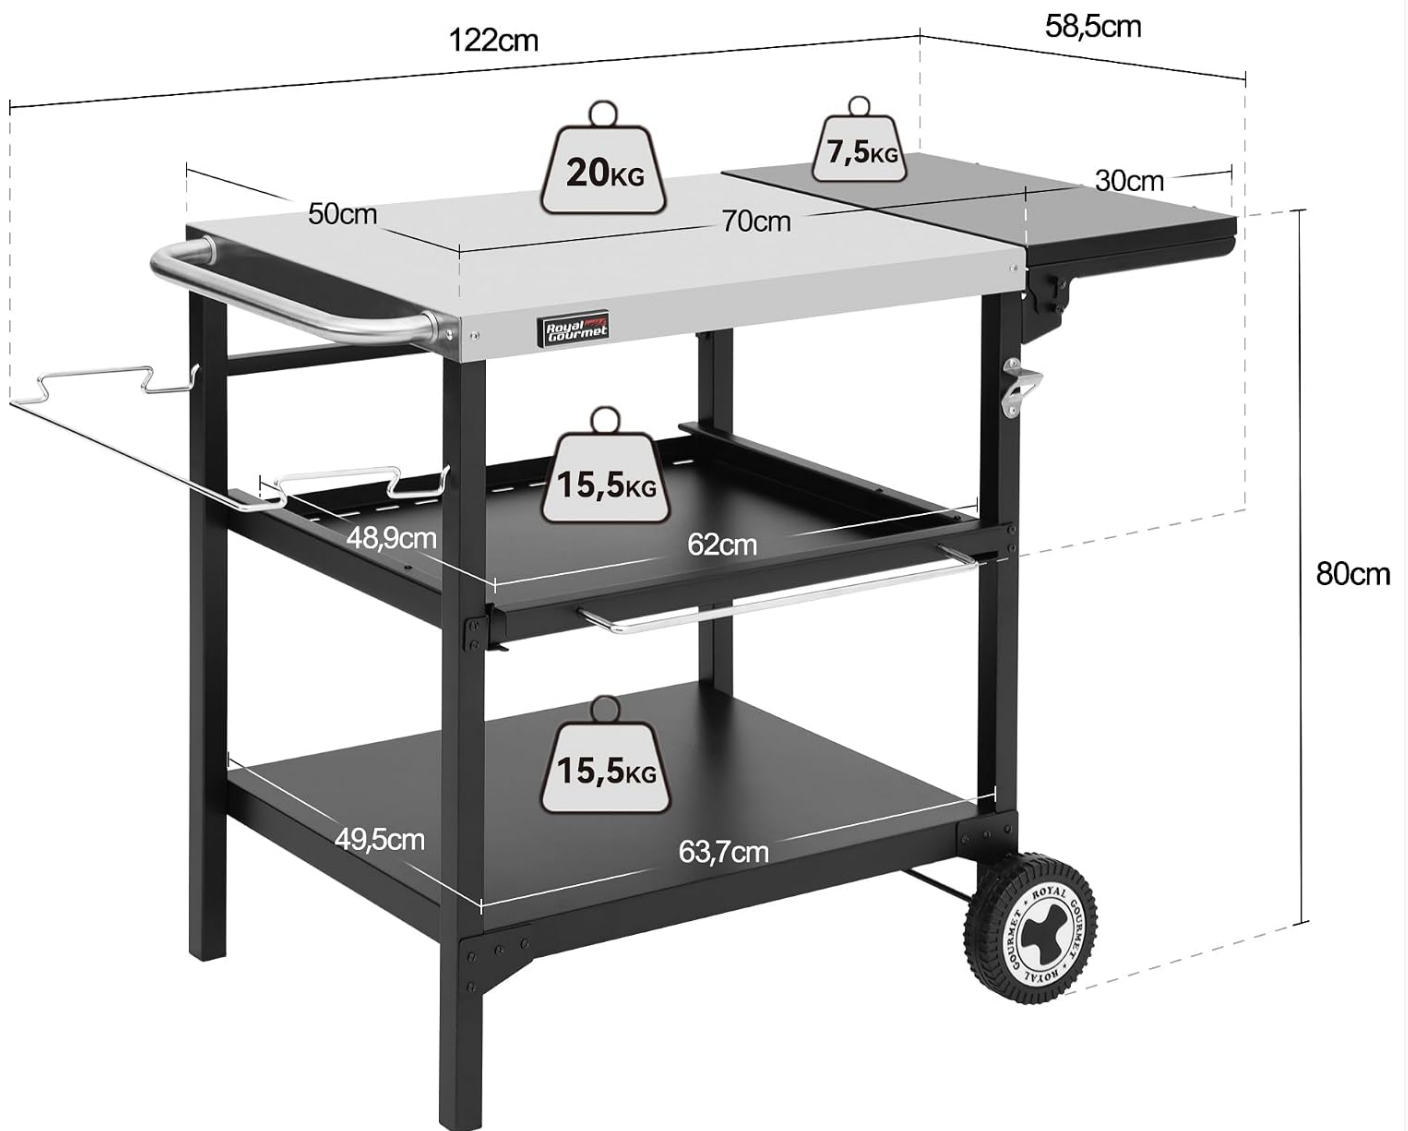


Image 2.1: Visual representation of the maximum weight capacities for the top surface, middle shelf, bottom shelf, and folding side table.

3. ASSEMBLY INSTRUCTIONS

Assembly of the Royal Gourmet Outdoor Trolley is required. Please follow the instructions provided in the packaging for detailed steps. Ensure all parts are present before beginning assembly.

3.1. Parts List (Typical Components)

While a detailed parts list is included with your product, common components typically include:

- Stainless Steel Worktop
- Folding Side Table
- Main Frame (Carbon Steel)
- Middle Shelf
- Bottom Shelf
- Wheels (2)
- Legs (2 with wheels, 2 stationary)

- Handle
- Side Hooks
- Trash Bag Holder
- Bottle Opener
- Assembly Hardware (screws, bolts, nuts, washers)

3.2. General Assembly Steps

1. Unpack all components and verify against the parts list.
2. Attach the main frame components, ensuring all connections are secure.
3. Install the wheels onto the designated legs.
4. Secure the bottom and middle shelves to the frame.
5. Attach the stainless steel worktop and the folding side table.
6. Install the handle, side hooks, trash bag holder, and bottle opener.
7. Tighten all fasteners, but do not overtighten.

4. OPERATING INSTRUCTIONS

4.1. General Use

The Royal Gourmet Outdoor Trolley can be used as a dining trolley, serving table, workspace, or side table. Its design allows for adaptability in various settings.

Extérieur



Chariot pour plancha

Intérieur



Desserte de cuisine

Image 4.1: The trolley demonstrating its versatility for both outdoor barbecue setups and indoor kitchen use.

4.2. Enlarged Workspace

The trolley offers a total workspace of 100 x 50 cm, comprising a 70 x 50 cm stainless steel worktop and a 30 x 50 cm folding side table. The side table can be folded down to save space when not in use.

4.3. Sliding Shelf Operation

The central shelf is designed to slide out, providing easy access to stored items. Use the integrated handle to pull the shelf forward or push it back into position.

4.4. Accessory Features

- **Side Hooks:** Utilize the three side hooks for hanging accessories such as utensils, towels, or other small tools.
- **Trash Bag Holder:** Attach a trash bag to the designated holder for convenient waste disposal during use.
- **Bottle Opener:** The integrated bottle opener provides a convenient tool for beverages.



**Porte-sac à ordures
amovible**



Ouvre-bouteille



Préparation des aliments



Desserte pour plancha



Tablettes coulissantes

Image 4.2: Demonstrating the trolley's practical design with food preparation, griddle support, sliding shelves, and integrated accessories.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and performance of your Royal Gourmet Outdoor Trolley.

- **Cleaning:** Wipe all surfaces with a damp cloth after each use. For stubborn stains on the stainless steel worktop, use a mild detergent and rinse thoroughly. Avoid abrasive cleaners or scouring pads that could scratch the surface.
- **Drying:** Ensure all metal parts are thoroughly dried after cleaning to prevent rust, especially the carbon steel frame.
- **Storage:** When not in use, store the trolley in a dry, protected area to shield it from harsh weather conditions. The folding side table can be collapsed to reduce storage space.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Retighten if necessary.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Royal Gourmet Outdoor Trolley.

6.1. Trolley is Unstable

- **Check Surface:** Ensure the trolley is on a flat, level surface.
- **Tighten Fasteners:** Verify that all screws and bolts are securely tightened.
- **Weight Distribution:** Ensure weight is evenly distributed and not exceeding capacity limits.

6.2. Difficulty Moving Trolley

- **Obstructions:** Check if wheels are obstructed by debris.
- **Engage Wheels:** Ensure the legs are slightly lifted to allow the wheels to roll freely.
- **Overload:** Reduce the load if the trolley is too heavy to move easily.

6.3. Rust Spots Appearing

- **Immediate Cleaning:** Clean any rust spots immediately with a non-abrasive rust remover suitable for metal.
- **Drying:** Always dry the trolley thoroughly after cleaning or exposure to moisture.
- **Storage:** Store the trolley in a dry environment to prevent moisture accumulation.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions (D x W x H)	23.03" x 48.03" x 31.5" (58.5 cm x 122 cm x 80 cm)
Main Worktop Dimensions	70 cm x 50 cm
Folding Side Table Dimensions	30 cm x 50 cm
Number of Shelves	3 (including top worktop)
Frame Material	Carbon Steel
Worktop Material	Stainless Steel
Color	Silver
Item Weight	37.4 pounds (17 kg)
Assembly Required	Yes
Product Care Instructions	Wipe with Damp Cloth

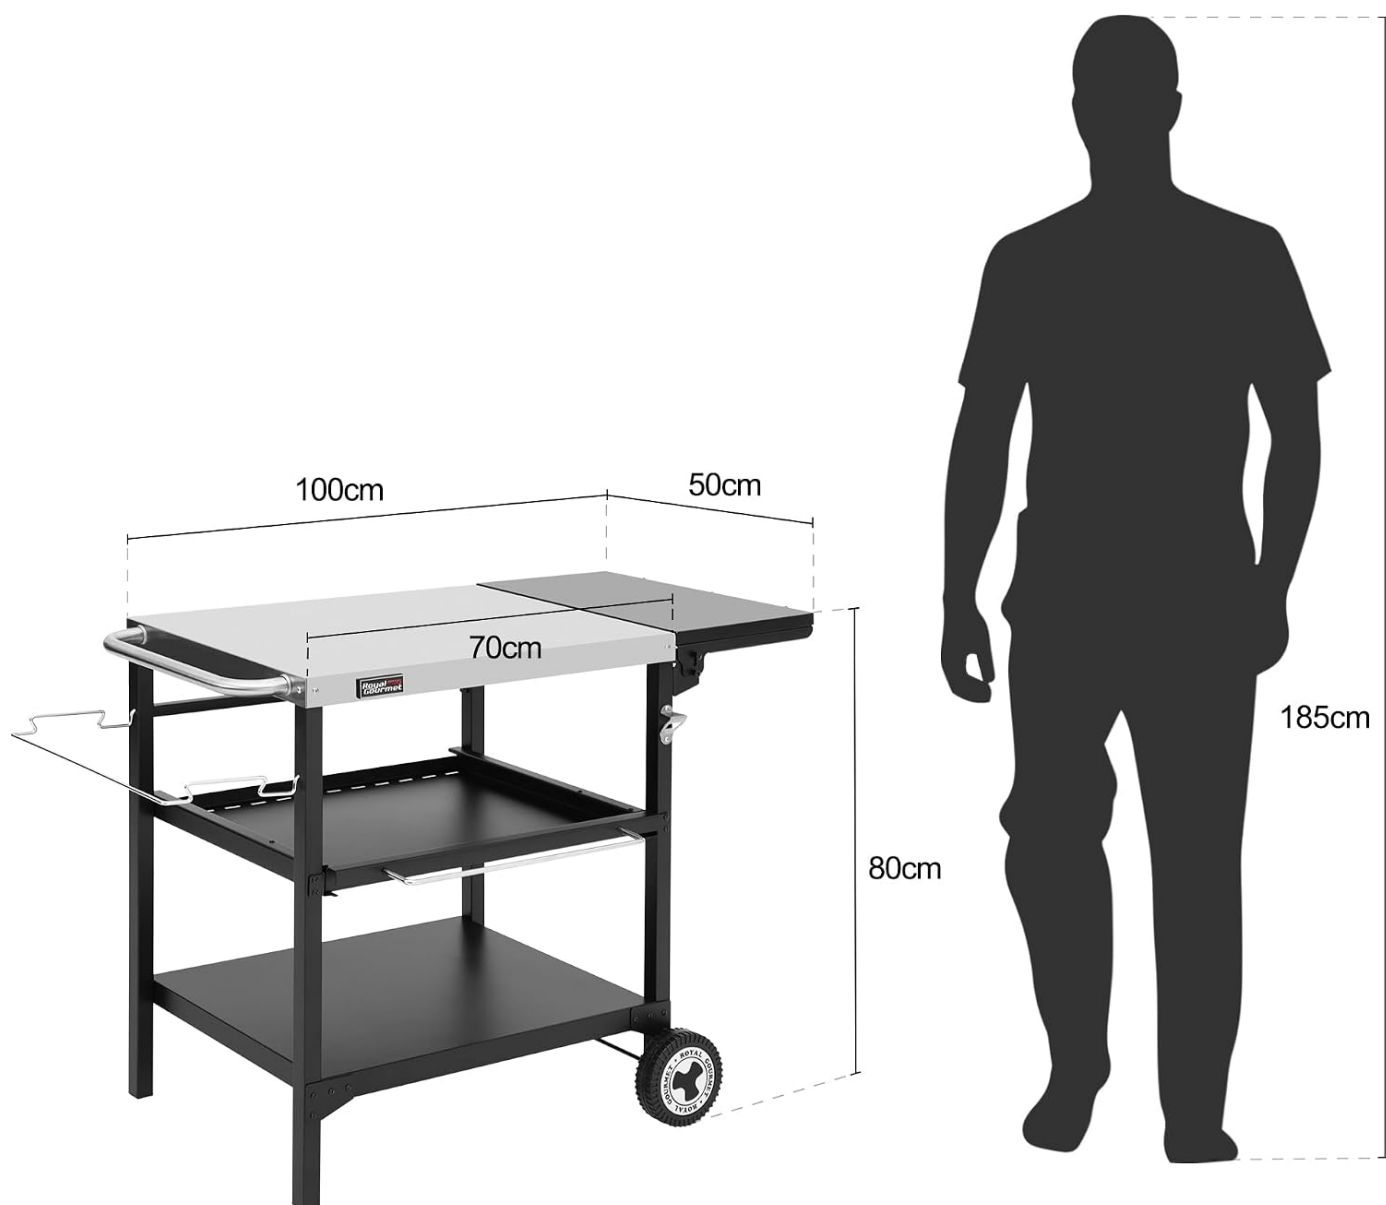


Image 7.1: Detailed dimensions of the Royal Gourmet Outdoor Trolley.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Royal Gourmet website. Keep your purchase receipt as proof of purchase for any warranty claims. If you have any questions or require assistance with your Royal Gourmet Outdoor Trolley, please contact Royal Gourmet customer service.

© 2026 Royal Gourmet. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question