

[Manuals.plus](#) /

› [KEMEI](#) /

› KEMEI Professional Hair Clipper User Manual

KEMEI Km-2288

KEMEI Professional Hair Clipper User Manual

MODEL: KM-2288

1. Overview

The KEMEI Professional Hair Clipper (Model Km-2288) is a versatile and cordless grooming tool designed for precise hair cutting and trimming. Featuring an adjustable blade and a powerful motor, it is suitable for various hair types and styles. The integrated LCD display provides real-time battery percentage and intelligent reminders for charging, refueling, and cleaning, ensuring optimal performance and user convenience. Its USB charging capability offers flexibility for use at home or on the go.



Image 1.1: KEMEI Professional Hair Clipper with included accessories.

2. Safety Information

WARNING: To reduce the risk of electric shock, injury, or damage, always adhere to the following safety precautions.

- Always use a haircut cloak or similar protective covering to prevent hair from entering sensitive areas.
- Keep the trimmer away from water sources, including sinks, bathtubs, and showers. Do not use while bathing or showering.
- Follow all recommended cleaning and maintenance procedures as outlined in this manual to ensure proper hygiene and longevity of the device.
- Always unplug the trimmer from the power source before charging or performing any cleaning or maintenance.
- Do not use the trimmer on infants or young children without proper adult supervision. Ensure the child is calm and cooperative to prevent accidental injury.
- Do not operate the clipper if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.

- Keep the appliance dry.

3. Package Contents

Upon unboxing your KEMEI Professional Hair Clipper, please verify that all the following items are included:

- KEMEI Professional Hair Clipper (Model Km-2288)
- 4 Limit Combs (1mm, 2mm, 3mm, 4mm)
- Cleaning Brush
- Blade Oil
- USB Charging Cable
- User Manual (this document)

Your browser does not support the video tag.

Video 3.1: Unboxing and overview of the KEMEI Professional Hair Clipper and its accessories, including the clipper, various combs, cleaning brush, and charging cable.

4. Setup

1. **Initial Charge:** Before first use, fully charge the clipper. Connect the USB charging cable to the clipper's charging port and plug the other end into a compatible USB power source (e.g., computer, wall adapter, car charger). The LCD display will show the battery percentage. A full charge takes approximately 120 minutes and provides up to 120 minutes of run time.

USB Charging

Multiple charging options



120 Minutes
Charge Time

120 Minutes
Run Time

Image 4.1: USB charging setup for the KEMEI Hair Clipper.

2. **Attaching Limit Combs:** Select the desired limit comb (1mm, 2mm, 3mm, or 4mm) based on the hair length you wish to achieve. Align the comb with the clipper blade and firmly snap it into place. Ensure it is securely attached before operation.

Hair clipper

Precision T-blade, Self-sharpening precision



Image 4.2: The four available limit combs (1mm, 2mm, 3mm, 4mm).

Your browser does not support the video tag.

Video 4.3: Demonstration of attaching and detaching the limit combs to the clipper.

5. Operating Instructions

1. **Turning On/Off:** Press the power button located on the front of the clipper to turn it on. Press it again to turn it off. The LCD display will illuminate when the clipper is on, showing the current battery percentage.
2. **Using the Clipper:**
 - Ensure the desired limit comb is securely attached.
 - For best results, use on clean, dry hair.
 - Hold the clipper firmly with the blade facing away from you.
 - Start cutting from the bottom of the head and work upwards, moving the clipper against the direction of hair growth.
 - Use smooth, even strokes. Do not apply excessive pressure.
 - The precision T-blade is designed for sharp lines and detailed work.

Precision cutter head

Hair trimming is easy and comfortable, protects hair and can be used by adults and children



Image 5.1: Close-up view of the precision cutter head, highlighting its sharp blade.

3. **Adjustable Blade:** The clipper features an adjustable blade head for precision. Refer to the specific markings on the blade for different cutting lengths without a comb.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your KEMEI Hair Clipper.

1. **Cleaning the Blades:** After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove any loose hairs from the blades. For thorough cleaning, you may detach the blade head if designed for easy removal (refer to specific product design).

Your browser does not support the video tag.

Video 6.1: Demonstration of cleaning the clipper blades with the provided brush.

2. **Oiling the Blades:** Periodically, apply a few drops of the included blade oil to the teeth of the blades. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
3. **Charging:** Recharge the clipper when the LCD display indicates a low battery percentage. Avoid completely draining the battery to prolong its lifespan.

4. **Storage:** Store the clipper in a dry, cool place, away from direct sunlight and moisture. Keep it out of reach of children.

7. Troubleshooting

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully using the USB cable.
Clipper pulls hair or cuts poorly.	Blades are dull or clogged with hair/debris. Blades need oiling.	Clean the blades thoroughly and apply blade oil. If problem persists, consider professional sharpening or blade replacement.
Clipper makes unusual noise.	Blades are not properly aligned or need oiling.	Ensure blades are clean and oiled. Check for any loose parts.
LCD display is not working.	Battery is completely dead or a malfunction.	Attempt to charge the clipper. If it still doesn't work, contact customer support.

8. Specifications

Feature	Detail
Product Dimensions	6.1 x 1.77 x 1.38 inches
Item Model Number	KM-2269/2288
Batteries	1 Lithium Ion battery (included)
Manufacturer	KEMEI
Item Weight	253 Grams (8.92 ounces)
Power Source	Battery Powered
Charging Time	Approx. 120 minutes
Run Time	Up to 120 minutes
Blade Type	Adjustable Precision T-blade
Limit Combs	1mm, 2mm, 3mm, 4mm
Display	LCD Digital Display (Battery Percentage, Reminders)

9. Warranty and Support

KEMEI products are manufactured to high-quality standards. For specific warranty details and terms, please refer to the warranty card included with your product or visit the official KEMEI website. If you encounter any issues or require technical assistance, please contact KEMEI customer support through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

For more information, visit the [KEMEI Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DG28VP2M>

More documents and user manuals: <https://manuals.plus/>