

[Manuals.plus](#) /

› [ODK](#) /

› ODK Computer Desk with 4 Fabric Drawers - Assembly and Care Manual

ODK DBSC-1

ODK Computer Desk with 4 Fabric Drawers

Model: DBSC-1

1. INTRODUCTION

Thank you for choosing the ODK Computer Desk with 4 Fabric Drawers. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your new desk. This versatile desk is designed for home office, study, or gaming use, offering a compact footprint with ample storage.



4-stufige Stoffschubladen

Geräumiger Stauraum für Ordnung Praktisches Design sorgt für Ordnung



Image 1.1: The ODK Computer Desk in a typical setup, showcasing its modern design and functionality.

2. SAFETY INFORMATION

Please read and understand all safety information before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Weight Capacity:** While designed for daily use, avoid placing excessively heavy objects or devices on the desk to prevent compromising stability. Distribute weight evenly across the desktop.
- **Stable Surface:** Always use the desk on a flat, level, and stable surface to prevent tilting or wobbling.
- **Assembly:** Ensure all components are securely fastened according to the assembly instructions. Do not overtighten screws.
- **Children:** Keep small parts and packaging materials away from children during assembly to prevent choking hazards.
- **Maintenance:** Regularly check all connections and tighten if necessary to maintain structural integrity.

3. PARTS LIST

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Part	Description	Quantity
A	Desktop Panel	1
B	Frame Legs (Left)	2
C	Frame Legs (Right)	2
D	Crossbars	2
E	Fabric Drawers	4
F	Headphone Hook	1
G	Adjustable Foot Pads	4
H	Assembly Hardware (Screws, Allen Wrench)	1 Set

4. SETUP AND ASSEMBLY

Assembly is quick and easy, typically taking about 20 minutes. All necessary tools are included. Follow these steps carefully:

- Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches. Verify against the parts list.
- Assemble Frame:** Attach the frame legs (B, C) to the crossbars (D) using the provided hardware (H). Ensure all connections are snug but do not overtighten.
- Attach Desktop:** Secure the desktop panel (A) to the assembled frame using the remaining hardware.
- Install Foot Pads:** Screw the adjustable foot pads (G) into the bottom of the frame legs. Adjust them to ensure the desk is level and stable.
- Insert Drawers:** Fold and insert the fabric drawers (E) into their designated slots.
- Attach Headphone Hook:** Clip the headphone hook (F) to the desired side of the desk frame.

Reversible Design: The drawer unit can be installed on either the left or right side of the desk during assembly, allowing you to customize the layout to fit your space and needs.



Kopfhörerhaken



Image 4.1: Illustration of the reversible design, demonstrating how the drawer unit can be positioned on either side of the desk.

5. OPERATING INSTRUCTIONS

Your ODK Computer Desk is designed for versatile use in various settings.

- **Work Surface:** The spacious desktop provides ample room for a computer, monitor, keyboard, and other work essentials.
- **Fabric Drawers:** Utilize the four fabric drawers for organized storage of documents, stationery, accessories, and other personal items. The drawers are easy to access and help keep your workspace tidy.



Dimension



Image 5.1: The four fabric drawers offer convenient storage for office supplies and personal belongings.

- **Headphone Hook:** The integrated headphone hook provides a convenient place to hang your headphones, keeping them within reach and off the desktop.



Image 5.2: The headphone hook keeps your audio gear organized and easily accessible.

6. CARE AND MAINTENANCE

Proper care will extend the life and appearance of your ODK Computer Desk.

- **Cleaning the Desktop:** Wipe the desktop with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they may damage the painted finish. Dry immediately with a clean cloth.
- **Cleaning Fabric Drawers:** The fabric drawers are easy to clean. Spot clean with a mild detergent and damp cloth as needed. Allow to air dry completely.
- **Spills:** Wipe up spills immediately to prevent staining or water damage to the wood surface.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight may cause fading or discoloration.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your ODK Computer Desk, please refer to the following common solutions:

- **Desk is Wobbly:**
 - Ensure all screws are tightened securely.
 - Adjust the foot pads on the bottom of the legs to level the desk on uneven floors.
- **Drawers Not Sliding Smoothly:**
 - Check that the fabric drawers are correctly inserted and not overloaded.
 - Ensure no obstructions are preventing smooth movement.
- **Missing Parts or Damaged Components:**
 - If you find any parts missing or damaged upon unpacking, please do not proceed with assembly. Contact ODK customer support immediately for assistance.

8. SPECIFICATIONS

Detailed technical specifications for the ODK Computer Desk (Model DBSC-1).

Feature	Detail
Brand	ODK
Model Number	DBSC-1
UPC	850065069517
Dimensions (L x W x H)	120 cm x 48 cm x 75.7 cm
Color	Black
Material	P2 Grade Engineered Wood, Steel Frame
Finish Type	Painted
Number of Drawers	4 (Fabric)
Special Features	Headphone Hook, Reversible Design, Adjustable Foot Pads, Scratch-resistant, Water-resistant
Item Weight	11.1 kg
Assembly Required	Yes (Approx. 20 minutes, 1 person recommended)
Included Components	Headphone clip, Assembly tools



Umkehrbares Design

Das Regal unter der Schreibtischplatte kann je nach Bedarf links oder rechts angebracht werden.



Image 8.1: Detailed dimensions of the ODK Computer Desk.

9. WARRANTY AND SUPPORT

ODK provides a limited warranty for this product. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact ODK customer support.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact ODK customer support through the retailer where you purchased the product or visit the official ODK website for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question