

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FiveWillowise](#) /
- › [FiveWillowise Farmhouse Lift Top Coffee Table Instruction Manual](#)

FiveWillowise B0DG2CCTBK

FiveWillowise Farmhouse Lift Top Coffee Table Instruction Manual

Model: B0DG2CCTBK

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FiveWillowise 31.5"W Farmhouse Lift Top Coffee Table. Please read this manual thoroughly before beginning assembly and retain it for future reference. Proper assembly and care will ensure the longevity and optimal performance of your coffee table.



Image: The FiveWillowise Farmhouse Lift Top Coffee Table, featuring a white base with barn door design and a black lift-top, shown in a living room with the top partially raised for laptop use.

PRODUCT FEATURES

- **Farmhouse Style:** Combines flip-top and lift-type desktops for versatility, featuring classic farm barn shape design and metal corner decoration for a retro aesthetic.
- **Safe Lifting Device:** Equipped with a hydraulic lifting device that provides a buffering effect, allowing smooth height adjustment and ensuring stability and safety during use.
- **Space Saving Storage:** Features hidden storage space for books, blankets, and other daily items, helping to keep your living area clean and organized.
- **Practical Power Outlets:** Includes convenient power outlets and USB ports on the side for easy charging of devices.
- **Easy Assembly:** Comes with spare screws, detailed assembly instructions, clear labels, and pre-drilled holes for straightforward installation.

SETUP AND ASSEMBLY

Before beginning assembly, ensure all parts and hardware are present. Refer to the included assembly instructions for detailed, step-by-step guidance. It is recommended to assemble the table on a soft, clean surface to prevent scratches.

Package Contents Checklist:

- Table Panels (Top, Side, Bottom)
- Lift Mechanism Components
- Charging Station Unit
- Legs/Base Supports
- Hardware Pack (screws, dowels, cam locks, etc.)
- Assembly Instructions Manual
- Tools (if included, otherwise a screwdriver is recommended)

General Assembly Steps:

1. Unpack all components and verify against the parts list.
2. Attach the base supports to the bottom panel.
3. Assemble the side panels to the bottom panel, ensuring proper alignment with pre-drilled holes.
4. Install the lift mechanism components according to the diagrams.
5. Attach the lift-top panels to the lift mechanism.
6. Secure the charging station unit into its designated slot on the side panel.
7. Tighten all screws and connections.
8. Place the table in its desired location.

Product Dimension



Image: Product Dimension diagram, illustrating the overall size of the coffee table (31.5"W x 31.5"D x 18.5"H) and the lift-top's range of motion.

OPERATING INSTRUCTIONS

Using the Lift-Top Mechanism:


The coffee table features a smooth and safe hydraulic lift mechanism. To raise the tabletop, gently pull upwards on the front edge of the lift-top section. The hydraulic arms will assist in lifting and holding the top in place. To lower, gently push down on the lift-top, allowing the hydraulic arms to slowly guide it back into the closed position. Ensure no objects are obstructing the mechanism during operation.

LIFT-TOP DESIGN

According to your needs, you can adjust the placement of the lifting desktop



1

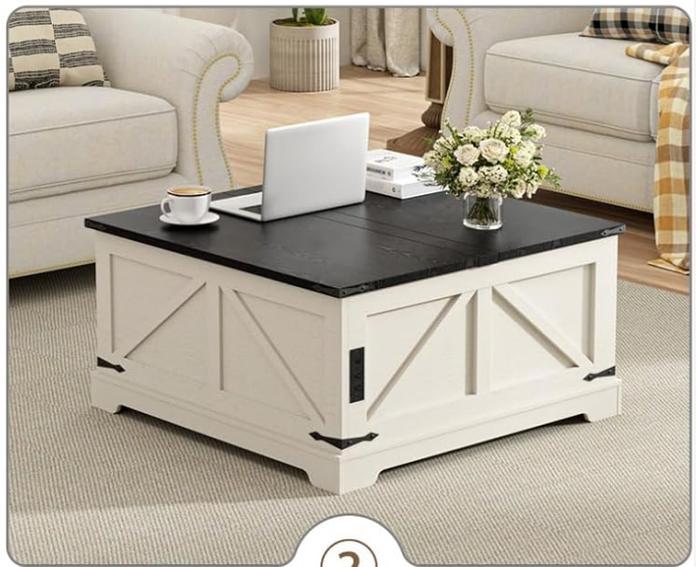

2


Image: Lift-Top Design, showing the table in both open and closed configurations, highlighting its adjustable functionality.



Image: Smooth and Safe Lifting Mechanism, detailing the hydraulic piston and robust hinges that ensure stable and controlled movement of the tabletop.

Utilizing the Charging Station:

The integrated charging station provides convenient access to power. Simply plug the table's power cord into a standard wall outlet. The station includes two 125V/12A AC outlets and two 5V/2A USB ports. Connect your electronic devices to these ports for charging. Always ensure the power cord is not pinched or damaged.

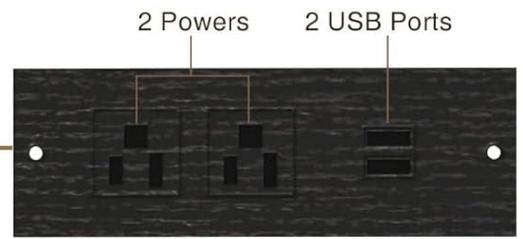

Upgraded Charging Stations



125V/12A
[AC Outlets*2]



5V/2A
[USB Ports*2]

Image: Upgraded Charging Stations, illustrating the two AC outlets and two USB ports built into the side of the table for convenient device charging.

Charge at any Time

Enjoy Afternoon Tea Time



Image: Charge at any Time, showing a smartphone being charged directly from the table's power outlet, emphasizing convenience.

Accessing Hidden Storage:

Beneath the lift-top section, there is ample hidden storage space. To access it, simply lift the tabletop. This area is ideal for storing blankets, books, remote controls, and other items to keep your living space tidy and clutter-free.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the table surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or damage to the engineered wood.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters for drinks to protect against moisture rings.
- **Mechanism Care:** Periodically check the lift mechanism and hinges for any loose screws. Tighten as necessary. Do not apply excessive force when operating the lift-top.

- **Charging Station:** Ensure the charging station is kept dry. Do not expose it to liquids.



Image: Detailed view of the table's construction, including the Retro Black Thickened Top Plate, Farmhouse Barn Door Design, Thickened Arched Support Base, and Protective Feet Pads, highlighting material and design quality.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|--|
| Lift-top is stiff or not moving smoothly. | Obstruction in the mechanism; loose screws; mechanism needs lubrication. | Check for and remove any obstructions. Ensure all screws on the lift mechanism are tightened. If necessary, apply a small amount of silicone lubricant to moving parts (avoiding wood surfaces). |

| Problem | Possible Cause | Solution |
|----------------------------------|--|---|
| Charging station is not working. | Power cord not plugged in; wall outlet issue; device not compatible; charging station malfunction. | Ensure the table's power cord is securely plugged into a working wall outlet. Test the wall outlet with another device. Verify your device is compatible with the provided voltage/amperage. If issues persist, contact customer support. |
| Table wobbles or is unstable. | Loose assembly screws; uneven floor. | Check and tighten all assembly screws. Ensure the table is placed on a flat, level surface. Use furniture pads if necessary to level the table on uneven floors. |

PRODUCT SPECIFICATIONS

| Attribute | Detail |
|-------------------------------|-------------------------------------|
| Brand | FiveWillowise |
| Model Number | B0DG2CCTBK |
| Product Dimensions | 31.5"D x 31.5"W x 18.5"H |
| Item Weight | 69.5 Pounds |
| Maximum Weight Recommendation | 31.5 Kilograms |
| Color | White (Base), Black (Top) |
| Material Type | Engineered Wood |
| Table Design | Coffee Table (Lift Top) |
| Included Components | Spare screws, assembly instructions |
| Power Outlets | 2 x 125V/12A AC Outlets |
| USB Ports | 2 x 5V/2A USB Ports |
| Shape | Square |
| Indoor/Outdoor Usage | Indoor |

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your FiveWillowise coffee table, please contact our customer service team. We are committed to providing thoughtful customer service and will assist you promptly.

Please refer to your purchase documentation for specific warranty details. Keep your proof of purchase for any warranty claims.

Contact Information:

Brand: FiveWillowise

Website: [Visit the FiveWillowise Store on Amazon](#)

Customer Service: Refer to your purchase platform or included documentation for direct contact methods.



© 2023 FiveWillowise. All rights reserved.