

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [msi](#) /

› [MSI Thin 15 Gaming Laptop User Manual \(i5-13420H, RTX 3050\)](#)

**msi MSI Thin 15 (i5-13420H)**

# MSI Thin 15 Gaming Laptop User Manual

Model: MSI Thin 15 (i5-13420H, RTX 3050)

## INTRODUCTION

---

This manual provides essential information for setting up, operating, and maintaining your MSI Thin 15 Gaming Laptop. Please read this manual thoroughly before using the device to ensure proper function and longevity.

## SETUP

---

### Unpacking

Carefully remove the laptop and all accessories from the packaging. Ensure all components are present:

- MSI Thin 15 Gaming Laptop
- Power Adapter and Cable
- User Manual (this document)
- Warranty Card



Image: Front view of the MSI Thin 15 Gaming Laptop with its display active, showcasing the MSI logo and a vibrant background.

## Connecting Power

Connect the power adapter to the laptop's power input port and then plug the power cable into an electrical outlet. The laptop can be used while charging.



Image: Side view of the MSI Thin 15 Gaming Laptop, illustrating the various ports available for connectivity.

## Initial Boot-up

Press the power button to turn on the laptop. Follow the on-screen instructions to complete the Windows 11 initial setup, including language selection, network connection, and user account creation.

## OPERATING YOUR LAPTOP

---

### Keyboard and Touchpad

The laptop features a backlit keyboard and a precision touchpad. Refer to the image below for key layout.



Image: Top-down view of the MSI Thin 15 Gaming Laptop's keyboard, highlighting the backlit keys and touchpad.

- **Function Keys:** Utilize the Fn key in combination with F1-F12 for quick access to system functions like volume control, brightness adjustment, and keyboard backlight settings.
- **Touchpad Gestures:** Supports multi-touch gestures for navigation. Consult Windows settings for customization.

## Connecting External Devices

The laptop provides various ports for connecting peripherals:

- **USB-A 3.2 (x3):** For connecting USB devices such as mice, keyboards, and external storage.
- **Type-C 3.2 (x1):** For data transfer and compatible Type-C accessories.
- **HDMI (x1):** Connects to external displays (supports up to 4K @ 30Hz).
- **RJ45 Ethernet (x1):** For wired network connections.



Image: Close-up view of the side ports on the MSI Thin 15 Gaming Laptop, including USB and HDMI connections.

## Audio Features

This laptop supports Hi-Res Audio and DTS Audio for an enhanced sound experience. Connect headphones or external speakers to the audio jack for private listening or amplified sound.

## MAINTENANCE

---

### Cleaning

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals.
- **Keyboard and Chassis:** Use a soft cloth to wipe surfaces. A can of compressed air can remove dust from between keys.

### Battery Care

To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.
- Calibrate the battery periodically (check MSI support for specific instructions).

### Software Updates

Regularly update your operating system (Windows 11) and device drivers (especially graphics drivers) to ensure optimal performance and security. Visit the official MSI website for the latest drivers.

## TROUBLESHOOTING

---

### Common Issues and Solutions

- **Laptop does not power on:**

- Ensure the power adapter is securely connected to both the laptop and the power outlet.
- Verify the power outlet is functional.
- Try holding the power button for 15-20 seconds to perform a hard reset.

- **Screen is blank:**

- Check if the laptop is powered on.
- Press Fn + F2 (or the appropriate function key for display toggle) to ensure the display is not turned off.
- Connect an external monitor via HDMI to check if the issue is with the laptop's display.

- **Poor performance:**

- Close unnecessary applications running in the background.
- Ensure Windows and graphics drivers are up to date.
- Check for malware or viruses.
- Monitor system temperatures; excessive heat can cause throttling.

- **Battery not charging:**

- Verify the power adapter and cable are not damaged.
- Ensure the power adapter is correctly plugged in.
- Check battery health in Windows settings.

For further assistance, refer to the MSI support website or contact customer service.

## SPECIFICATIONS

Component	Detail
Model Name	MSI Thin 15
Processor	13th Gen Intel 8-core i5-13420H
Graphics	NVIDIA GeForce RTX 3050 4GB Dedicated
Display	15.6" FHD (1920 x 1080) IPS 144Hz
RAM	16GB DDR4
Storage	1TB SSD
Operating System	Windows 11 Home
Ports	3x USB-A 3.2, 1x Type-C 3.2, 1x HDMI (4K @ 30Hz), 1x RJ45 Ethernet
Wireless	Bluetooth
Battery	3-cell 52Wh
Dimensions (LxWxH)	9.99" x 14.13" x 0.85"
Weight	4.1 lbs
Special Features	Backlit Keyboard, Hi-Res Audio, DTS Audio, HD Webcam

Component	Detail
-----------	--------

## WARRANTY AND SUPPORT

---

Your MSI Thin 15 Gaming Laptop comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details. For technical support, driver downloads, and additional resources, please visit the official MSI support website:

[MSI Official Support](#)

When contacting support, please have your laptop's serial number and proof of purchase readily available.