

ZJchao ZJchao7fgh5ex1ay-11

ZJchao Kids Cartoon Cat Digital Alarm Clock User Manual

Brand: ZJchao | Model: ZJchao7fgh5ex1ay-11

1. INTRODUCTION

Thank you for choosing the ZJchao Kids Cartoon Cat Digital Alarm Clock. This device is designed to assist children with sleep training, provide a comforting night light, and offer precise timekeeping in a fun, cat-shaped design. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: Front view of the ZJchao Kids Cartoon Cat Digital Alarm Clock, displaying the time and temperature, along with icons representing its key features.

2. SAFETY INFORMATION

- Keep the device away from water and moisture.
- Do not expose to extreme temperatures or direct sunlight.
- Use only the provided USB cable for power.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if issues arise.
- Ensure the device is placed on a stable surface to prevent falling.

- This product is not a toy. Adult supervision is recommended for young children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x ZJchao Kids Cartoon Cat Digital Alarm Clock
- 1 x USB Cable
- 1 x Instruction Manual (this document)



Image: The ZJchao Kids Cartoon Cat Digital Alarm Clock shown alongside its USB charging cable.

4. PRODUCT FEATURES

The ZJchao Kids Cartoon Cat Digital Alarm Clock offers several features designed for children's comfort and development:

- **Comforting Night Light:** Provides a soft glow to help children feel secure and relaxed.
- **Soothing Sleep Aid:** Designed to calm and improve overall sleep quality.

- **Precise Digital Display:** Ensures accurate timekeeping and helps children learn time management.
- **Cute Cartoon Cat Design:** An appealing and playful design that captures children's attention.
- **Gentle Wake-up Alarm:** Adjustable alarm sounds for a consistent and pleasant wake-up routine.
- **Temperature Display:** Shows the ambient room temperature.
- **Snooze Function:** Allows for a short delay before the alarm sounds again.
- **Multi-colored Night Light:** Offers a variety of light options.
- **Music Alarm:** Option to wake up to music.
- **Interactive Expressions:** The digital display can show different facial expressions.

Sleeping Lights

A variety of lights to choose from to help you fall asleep before bedtime.

Change of expression

3 kinds of expression more realistic children's best partner

Time/Temperature

Temperature to give you a comfortable environment to accompany the healthy growth of children



Image: Detailed view of the alarm clock, pointing out features like sleeping lights, changing expressions, and time/temperature display.

5. SETUP

1. **Unpack:** Carefully remove the alarm clock and all accessories from the packaging.
2. **Power Connection:** Connect the provided USB cable to the DC 5V port on the back of the alarm clock. Plug the other end into a compatible USB power adapter (not included) or a USB port.
3. **Initial Power On:** The clock will power on automatically once connected to a power source. The display will illuminate.
4. **Placement:** Place the alarm clock on a stable, flat surface in the desired location.



Image: The bottom of the alarm clock, illustrating the power input port.

6. OPERATING INSTRUCTIONS

The alarm clock features several buttons on its back for various functions. Refer to the image below for button identification.



Image: Rear view of the alarm clock, showing the control panel with various function buttons.

6.1. Setting the Time

1. Press and hold the **TIME** button until the hour display starts flashing.
2. Use the **UP** and **DOWN** arrow buttons to adjust the hour.
3. Press the **TIME** button again to switch to minute adjustment.
4. Use the **UP** and **DOWN** arrow buttons to adjust the minutes.
5. Press the **TIME** button once more to confirm and exit time setting.

6.2. Setting the Alarm

1. Press and hold the **ALARM** button until the alarm hour display starts flashing.
2. Use the **UP** and **DOWN** arrow buttons to set the desired alarm hour.
3. Press the **ALARM** button again to switch to alarm minute adjustment.
4. Use the **UP** and **DOWN** arrow buttons to set the desired alarm minutes.
5. Press the **ALARM** button once more to confirm and exit alarm setting.
6. To activate/deactivate the alarm, short press the **ALARM** button. An alarm icon will appear/disappear on the display.

6.3. Adjusting Night Light

- Short press the **LIGHT** button to cycle through different night light colors or brightness levels.
- Press and hold the **LIGHT** button to turn the night light off.

6.4. Snooze Function

When the alarm sounds, press the large button on top of the clock (or the **NAP** button if available) to activate the snooze function. The alarm will pause for a few minutes and then sound again.

6.5. Sound Settings

- Short press the **SOUND** button to cycle through available alarm sounds or music options.
- Use the **UP** and **DOWN** arrow buttons to adjust the volume.

6.6. Temperature Display

The clock automatically displays the ambient temperature. There might be a button (often combined with TIME or a dedicated button) to switch between Celsius (°C) and Fahrenheit (°F). Refer to the specific instructions on the physical manual if this option is not immediately apparent.

7. MAINTENANCE

- **Cleaning:** Wipe the surface of the alarm clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing for an extended period, disconnect from power and keep in a cool, dry place.
- **Avoid Impact:** Protect the device from drops or strong impacts.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not power on.	Not connected to power, or power adapter faulty.	Ensure USB cable is securely connected and power adapter is working. Try a different USB port or adapter.
Alarm does not sound.	Alarm not activated, or volume too low.	Check if the alarm icon is displayed. Adjust alarm volume using the SOUND button and UP/DOWN arrows.
Display is dim or flickering.	Insufficient power, or device malfunction.	Ensure stable power supply. If problem persists, contact customer support.
Time is incorrect.	Time not set correctly after power loss or initial setup.	Follow the "Setting the Time" instructions to reset the current time.

9. SPECIFICATIONS

- **Brand:** ZJchao
- **Model Number:** ZJchao7fgh5ex1ay-11
- **Item Type:** Cartoon Cat Alarm Clock
- **Material:** Plastic, Electronic Components
- **Color:** Pink
- **Display Type:** Digital
- **Product Dimensions:** Approximately 5.11"W x 3.93"H (13cm height)
- **Power Source:** AC/DC (via USB cable)
- **Batteries Included:** No

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact the retailer/manufacturer directly. You can visit the official ZJchao store on Amazon for more information: [ZJchao Store](#).

© 2026 ZJchao. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question