

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CLEANmaxx](#) /
- › [CLEANmaxx Pro Automatic Shirt Ironer with Trouser Attachment User Manual](#)

## CLEANmaxx 14907

# CLEANmaxx Pro Automatic Shirt Ironer with Trouser Attachment User Manual

Model: CLEANmaxx 14907

## 1. INTRODUCTION

---

The CLEANmaxx Pro Automatic Shirt Ironer with Trouser Attachment is designed to simplify garment care by automatically drying and smoothing shirts, blouses, T-shirts, sweaters, and trousers. This appliance utilizes intelligent hot air technology to deliver wrinkle-free results efficiently, replacing traditional ironing and steaming methods. Please read this manual thoroughly before initial use to ensure safe and optimal operation.



Image 1.1: The CLEANmaxx Pro Automatic Shirt Ironer with both shirt and trouser attachments in use.

## 2. SAFETY INSTRUCTIONS

---

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not operate the appliance with wet hands or near water.
- Keep children and pets away from the appliance during operation.
- Do not cover the air vents during operation to prevent overheating.
- Unplug the appliance from the power outlet when not in use or before cleaning.
- Do not use the appliance for fabrics not suitable for tumble drying or delicate materials like wool, which may shrink

or be damaged by heat.

- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

### 3. PACKAGE CONTENTS

---

Please check that all items are present and in good condition:

- 1x CLEANmaxx Pro Base Unit
- 1x Shirt Attachment (inflatable body with telescopic rod)
- 1x Trouser Attachment
- 5x Weight Clips

### 4. PRODUCT COMPONENTS

---

Familiarize yourself with the main parts of your CLEANmaxx Pro:

- **Base Unit:** Contains the motor, heating element, and control dial.
- **Inflatable Body (Shirt/Blouse):** The main form for drying and smoothing upper garments.
- **Telescopic Rod:** Adjustable rod within the inflatable body to accommodate different garment lengths.
- **Trouser Attachment:** Separate inflatable forms for drying and smoothing trousers.
- **Control Dial:** Used to set the operating time (5 to 30 minutes).
- **Weight Clips:** Used to secure the garment hem and ensure optimal smoothing.



Image 4.1: Internal view of the CLEANmaxx Pro, illustrating the inflatable body and base unit connection.

## 5. SETUP

---

### 5.1 Assembling the Shirt Attachment

1. Place the base unit on a flat, stable surface.
2. Attach the inflatable shirt body onto the base unit, ensuring it is securely fitted.
3. Adjust the telescopic rod inside the inflatable body to the desired height, suitable for your garment. The zipper extension allows for various sizes from S to XXL.

### 5.2 Assembling the Trouser Attachment

1. Remove the shirt attachment from the base unit.
2. Attach the trouser attachment to the base unit, ensuring a firm connection.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Preparing Garments

- Ensure garments are freshly washed and spin-dried (damp, not dripping wet).
- Check the garment's care label to confirm it is suitable for tumble drying.
- Button up shirts and blouses before placing them on the attachment.

### 6.2 Using for Shirts and Blouses

1. Carefully pull the damp shirt or blouse over the inflatable body.
2. Adjust the garment to fit smoothly over the form.
3. Attach the 5 weight clips evenly around the hem of the garment to keep it taut.
4. Plug the appliance into a suitable power outlet.
5. Set the desired operating time using the control dial (typically 5-30 minutes, with approximately 10 minutes for optimal results).
6. The appliance will start, inflating the body and emitting hot air to dry and smooth the garment.
7. Once the timer finishes, the appliance will switch off automatically. Allow the garment to cool slightly before removing.

### 6.3 Using for Trousers



Image 6.1: The CLEANmaxx Pro with trouser attachment, demonstrating its use for drying and smoothing trousers.

1. Ensure the trouser attachment is securely installed on the base unit.
2. Carefully pull the damp trousers over the two inflatable trouser forms.
3. Attach the weight clips evenly around the trouser hems to keep them taut.
4. Plug the appliance into a suitable power outlet.
5. Set the desired operating time using the control dial (typically 5-30 minutes).
6. The appliance will start, inflating the forms and emitting hot air to dry and smooth the trousers.
7. Once the timer finishes, the appliance will switch off automatically. Allow the garment to cool slightly before removing.



Image 6.2: Visual representation of the approximate 10-minute drying and smoothing process.

## 7. SUITABLE AND UNSUITABLE FABRICS

---

### 7.1 Suitable Fabrics

The CLEANmaxx Pro is suitable for tumble-dryer-safe textiles such as:

- Cotton
- Linen
- Polyester
- Jeans
- Silk (if tumble-dryer safe)
- Viscose (if tumble-dryer safe)

## 7.2 Unsuitable Fabrics

Do not use the appliance for delicate textiles that are not suitable for tumble drying or may be damaged by heat, such as:

- Wool
- Very fine lace
- Garments with delicate embellishments



Image 7.1: Examples of various fabric types, highlighting the versatility of the CLEANmaxx Pro for different materials.

## 8. MAINTENANCE AND CARE

---

- Always unplug the appliance before cleaning.
- Wipe the base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- The inflatable attachments can be wiped clean with a damp cloth if necessary. Ensure they are completely dry before storage.

- Store the appliance in a cool, dry place away from direct sunlight when not in use.



Image 8.1: The CLEANmaxx Pro base unit stored compactly in a cabinet.

## 9. TROUBLESHOOTING

| Problem                               | Possible Cause  | Solution  |
|---------------------------------------|---|---|
| Appliance does not turn on.           | Not plugged in; power outage; timer not set.            | Check power connection; verify power supply; set timer.                         |
| Garments are not fully dry or smooth. | Insufficient drying time; garment too wet; fabric type. | Increase drying time; ensure garment is spin-dried; check fabric compatibility. |

| Problem                                       | Possible Cause                    | Solution   |
|---|-----------------------------------|--|
| Appliance overheats or shuts off prematurely. | Air vents blocked; prolonged use. | Ensure air vents are clear; allow appliance to cool down between uses. |

## 10. SPECIFICATIONS

---

| Feature                | Detail                                   |
|------------------------|--|
| Brand                  | CLEANmaxx                                |
| Model Number           | 14907                                    |
| Power                  | 1800 Watts                               |
| Voltage                | 230 Volts                                |
| Dimensions (L x W x H) | 38.5 x 16.2 x 100 cm                     |
| Weight                 | 4.72 Kilograms                           |
| Material               | Stainless Steel (Base)                   |
| Special Feature        | Automatic Ironer with Hot Air Technology |
| Country of Origin      | China                                    |

