



Manuals.plus /

- › SEANCHEER /
- › SEANCHEER R1 TikTok Scrolling Remote Control User Manual

SEANCHEER R1

SEANCHEER R1 TikTok Scrolling Remote Control User Manual

Model: R1 | Brand: SEANCHEER

1. PRODUCT OVERVIEW

The SEANCHEER R1 is a versatile Bluetooth remote control designed to enhance your smartphone experience. It functions as a TikTok scrolling remote, an eBook page turner, and a camera shutter controller. Its compact design allows for convenient use and portability.



Image: The SEANCHEER R1 remote control shown alongside a smartphone displaying a TikTok video, illustrating its primary use.

2. PACKAGE CONTENTS

- 1 x SEANCHEER R1 Remote Control
- 1 x USB-C Charging Cable

3. SETUP

3.1 Charging the Device

Before initial use, ensure the remote control is fully charged. Connect the provided USB-C cable to the remote and a power source. A full charge typically takes 3-5 hours.

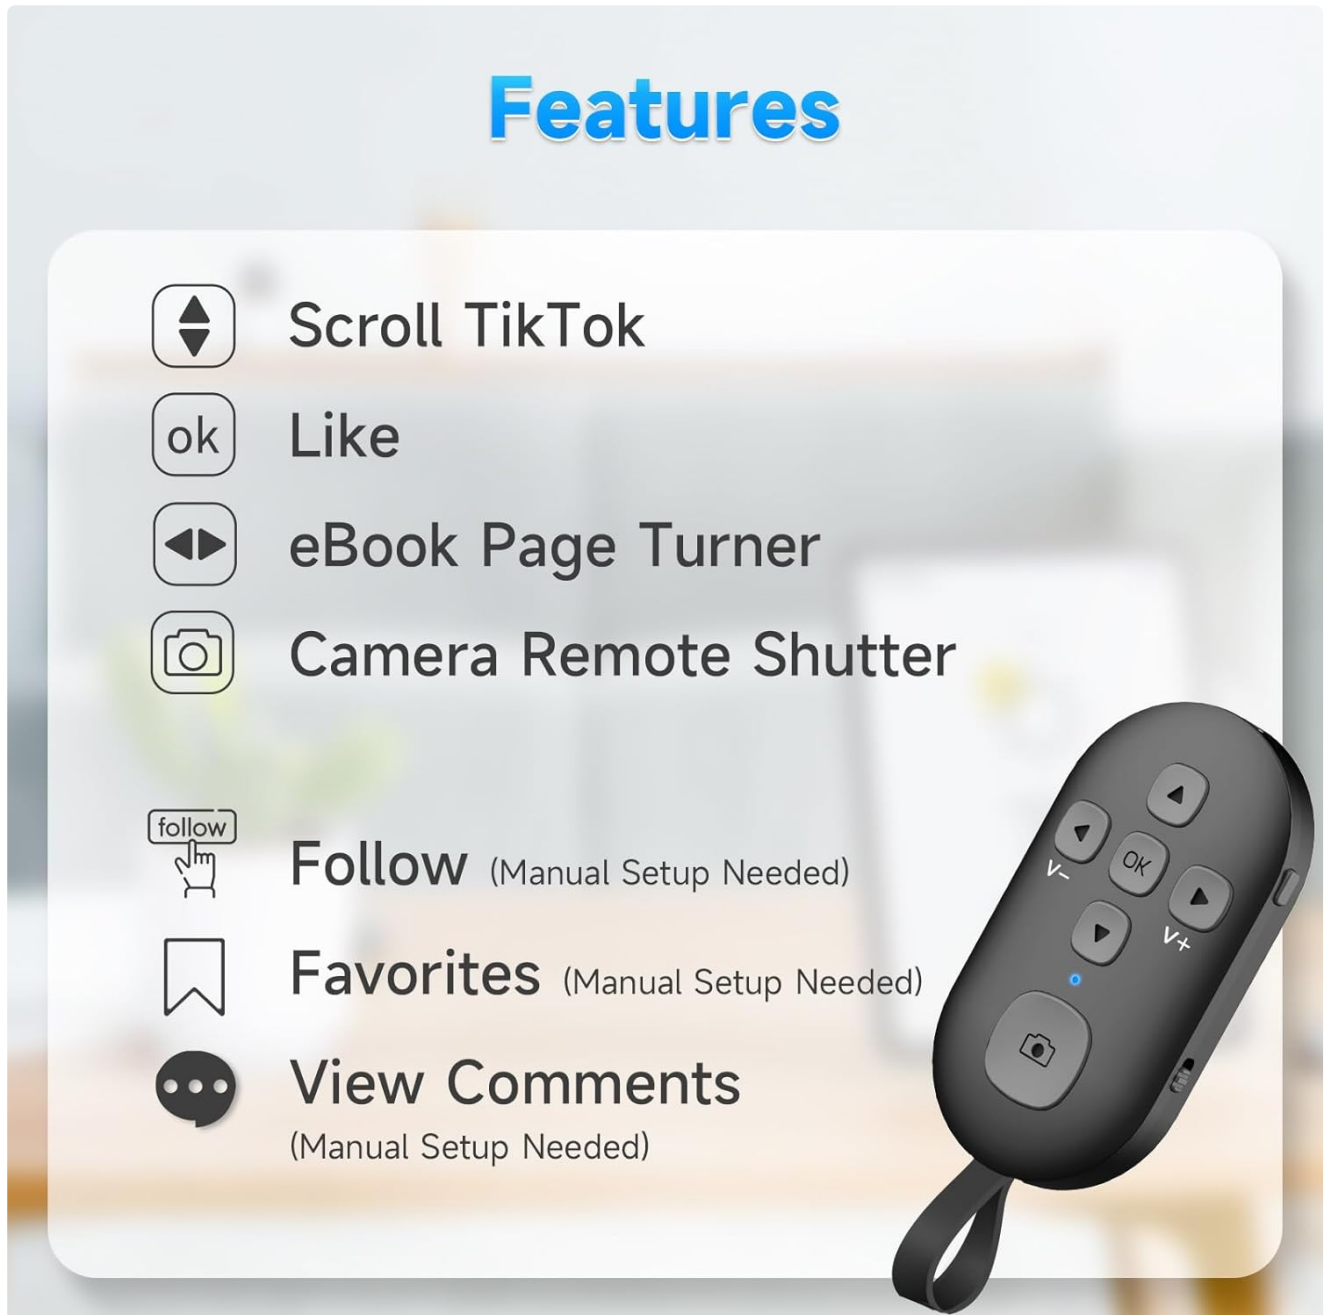


Image: A hand plugging a USB-C cable into the charging port of the R1 remote control.

3.2 Bluetooth Pairing

To connect the R1 remote control to your smartphone, follow these steps:

1. Ensure your phone's Bluetooth is enabled.
2. Turn on the SEANCHEER R1 remote control using the side switch. The indicator light will flash, indicating it's in pairing mode.
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "Beauty R1" from the list of devices to pair. Confirm the pairing request if prompted.
5. Once connected, the indicator light on the remote will turn solid blue.

For iOS devices, it is recommended to turn on screen orientation lock and enable AssistiveTouch for optimal functionality. Navigate to Settings > Accessibility > Touch > AssistiveTouch and toggle it ON.

Best Gift for Friends



Image: A smartphone displaying its Bluetooth settings, showing 'Beauty-R1' as a discoverable device, next to the R1 remote control.

Your browser does not support the video tag.

Video: An official product video demonstrating the setup process, including iOS settings and Bluetooth pairing, and basic operation of the SEANCHEER R1 remote control.

4. OPERATING INSTRUCTIONS

The SEANCHEER R1 remote control offers multiple functionalities for various applications:

4.1 TikTok Scrolling

Use the up and down arrow buttons to scroll through TikTok videos. This allows for hands-free browsing of your feed.

TikTok Remote Control



Image: A person using the R1 remote control to scroll through TikTok videos on a smartphone, demonstrating hands-free operation.

4.2 Liking Videos

Double-tap the 'OK' button to like a video on TikTok.

4.3 eBook Page Turner

For eBook reading, use the left and right arrow buttons to turn pages. This feature is compatible with most eBook and comics apps such as Libby, Kindle app, Google Play Books, Kobo Books, WEBTOON, and Tapas.

Compatible eBook Apps



Image: The R1 remote control shown with a list of compatible eBook applications, highlighting its use as a page turner.

4.4 Camera Shutter Controller

Press the camera icon button to remotely trigger your smartphone's camera shutter for photos and videos. This is ideal for selfies and group photos, offering a range of up to 32.8 feet.



Image: The R1 remote control positioned in the foreground, with a smartphone on a tripod in the background capturing a group photo, emphasizing its 32.8ft maximum range for camera control.

4.5 Volume Control

Use the 'V-' and 'V+' buttons to adjust the volume on your connected smartphone.

4.6 Advanced Features (Manual Setup Required)

Certain functions like 'Follow', 'Favorites', and 'View Comments' may require manual setup within your phone's accessibility settings. Refer to your phone's specific accessibility options for custom gesture configurations.



Image: A graphic illustrating the various features of the R1 remote, including TikTok scrolling, liking, eBook page turning, camera shutter, and advanced functions requiring manual setup.

5. COMPATIBILITY AND LIMITATIONS

5.1 Compatible Devices

- iPhone (iOS)
- Android Smartphones

5.2 Incompatible Devices and Applications

Please note the following limitations:

- **Devices:** Not compatible with Kindle devices, iPads, or other tablets.
- **Operating Systems:** Does NOT support beta versions of iOS or Android.
- **Music Streaming Apps:** Not compatible with Spotify, YouTube Music, Samsung Music, Apple Music, Amazon Music, SoundCloud, Wynk Music, JioSaavn, Gaana, Pandora, etc.
- **Audiobook Apps:** Does not support Audible, AudiobookBay, Local AudioBooks Player, Storytel, Smart Audiobook Player, Hoopla, Wattpad, Scribd, etc.
- **TikTok App:** Does not support the recording of photos or videos within the TikTok app.



Image: A visual representation of applications and device types that are not compatible with the R1 remote control, including various music and audiobook apps.

6. MAINTENANCE

To ensure the longevity and optimal performance of your SEANCHEER R1 remote control:

- Keep the device clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.
- Store the remote in a cool, dry place when not in use.

7. TROUBLESHOOTING

If you encounter issues with your SEANCHEER R1 remote control, consider the following:

7.1 Device Not Responding / Connection Issues

- **Low Battery:** The remote may arrive with low battery power due to extended shipping times. Ensure a full 3-5 hour charge prior to initial use.
- **Re-pairing:** Turn the remote off and on again, then attempt to re-pair it with your smartphone via Bluetooth settings.
- **Bluetooth Interference:** Ensure no other Bluetooth devices are causing interference. Try pairing in a different location.
- **Phone Settings:** For iOS, verify that AssistiveTouch is enabled in Accessibility settings.

7.2 Incorrect Button Functionality (e.g., Left/Right buttons both scroll left)

- **Re-pair Device:** Disconnect and re-pair the remote with your phone. This can often resolve misaligned button commands.
- **App-Specific Issues:** Some apps may interpret commands differently. Test the remote with other compatible apps to isolate the issue.
- **Accessibility Settings:** Review your phone's accessibility settings for any custom gestures or remappings that might be conflicting with the remote's intended functions.

7.3 Advanced Features Not Working (Follow, Favorites, Comments)

- These features require manual setup within your phone's accessibility settings. The effectiveness can vary depending on your phone's model and operating system version. Ensure you have correctly configured the custom gestures as per your phone's instructions.

8. SPECIFICATIONS

Model Number	R1
Brand	SEANCHEER
Item Weight	1.44 ounces
Package Dimensions	4.06 x 2.76 x 0.87 inches
Batteries	1 Lithium Ion battery (included)
Special Feature	Rechargeable
Color	Black
Max Number of Supported Devices	1
Compatible Devices	iPhone, Smartphone

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact SEANCHEER customer service through the retailer where the product was purchased or visit the official SEANCHEER website.