

XBENDON M1

XBENDON M1 MP3 Player User Manual

Model: M1 | Brand: XBENDON

1. INTRODUCTION

The XBENDON M1 MP3 Player is a versatile portable media device designed for music, video, and app enjoyment. Featuring a 4.0-inch touch screen, an octa-core processor, and 96GB of storage (32GB internal + 64GB TF card), it offers a smooth and responsive user experience. With dual-band Wi-Fi (2.4G/5G) and two-way Bluetooth, it provides flexible connectivity options for streaming and connecting to various audio devices. This manual provides essential information for setting up, operating, and maintaining your M1 MP3 Player.

Key features include:

- Dual-band 2.4G/5G Wi-Fi for stable internet connection and app downloads.
- Two-way Bluetooth for connecting to headphones, speakers, and car systems.
- Android OS with an octa-core MTK chip and 3GB RAM for fast performance.
- 96GB total storage (32GB internal + 64GB TF card), expandable up to 1TB.
- Pre-installed Parental Control app for managing content and screen time.
- Support for multiple music and video formats, with a built-in HiFi lossless HD speaker and FM radio.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1 x XBENDON M1 MP3 Player
- 1 x Silicone Protective Case
- 1 x Wired Earphones
- 1 x 64GB TF Card (pre-installed or separate)
- 1 x USB-C Charging Cable
- 1 x User Manual (this document)

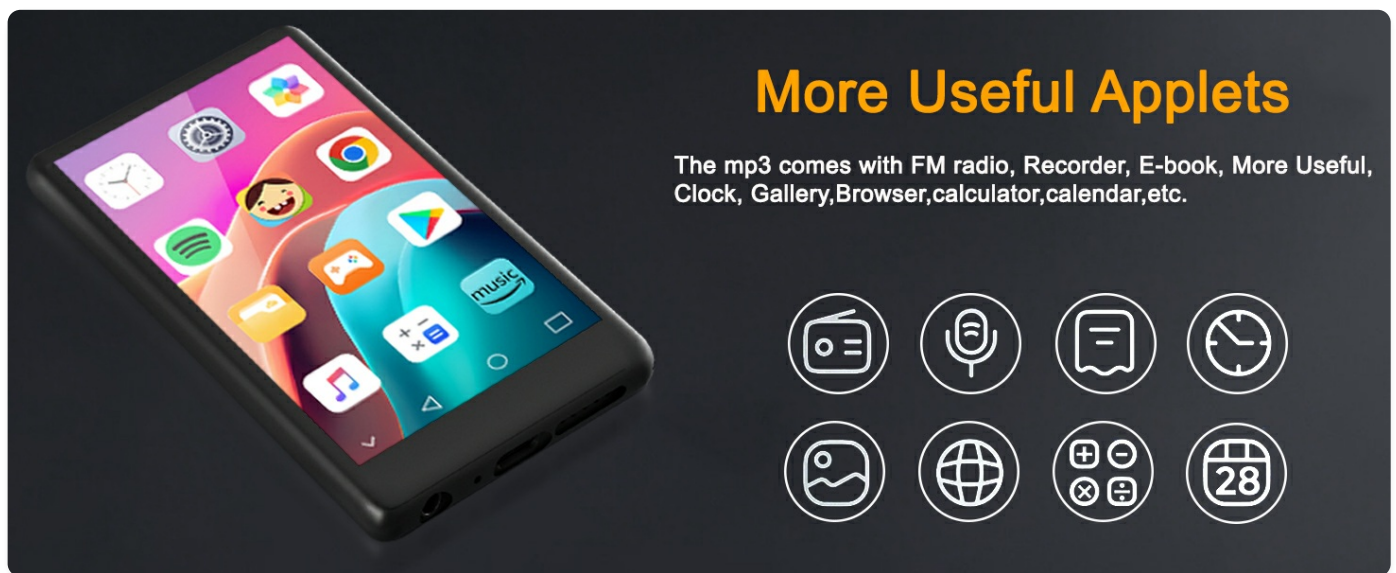 


Figure 2.1: Packaging List of the XBENDON M1 MP3 Player.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and features of your XBENDON M1 MP3 Player.



Figure 3.1: Front view of the XBENDON M1 MP3 Player.

The device features a vibrant 4.0-inch IPS touch screen, providing clear visuals and intuitive navigation. The side of the device includes volume controls and a power button. At the bottom, you will find the USB-C port for charging and data transfer, and a 3.5mm audio jack for wired earphones.

Pre-installed with Play Store and Multiple Apps

You can download the app you want from the play store



Play Store



YouTube



Spotify



Browser



Figure 3.2: Pre-installed applications on the M1 MP3 Player.

The M1 MP3 Player comes with several essential applications pre-installed, including the Google Play Store, YouTube, Spotify, and a web browser. This allows for immediate access to a wide range of content and additional app downloads.

Wireless Bluetooth & 5G/2.4G WIFI

The connection is faster and more stable!



Figure 3.3: Wireless connectivity features.

Equipped with dual-band 2.4G and 5G Wi-Fi, the player ensures a strong and stable internet connection. Its two-way Bluetooth functionality allows seamless pairing with wireless headphones, speakers, and car audio systems for versatile audio output.

96GB Larger Storage-Put all your love

Support Formats: MP3, OGG, FLAC, AAC, WAV, WMA, APE, MP4, MOV etc.



2.4G/5G WIFI



Bluetooth



Android OS



96GB Memory
(32GB+64GB SD Card)



Octa-core



Parental
Control

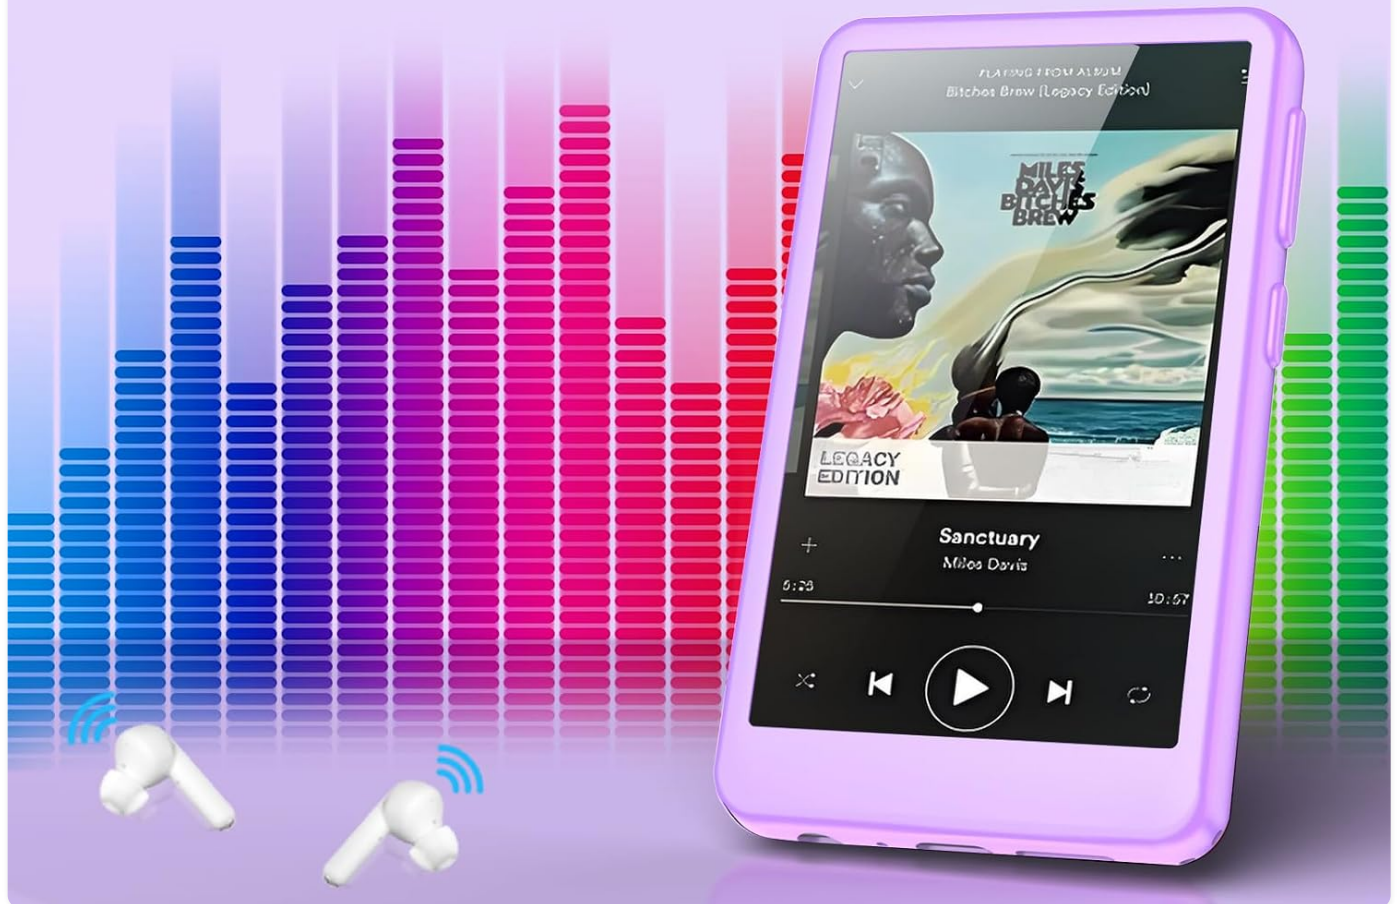 


Figure 3.4: Storage and supported formats.

The M1 MP3 Player offers 96GB of storage, combining 32GB internal memory with a 64GB TF card. It supports a wide array of audio formats including MP3, OGG, FLAC, AAC, WAV, WMA, APE, and video formats such as MP4 and MOV.

96GB of Ultra Large Memory

Equipped with MTK octa-core processor and 3GB RAM, it runs 200% faster than 2GB and super smooth without lagging



Figure 3.5: Performance capabilities.

Powered by an MTK octa-core processor and 3GB of RAM, the device ensures smooth multitasking and rapid application performance, making it suitable for various media consumption and light gaming.

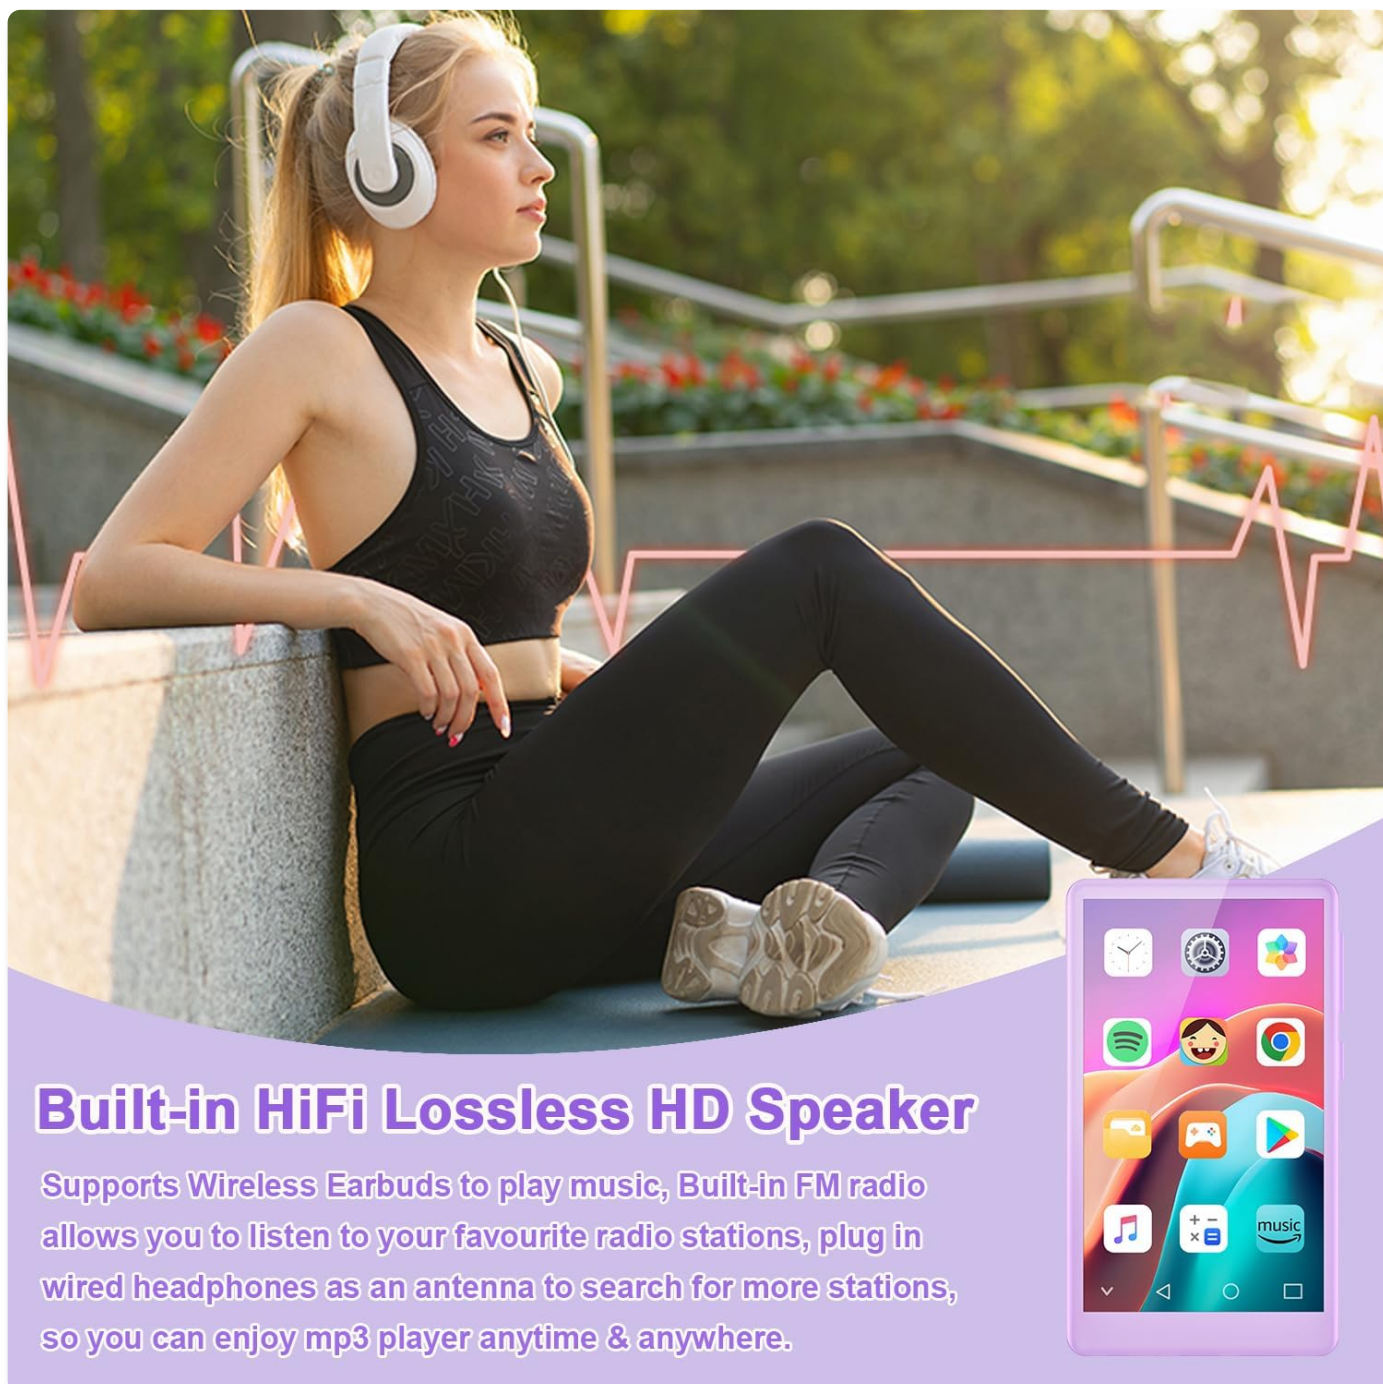 


Figure 3.6: Audio features.

The M1 MP3 Player includes a built-in HiFi lossless HD speaker for direct audio playback. It also supports wireless earbuds and features an FM radio. For FM radio, wired headphones can be plugged in to act as an antenna.

4. SETUP GUIDE

4.1 Initial Charging

Before first use, fully charge your MP3 player. Connect the provided USB-C charging cable to the device's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

4.2 Inserting the TF Card

Your device comes with a 64GB TF card. Locate the TF card slot on the side of the device. Gently insert the TF card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation to avoid damage.

Wireless Bluetooth & 5G/2.4G WIFI

The connection is faster and more stable!



Figure 4.1: Inserting the TF Card.

4.3 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears on the screen. Select "Power off" and confirm.
- **To Restart:** From the power-off menu, select "Restart".

4.4 Initial Setup

Upon first power-on, you will be guided through an initial setup process:

1. **Language Selection:** Choose your preferred language from the list.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet. This is crucial for downloading apps and accessing online content.
3. **Date and Time:** Set the correct date and time, or enable automatic synchronization via network.

4. **Google Account:** You may be prompted to sign in with a Google account to access the Play Store and other Google services.

5. OPERATING INSTRUCTIONS

5.1 Screen Navigation

The M1 MP3 Player features a touch screen for all navigation. Use gestures such as tapping, swiping, and pinching to interact with the interface and applications.

5.2 Wi-Fi Connectivity

To connect or manage Wi-Fi networks:

1. Go to **Settings**.
2. Select **Network & Internet**, then **Wi-Fi**.
3. Turn Wi-Fi **On**.
4. Select your desired network from the list and enter the password if prompted.

5.3 Bluetooth Pairing

To pair your MP3 player with Bluetooth headphones, speakers, or car systems:

1. Ensure the Bluetooth device you wish to pair is in pairing mode.
2. On your MP3 player, go to **Settings**.
3. Select **Connected devices**, then **Bluetooth**.
4. Turn Bluetooth **On**.
5. Tap **Pair new device** and select your device from the list. Follow any on-screen prompts to complete pairing.

5.4 App Management (Play Store & Parental Control)

The device supports downloading and uninstalling apps via the Google Play Store.

- **Downloading Apps:** Open the **Play Store** app, search for desired applications (e.g., Spotify, Audible, TikTok, YouTube), and tap "Install".
- **Uninstalling Apps:** Go to **Settings > Apps & notifications > See all apps**. Select the app you wish to uninstall and tap "Uninstall".
- **Parental Control:** The pre-installed Parental Control app allows you to manage screen time, hand-pick content, and ensure safe browsing for children. Access this app to configure settings according to your preferences.

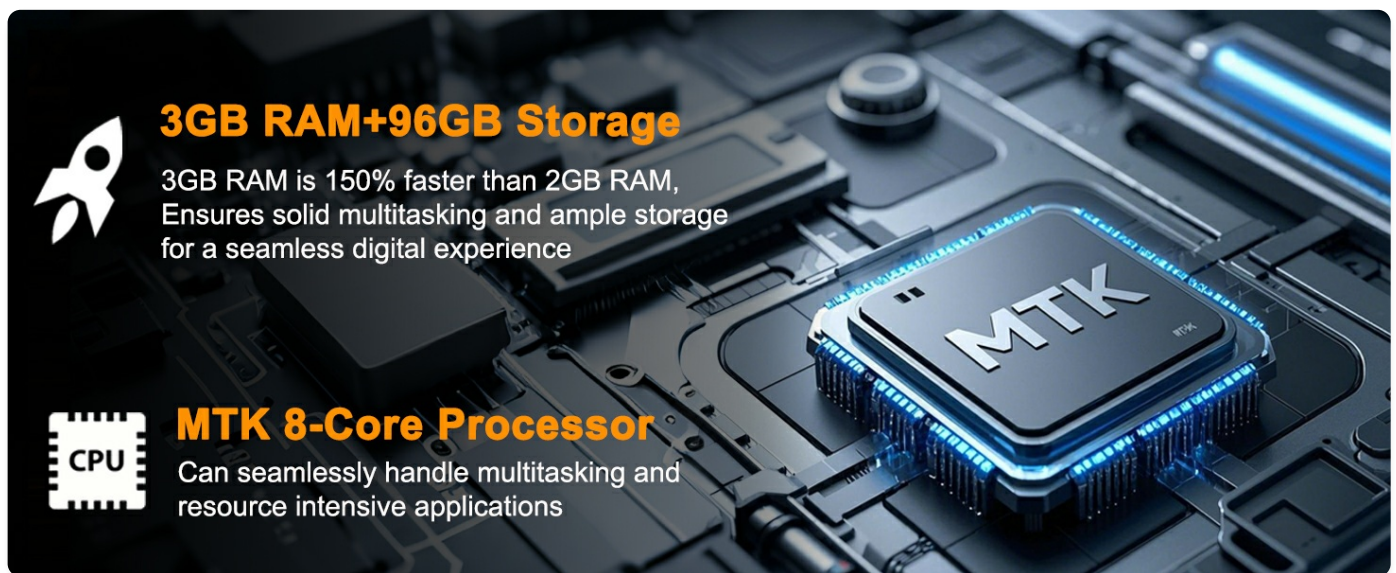 


Figure 5.1: Customizing your player by adding or removing apps.

5.5 Music and Video Playback

The M1 MP3 Player supports various audio and video formats. Use the pre-installed music and video players, or download third-party apps from the Play Store.

- **Supported Audio Formats:** MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, etc.
- **Supported Video Formats:** RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS.
- **FM Radio:** Plug in the wired earphones (they act as an antenna) and open the FM Radio app to scan for and listen to local radio stations.

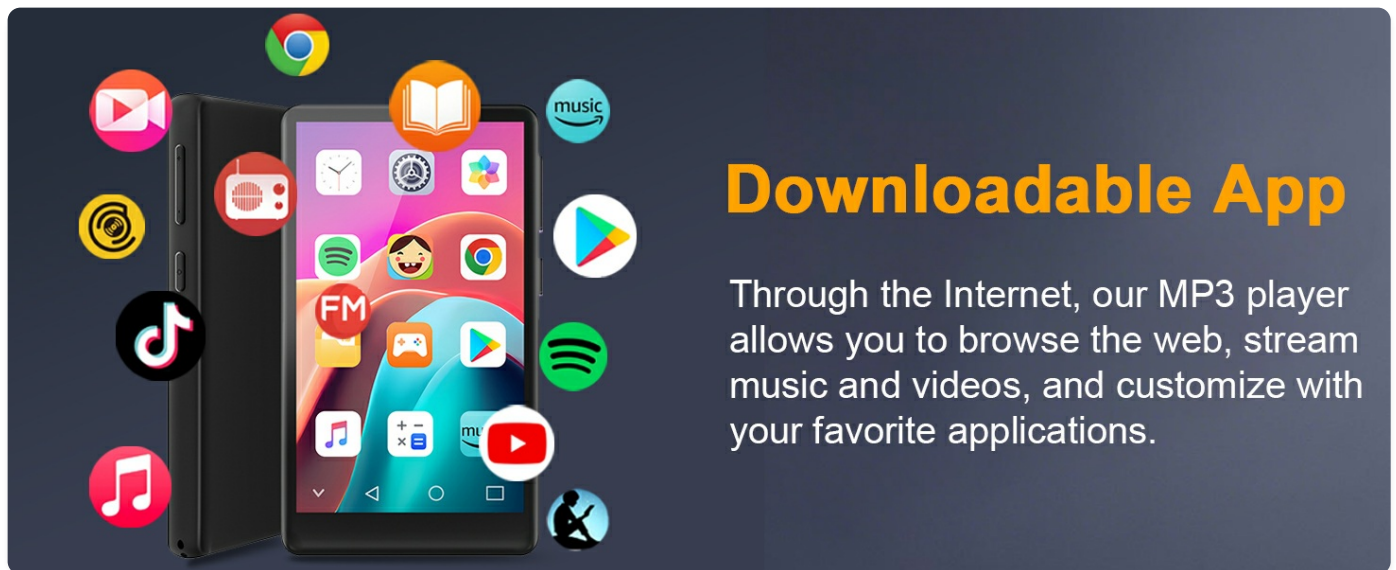 


Figure 5.2: Powerful Music App interface.

5.6 File Transfer

To transfer music, videos, or other files from your computer to the MP3 player:

1. Connect the MP3 player to your computer using the provided USB-C cable.
2. On the MP3 player, swipe down from the top of the screen to open the notification panel.
3. Tap the USB notification (e.g., "USB charging this device").
4. Select **File transfer** or **Transfer files**.
5. Your computer should now recognize the MP3 player as a removable storage device. You can drag and drop files to

and from the device's internal storage or the TF card.

6. MAINTENANCE

6.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the device. Avoid using abrasive cleaners or solvents, as they may damage the surface. Do not expose the device to excessive moisture.

6.2 Battery Care

- Avoid extreme temperatures, as they can affect battery life.
- Do not fully discharge the battery frequently. It is best to recharge before the battery level drops too low.
- If storing the device for an extended period, charge it to about 50% before turning it off.

6.3 Storage

Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures. Use the provided silicone case to protect the device from scratches and minor impacts.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device frozen.	Charge the device for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force a restart.
Cannot connect to Wi-Fi.	Incorrect password; out of range; network issue.	Double-check the Wi-Fi password. Move closer to the Wi-Fi router. Restart the router and the MP3 player.
Bluetooth device not pairing.	Device not in pairing mode; too far apart.	Ensure the Bluetooth accessory is in pairing mode. Bring devices closer. Try restarting both devices.
Apps are slow or crashing.	Too many apps running; low storage; software glitch.	Close background apps. Clear app cache (Settings > Apps & notifications > App info > Storage & cache > Clear cache). Consider uninstalling unused apps. Restart the device.
Unable to log in to Play Store.	Account issue; software conflict.	Try resetting to factory settings: Go to Settings > System > Reset options > Erase all data (factory reset) . This will erase all data, so back up important files first. After restart, try logging in again.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	XBENDON
Model Name	M1
Screen Size	4.0 Inches
Memory Storage Capacity	96 GB (32GB internal + 64GB TF Card)
Expandable Memory	Up to 1TB (via Micro SDXC)
RAM	3GB
Processor	Octa-core MTK chip
Operating System	Android OS
Connectivity Technology	Bluetooth, Wi-Fi (2.4G/5G), USB-C, Aux
Special Feature	Built-In Speaker, Parental Control Mode
Batteries	1 Lithium Polymer battery (included)
Item Weight	9.1 ounces
Package Dimensions	5.31 x 3.27 x 1.46 inches

9. WARRANTY AND SUPPORT

XBENDON is committed to providing high-quality products and customer satisfaction. Your XBENDON M1 MP3 Player is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or any questions regarding your product, please contact XBENDON customer service. We aim to answer all inquiries within 24 hours.

You can visit the official XBENDON store for more information and support:[XBENDON Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question