

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [bonsai](#) /

> [bonsai C231-D Automatic Micro-Cut Shredder Instruction Manual](#)

bonsai C231-D

bonsai C231-D Automatic Micro-Cut Shredder Instruction Manual

Model: C231-D

1. INTRODUCTION

Thank you for purchasing the bonsai C231-D Automatic Micro-Cut Shredder. This manual provides essential information for the safe and efficient operation of your shredder. Please read it thoroughly before use and retain it for future reference.

2. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:



Image: Safety warning icons indicating prohibited actions and materials.

- **Children:** Do not allow children to operate the shredder.
- **Hands:** Keep hands away from the paper entry slot.
- **Clothing:** Avoid loose clothing near the shredder opening.
- **Hair:** Keep long hair away from the paper entry slot.
- **Flammable Materials:** Do not shred flammable materials or use near flammable liquids/gases.
- **Stability:** Ensure the shredder is placed on a stable, level surface to prevent tipping.

- **Prohibited Materials:** Do not shred delivery slips, window envelopes, gummed tape, double-sided tape, adhesive tape, carbon paper, cloth, newspapers, or polyethylene bags.
- **Waste Bin Capacity:** Empty the waste bin when it is approximately 80% full to prevent jams and ensure proper operation.

3. PRODUCT FEATURES

The bonsaii C231-D shredder offers advanced features for efficient and secure document disposal:

- **Dual Feed Design:** Supports automatic shredding of up to 80 sheets of A4 paper and manual feeding of up to 8 sheets.
- **Micro-Cut Security:** Shreds documents into tiny 4x12mm particles, meeting DIN P-4 security standards for enhanced data protection.
- **Jam Prevention:** Equipped with auto-cleaning and auto-reverse functions to prevent paper jams and ensure smooth operation.
- **Extended Run Time:** Capable of 30 minutes continuous operation for automatic shredding and 10 minutes for manual feeding.
- **Versatile Shredding:** Handles paper, credit cards, staples, and small paper clips.
- **Compact & Mobile:** Features a space-saving design with casters for easy movement and placement in various environments.
- **Large Capacity Waste Bin:** A 16-liter pull-out waste bin minimizes the frequency of emptying.

4. SETUP

1. **Unpacking:** Carefully remove the shredder from its packaging. Ensure all components are present, including the shredder unit and the instruction manual.
2. **Placement:** Place the shredder on a flat, stable surface. Utilize the integrated casters for easy positioning. Ensure there is adequate space around the unit for ventilation and waste bin removal.
3. **Power Connection:** Connect the power cord to a suitable electrical outlet.
4. **Waste Bin:** Ensure the 16L waste bin is correctly inserted into the shredder unit. The shredder will not operate if the bin is not properly seated.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the power switch on the back of the unit. Flip it to the 'ON' position to power on the shredder. Flip it to 'OFF' when not in use.

オートクリーニング機能

自動で清掃運転を行い、刃に残った細断くずを落とします。



※毎回電源をオンにする時：自動的に逆転1~3秒
※毎回細断終了時：2~3秒回転を延長して逆転1~3秒

オートリバース機能

紙詰まりを防ぐため、正しく細断されないと自動的に刃が逆転します。



※規格の枚数を超える ※斜めに紙を入れる ※その他の誤った使い方

Image: Control panel showing power, overheat, overload, and fault indicators.

5.2 Automatic Shredding (Auto-Feed)

This mode is ideal for shredding large batches of paper without constant supervision.



Image: Automatic shredding of multiple sheets of paper.

1. Open the auto-feed tray cover.
2. Place up to 80 sheets of A4 paper into the auto-feed tray. Ensure the paper is aligned properly.
3. Close the auto-feed tray cover. The shredder will automatically begin shredding.
4. The shredder can operate continuously for up to 30 minutes in auto-feed mode.

5.3 Manual Feed Shredding

Use the manual feed slot for smaller quantities of paper, credit cards, or documents with staples/paper clips.

紙をセットするだけで自動細断してくれます。

※注意：紙のみ対応するで、細断前にホッチキス、クリップ、粘着テープなど用紙に付着した異物を取り除いてください。

新旧バージョン切り替え中で、掲載仕様の「80枚自動細断」モデルまたは性能強化の「100枚自動細断」モデルがランダムで発送されるため予めご了承ください。

Image: Manual feed slot for paper and cards, showing capacity.

1. Insert up to 8 sheets of paper into the manual feed slot.
2. For credit cards, use the dedicated card entry slot.
3. The shredder will automatically detect the paper/card and begin shredding.
4. The shredder can operate continuously for up to 10 minutes in manual feed mode.

5.4 Jam Prevention and Auto-Reverse

The shredder is designed with features to minimize paper jams:



Image: Visual representation of auto-cleaning and auto-reverse mechanisms.

- **Auto-Reverse:** If too much paper is inserted or a jam occurs, the shredder will automatically reverse to clear the paper.
- **Manual Reverse:** In case of a persistent jam, slide the control switch to the 'Reverse' position to manually clear the paper.
- **Auto-Cleaning:** The shredder performs an automatic cleaning cycle (1-3 seconds reverse) when powered on and after shredding is complete to clear residual paper scraps from the blades.

6. MAINTENANCE

6.1 Emptying the Waste Bin

The shredder features a 16-liter pull-out waste bin. An indicator light will illuminate when the bin is full.



Image: The 16L waste bin being removed and emptied.

1. When the 'Power/Full Bin' indicator light turns green and blinks, the waste bin is full and shredding will stop.
2. Pull out the waste bin from the front of the shredder.
3. Dispose of the shredded paper.
4. Slide the waste bin back into the shredder until it clicks into place. The shredder will automatically restart once the bin is correctly seated.

6.2 Lubrication


Regular lubrication is recommended to maintain optimal performance and extend the lifespan of the shredder blades. Use shredder lubricating oil or maintenance sheets as per the manufacturer's recommendations.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions:

オートクリーニング機能

自動で清掃運転を行い、刃に残った細断くずを落とします。

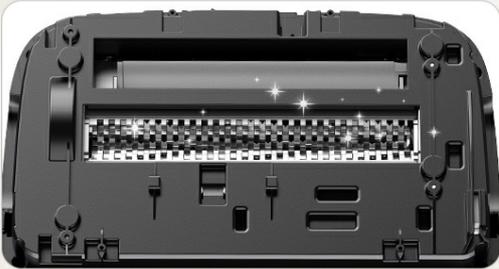

※毎回電源をオンにする時：自動的に逆転1～3秒
※毎回細断終了時：2～3秒回転を延長して逆転1～3秒

オートリバース機能

紙詰まりを防ぐため、正しく細断されないと自動的に刃が逆転します。



※規格の枚数を超える ※斜めに紙を入れる ※その他の誤った使い方

Image: Control panel showing overheat, overload, and fault indicators.

Problem	Indicator Light	Solution
Shredder does not start	No light / Power light off	Ensure the power cord is securely plugged in. Check if the waste bin is correctly inserted. Verify the power switch is in the 'ON' position.
Paper Jam	Overload (Red)	Slide the control switch to 'Reverse' to clear the paper. Reduce the amount of paper being fed.
Overheating	Overheat (Red)	The shredder has exceeded its continuous run time. Turn off the shredder and allow it to cool down for at least 40 minutes before resuming operation.
Waste Bin Full	Power/Full Bin (Green, blinking)	Empty the waste bin and reinsert it correctly.
General Fault	Fault (Red)	Turn off the shredder, unplug it, and wait a few minutes. Plug it back in and restart. If the issue persists, contact customer support.

8. SPECIFICATIONS

Specification	Detail
Model Number	JP-C231-D
Shred Type	Micro-Cut
Shred Size	4 x 12 mm
Auto-Feed Capacity	80 sheets (A4 paper)

Specification	Detail
Manual Feed Capacity	8 sheets (A4 paper)
Continuous Run Time (Auto-Feed)	30 minutes
Continuous Run Time (Manual Feed)	10 minutes
Waste Bin Capacity	16 Liters
Dimensions (Product)	26.3 x 39.9 x 47.51 cm
Weight (Product)	8.26 kg
Color	Black
Included Accessories	Shredder unit, Instruction Manual (Japanese)

9. WARRANTY AND SUPPORT





日本国内サポート拠点



日本語でのお問い合わせ



迅速な対応



国内での修理対応



正規保証書付き

★ **日本語対応・国内サポートの安心保証**

ご購入後も万全のアフターサービスをご提供します。お問い合わせは日本語で専任スタッフが日本国内から迅速に対応いたしますので、ご安心ください。

★ **保証と修理に関するご案内**

製品保証期間は1年間です。万が一不具合が生じた場合、日本国内のサービスセンターにて迅速な修理・交換に対応させていただきます。

Image: Customer support representative ready to assist.

bonsai provides a **1-year product warranty** for all its products. In case of any malfunction, our dedicated Japanese-speaking staff are available to provide prompt and courteous support from within Japan. You can contact us via our dedicated phone line or email support.

For inquiries regarding products or repairs, please contact our customer support.

10. PRODUCT VIDEO OVERVIEW

Watch this video for a visual guide on the features and operation of the bonsai C231-D shredder.

Video: A brief demonstration of the bonsai C231-D shredder's automatic and manual shredding capabilities, including jam prevention and waste bin features.