

## Portronics Ruffpad 22

# Portronics Ruffpad 22 LCD Writing Pad User Manual

Model: Ruffpad 22 (POR-2633)

## INTRODUCTION

---

Welcome to the Portronics Ruffpad 22 LCD Writing Pad user manual. This document provides essential information for setting up, operating, maintaining, and troubleshooting your new 22-inch digital writing pad. Designed for convenience and versatility, the Ruffpad 22 offers a paper-like writing experience for notes, drawings, and more, without the need for paper or ink.

## PRODUCT FEATURES

---

The Portronics Ruffpad 22 is equipped with several features to enhance your writing and drawing experience:

- **22-inch LCD Writing Pad:** A large, re-writable LCD screen perfect for extensive doodling, note-making, and brainstorming.
- **Anti-Glare Screen:** Designed to reduce eye strain, headaches, and fatigue, making it safe for prolonged use by all ages.
- **One-Tap Magic Erase:** Instantly clear the entire screen with a single press of the erase button, allowing you to start fresh.
- **Smart Lock for Security:** A dedicated lock switch prevents accidental erasing, preserving your work until you're ready to clear it.
- **Stylus Pen:** Comes with a precise stylus for smooth and accurate writing.



## Large, Clear 22-Inch Screen

Enjoy bright, crisp visuals on the spacious screen, perfect for writing and sketching

Image: The Portronics Ruffpad 22 showcasing its large 22-inch screen, ideal for extensive writing and drawing.

 PORTRONICS

## RUFFPAD 22

LCD Writing Pad



**22 Inches**  
Screen Size

Image: An overview of the Portronics Ruffpad 22, highlighting its 22-inch screen size.

## PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x Portronics Ruffpad 22 LCD Writing Pad
- 1 x Stylus Pen

## SETUP

Setting up your Ruffpad 22 is quick and easy:

1. **Unpack:** Carefully remove the Ruffpad 22 and its accessories from the packaging.
2. **Insert Stylus:** The stylus is typically stored in a slot on the side or top of the pad. Remove it for use.
3. **Check Erase Lock:** Ensure the erase lock switch (usually on the side or bottom) is in the 'unlocked' position if you wish to erase content immediately.

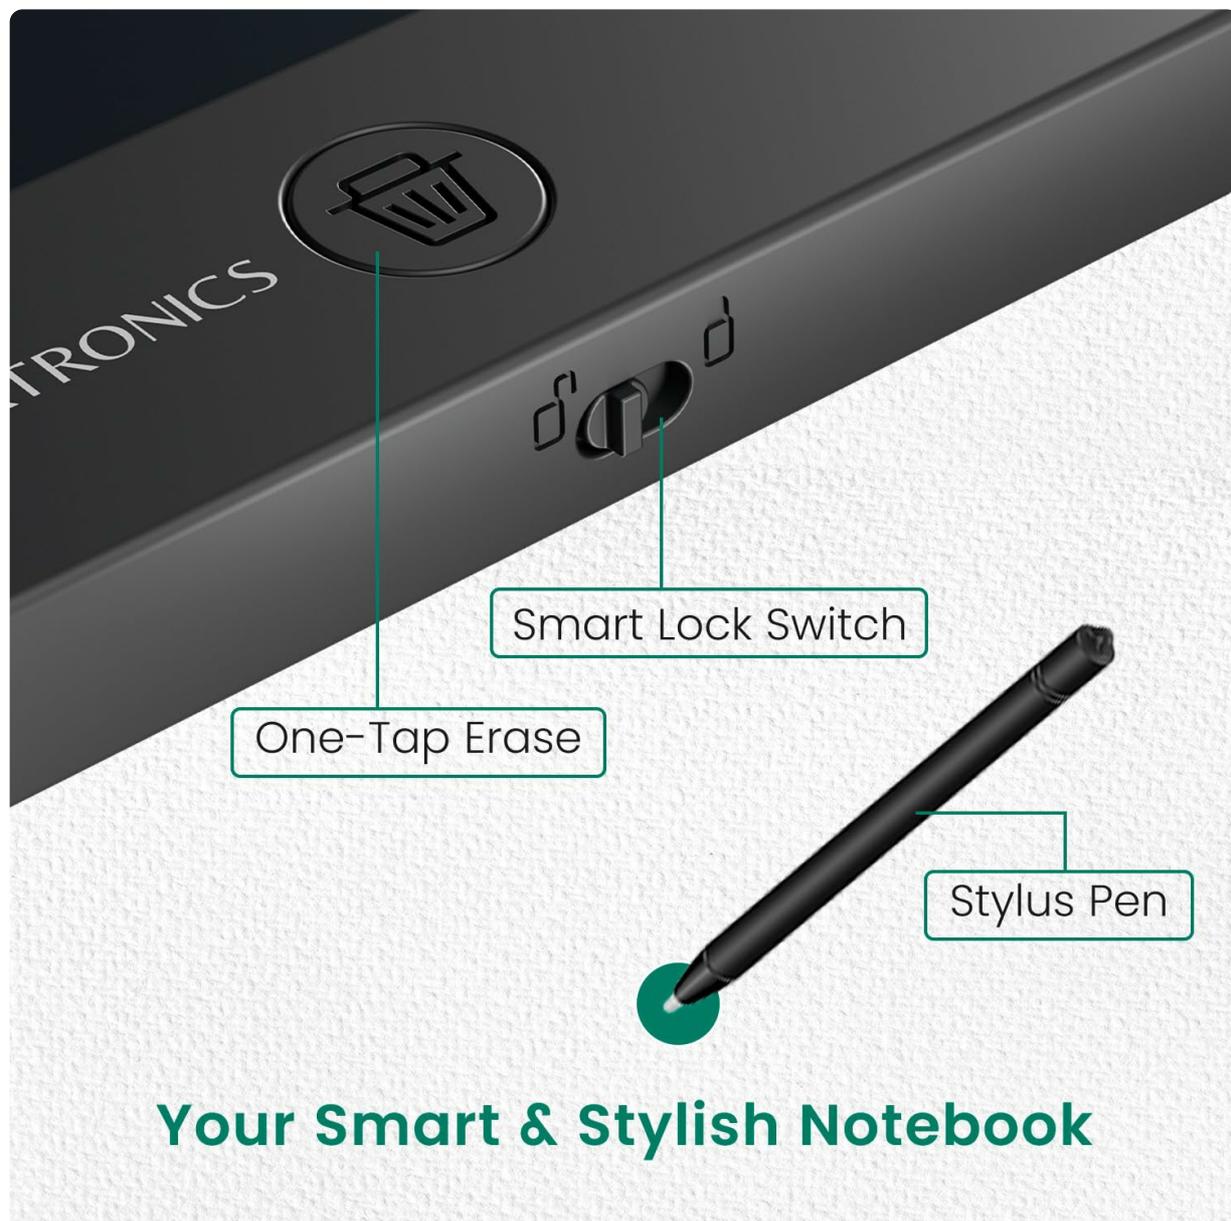


Image: Key components of the Ruffpad 22, including the stylus, erase button, and smart lock switch.

## OPERATING INSTRUCTIONS

### Writing

Use the provided stylus to write or draw directly on the LCD screen. The pressure-sensitive surface allows for varying line thickness based on how firmly you press.

## Smooth Writing with Stylus


The included stylus provides precise, comfortable writing, making every stroke effortless and accurate



Image: Demonstrating smooth writing on the Ruffpad 22 using the included stylus.

## Erasing

To clear the screen, ensure the erase lock switch is in the 'unlocked' position. Then, press the 'One-Tap Erase' button located on the pad. The entire screen will clear instantly.

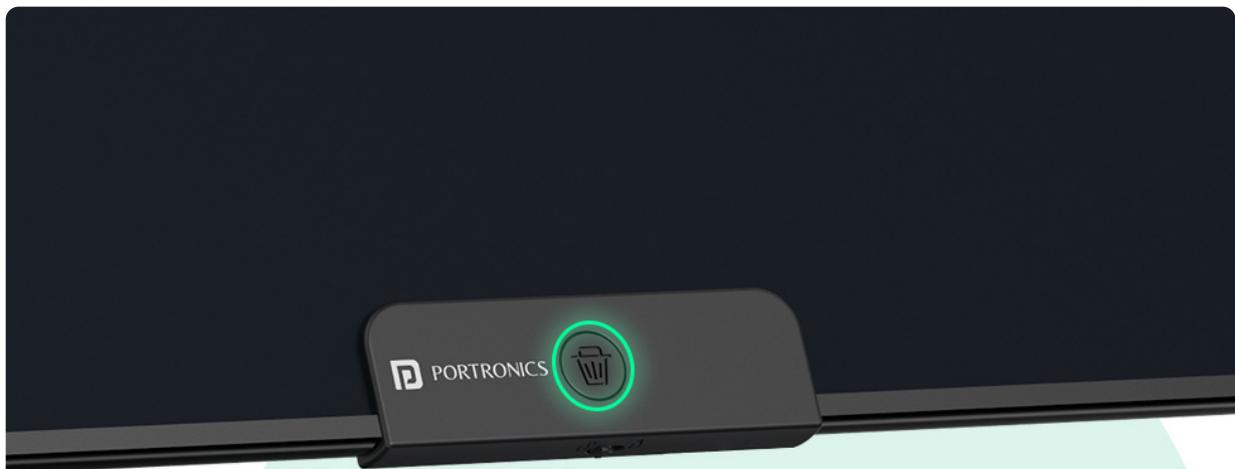

## Easy One-Touch Erase Function

Quickly erase the entire screen with a single press, for hassle-free note-taking or doodling

Image: The easy one-touch erase function button on the Ruffpad 22.

## Erase Lock Function

To prevent accidental erasing of your important notes or drawings, slide the erase lock switch to the 'locked' position. While locked, the erase button will be inactive, and your content will remain on the screen. You can still write on the screen even when it is locked.



## Erase Lock Button for Protection

Prevent accidental erasing by locking your notes or drawings until you're ready to clear

Image: The erase lock button, designed to protect your content from accidental clearing.

## MAINTENANCE

To ensure the longevity and optimal performance of your Ruffpad 22, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the screen. Avoid using abrasive cleaners, solvents, or excessive moisture.
- **Stylus Care:** Always use the provided stylus or a similar non-abrasive tool. Do not use sharp objects or excessive force on the screen.
- **Storage:** Store the Ruffpad 22 in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery:** The Ruffpad 22 uses a button cell battery (CR2032, typically). If the erase function stops working, it may be time to replace the battery. Refer to the battery compartment for instructions on replacement.

## TROUBLESHOOTING

If you encounter any issues with your Ruffpad 22, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cannot erase content	Erase lock switch is engaged. Battery is low or depleted.	Slide the erase lock switch to the 'unlocked' position. Replace the battery (CR2032).
Screen is dim or faint	This is normal for LCD writing pads, which do not emit light. Ensure adequate ambient lighting.	Use the pad in a well-lit environment. The screen is designed to be moderately bright and anti-glare.

Problem	Possible Cause	Solution
Cannot write on the screen	Using an inappropriate tool. Stylus is damaged.	Ensure you are using the provided stylus or a similar non-abrasive, blunt object. Contact support if the stylus is damaged.

## SPECIFICATIONS

Feature	Detail
Brand	Portronics
Model Number	POR-2633
Colour	Black
Style	Ruffpad 22
Screen Size	22 Inches
Item Weight	760 g
Item Dimensions (LxWxH)	34.7 x 1.7 x 48.2 Centimeters
Special Features	Anti-Glare Screen, One-Tap Erase Button, Sleek & Portable, Smart Lock Switch
Power Source	Button Cell Battery (CR2032)

## WARRANTY AND SUPPORT

Portronics products are designed for durability and performance. For warranty information or technical support, please contact Portronics directly using the details below:

- **Email:** [help@portronics.com](mailto:help@portronics.com)
- **Phone:** +91 9555-245-245
- **Manufacturer:** Portronics Digital Pvt. Ltd.
- **Address:** First Floor Property No D 8 Upper Basement Sector 8 Noida Uttar Pradesh 201301

Please retain your purchase receipt for warranty claims.

