

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [OUKITEL](#) /

› [OUKITEL C57 Pro Mobile Phone User Manual](#)

OUKITEL OUKITEL C57 PRO

OUKITEL C57 Pro Mobile Phone User Manual

Model: OUKITEL C57 PRO

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your OUKITEL C57 Pro mobile phone. Please read this manual thoroughly before using your device to ensure optimal performance and longevity. The OUKITEL C57 Pro is a feature-rich smartphone designed for everyday communication and entertainment, running on the latest Android 14 operating system.



Figure 1.1: OUKITEL C57 Pro Mobile Phone (Purple variant).

2. SETUP

2.1 Package Contents

Before you begin, ensure all items are present in the package:

- OUKITEL C57 Pro Smartphone
- Leather Case (if included in your specific package)

- Type-C Cable
- Charger
- SIM Pin Ejector
- User Manual (this document)
- Quick Start Guide



Figure 2.1: Contents of the OUKITEL C57 Pro retail package.

2.2 SIM Card and TF Card Installation

The OUKITEL C57 Pro supports two 4G SIM cards and one TF (microSD) card simultaneously for expanded storage up to 1TB.

1. Locate the SIM card tray on the side of the phone.
2. Insert the SIM pin ejector into the small hole next to the tray to eject it.
3. Carefully place your Nano-SIM cards and TF card into the designated slots on the tray. Ensure correct orientation as indicated on the tray.
4. Gently push the tray back into the phone until it is flush with the device body.



Figure 2.2: Illustration of Dual SIM and TF card installation.

2.3 Initial Power On and Setup

Press and hold the Power button until the OUKITEL logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings.

2.4 Security Features: Face ID and Fingerprint Unlock

The OUKITEL C57 Pro offers both Face ID and fingerprint unlock for convenient and secure access to your device.

- **Face ID:** Go to **Settings > Security & privacy > Face unlock** and follow the instructions to register your face.
- **Fingerprint Unlock:** Go to **Settings > Security & privacy > Fingerprint unlock** and follow the instructions to register your fingerprint.

5MP Front Camera



Figure 2.3: Face ID and Fingerprint unlock options.

3. OPERATING INSTRUCTIONS

3.1 Android 14 Operating System

Your OUKITEL C57 Pro runs on the latest Android 14, offering enhanced privacy controls, improved performance, and a user-friendly interface. Explore the various customization options and features available in the Settings menu.

Android

- Powerful
- Secure
- Customizable

14



Figure 3.1: Android 14 operating system interface.

3.2 Memory and Storage Management

The OUKITEL C57 Pro features 128GB of internal storage (ROM) and 16GB of RAM (4GB physical + 12GB virtual). This memory expansion technology allows for smoother multitasking and application performance. You can expand storage further with a TF card up to 1TB.

OCTA-CORE

Never Worry About Storage Again

16GB RAM + 128GB ROM

The image features a central smartphone displaying a music discovery app interface. Surrounding it are several other smartphone screens showing different parts of the user interface, including settings for 'Virtual Ram', artist profiles, and music playlists. The background is a light blue gradient with the text 'OCTA-CORE' at the top.

16(4+12)GB RAM **128GB ROM** **1TB Expandable** **Octa-Core Processor**

Figure 3.2: Overview of RAM and ROM capabilities.

4. CAMERA FEATURES

Capture life's moments with the OUKITEL C57 Pro's versatile camera system.

- **13MP Rear Camera:** For sharp and detailed photos and videos.
- **5MP Front Camera:** Ideal for high-quality selfies and video calls.



Figure 4.1: Main and front camera details.

4.1 Special Camera Modes

- **Panorama Mode:** Capture sweeping wide-angle shots of landscapes.
- **Bokeh Mode:** Create artistic photos with a blurred background, bringing your subject into focus.



Figure 4.2: Example of Panorama Mode in use.



Figure 4.3: Example of Bokeh Mode for portrait photography.

5. BATTERY AND CHARGING

The OUKITEL C57 Pro is equipped with a large 4300mAh battery, providing extended usage times for your daily activities.



Figure 5.1: Battery capacity and estimated usage times.

5.1 Charging Your Device

Use the provided Type-C cable and charger to power up your device. Connect the Type-C end to the phone's charging port and the other end to a power outlet. A full charge ensures maximum battery endurance.

5.2 OTG Functionality

The OUKITEL C57 Pro supports On-The-Go (OTG) functionality, allowing you to connect external USB devices such as flash drives or even charge other compatible devices directly from your phone.

6. CONNECTIVITY AND FEATURES

6.1 Network Connectivity

The phone supports 4G networks and is unlocked for all carriers, providing reliable mobile data and call services. It also features Wi-Fi for internet access.

6.2 Navigation and Location Services

Equipped with GPS, Glonass, and Galileo, the OUKITEL C57 Pro provides accurate and reliable location information for navigation and location-based services.

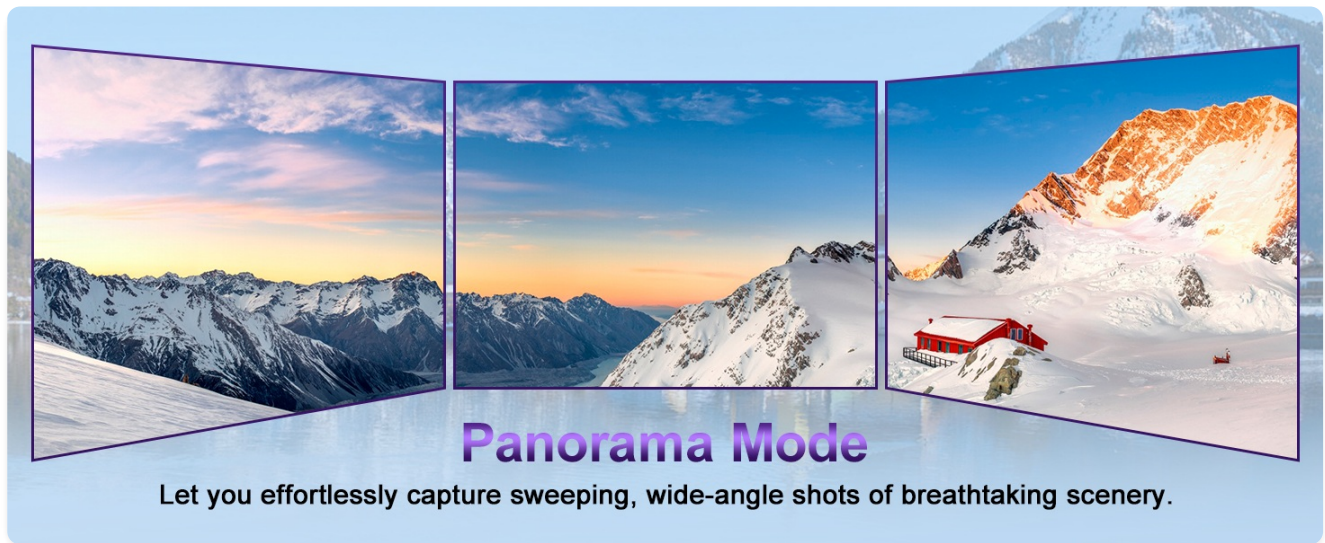


Figure 6.1: Connectivity features including GPS and 4G.

6.3 3.5mm Headphone Jack

A traditional 3.5mm headphone jack is included, allowing you to use wired headphones without the need for adapters.



Figure 6.2: Location and use of the 3.5mm headphone jack.

6.4 Design and Display

The OUKITEL C57 Pro features a 6.52-inch HD display with a 60Hz refresh rate for clear and vibrant visuals. Its ultra-thin 9.4mm body and lightweight 215g design ensure comfortable handling.

Pocket-Friendly Companion

Slides effortlessly into your pocket



Figure 6.3: Dimensions and weight of the OUKITEL C57 Pro.

6.52" HD Display

Experience Crystal Clear Visuals



Figure 6.4: The 6.52-inch HD display.

7. MAINTENANCE

To ensure the longevity and optimal performance of your OUKITEL C57 Pro, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to benefit from the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.
- **Storage Management:** Periodically clear unnecessary files, cache data, and uninstall unused applications to free up storage space and maintain device speed.
- **Battery Care:** Avoid extreme temperatures. Do not fully drain the battery frequently, and avoid overcharging for extended periods.

8. TROUBLESHOOTING

If you encounter issues with your OUKITEL C57 Pro, try the following common troubleshooting steps:

Problem	Solution
Device not turning on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Apps crashing or freezing	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Restart the phone.
Poor battery life	Reduce screen brightness. Disable unused features like Wi-Fi, Bluetooth, GPS when not needed. Close power-intensive apps.
Network connectivity issues	Check if SIM card is properly inserted. Toggle Airplane Mode on/off. Restart the phone. Verify network settings.
Fingerprint/Face ID not working	Ensure your finger/face is clean and properly positioned. Re-register your fingerprint/face in settings if issues persist.
Slow performance	Free up storage space. Uninstall unnecessary apps. Restart the device regularly.

If problems persist, consider performing a factory reset (backup your data first) or contact OUKITEL customer support.

9. SPECIFICATIONS

Key technical specifications for the OUKITEL C57 Pro:

Feature	Detail
Brand	OUKITEL
Model Name	OUKITEL C57 PRO
Operating System	Android 14
RAM Memory Installed Size	4 GB (16GB with virtual RAM expansion)
Memory Storage Capacity	128 GB (Expandable up to 1TB with TF card)
Screen Size	6.52 Inches
Resolution	1280 x 720
Refresh Rate	60 Hz
CPU Speed	1.6 GHz (Octa-Core Processor)
Rear Camera	13 MP
Front Camera	5 MP
Battery	4300 mAh Lithium Polymer

Feature	Detail
Wireless Carrier	Unlocked for All Carriers
Dimensions (approx.)	9.4mm thickness, 215g weight
Connectivity	4G, Wi-Fi, Bluetooth, GPS+Glonass+Galileo, 3.5mm Jack, Type-C

10. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product package or visit the official OUKITEL website. Keep your proof of purchase for any warranty claims.

Online Resources:

- OUKITEL Official Website: www.oukitel.com
- Customer Service Email: info@oukitel.com