

## Bauknecht HEKO 600 Pyro Black

# Bauknecht Heko 600 Pyro Black Oven and Hob Combination User Manual

Model: HEKO 600 Pyro Black

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the manufacturer.

- **Electrical Safety:** Ensure the appliance is correctly earthed and connected to a suitable power supply. Do not use adapters or extension cords.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. The hob features a **Child Lock** to prevent unintentional activation.
- **Hot Surfaces:** The oven and hob surfaces become hot during operation. Use oven mitts when handling hot items. The hob has a **Residual Heat Indicator** to show when cooking zones are still hot.
- **Pyrolysis Cleaning:** During pyrolysis, the oven reaches very high temperatures. Ensure the kitchen is well-ventilated and remove all accessories and food residues from the oven before starting the cycle.
- **General Use:** Do not store flammable materials in or near the appliance. Do not use steam cleaners.

## 2. PRODUCT OVERVIEW

The Bauknecht Heko 600 Pyro Black set combines a high-performance built-in oven with a modern glass-ceramic hob, designed for seamless integration into your kitchen.

### 2.1 Built-in Oven (Model: HIS5 EP8VS3 ES)

- **Capacity:** 65 Liters, providing ample space for various dishes.
- **Pyrolysis Cleaning Function:** Self-cleaning system that burns dirt and grease to ash at high

temperatures for easy removal.

- **Electronic Display:** For precise control of temperature and cooking modes.
- **Multi-function Oven:** Offers various operating modes including Hot Air, Top/Bottom Heat, Grill, Convection, Pizza Function, and Slow Cooking.
- **Soft Close Door:** Ensures quiet and smooth closing of the oven door.
- **Energy Efficiency:** A+ rated for energy efficiency.

## 2.2 Glass-Ceramic Hob (Model: CHR 6642 IN)

- **Size:** 60 cm standard size.
- **Cooking Zones:** Four zones, including one roasting dish dual circuit cooking zone.
- **Touch Control Panel:** Intuitive touch operation for easy adjustment.
- **Residual Heat Indicator:** Enhances safety by indicating hot zones.
- **Child Lock:** Prevents accidental activation.
- **Safety Shutdown:** Automatic shut-off in case of overheating.



Figure 1: Overview of the Bauknecht Heko 600 Pyro Black built-in oven and glass-ceramic hob combination.



Figure 2: Front view of the Bauknecht built-in oven (HIS5 EP8VS3 ES).

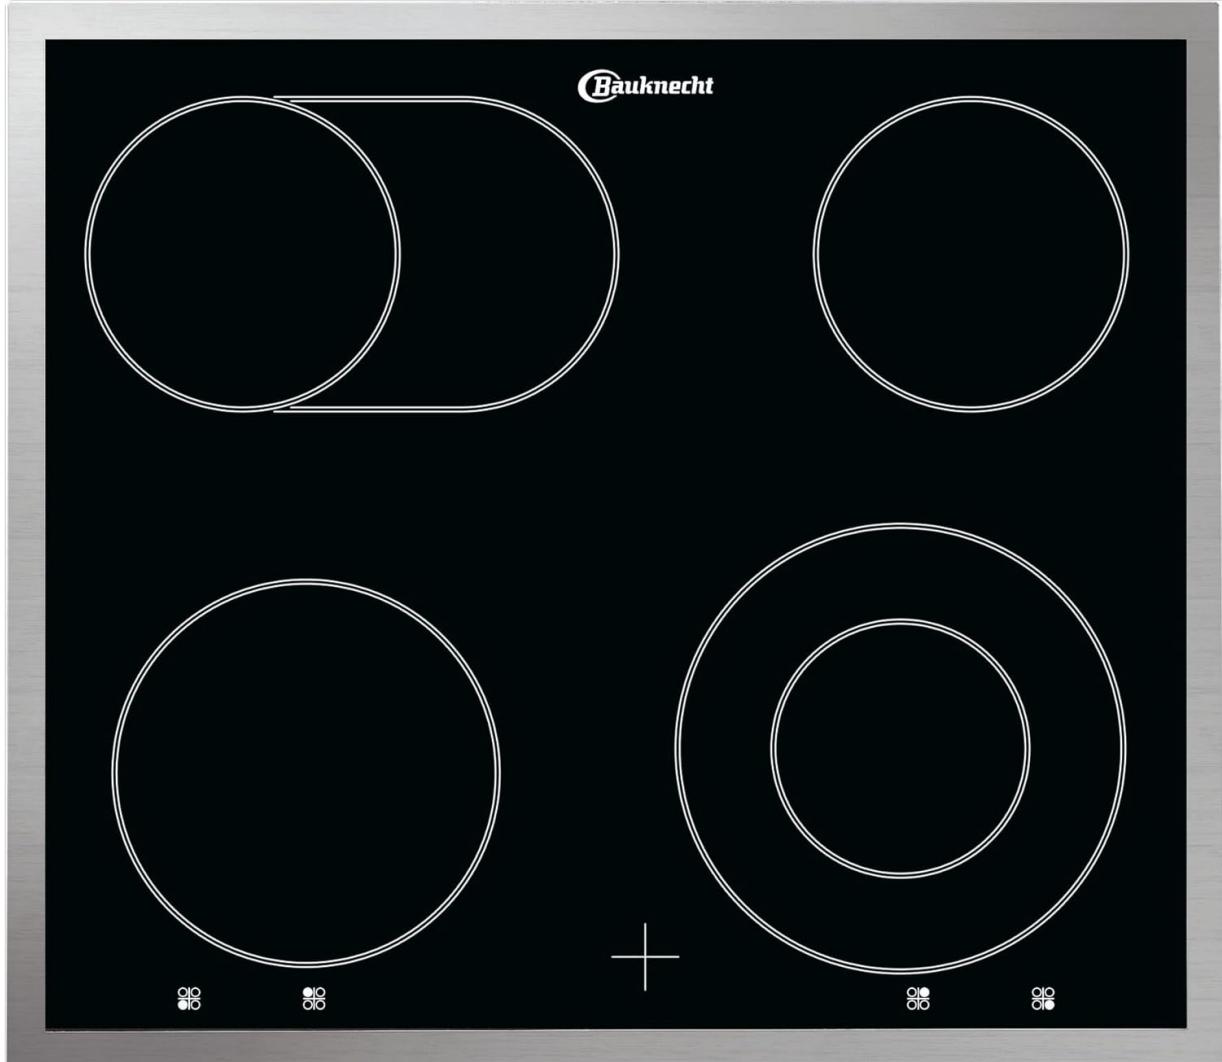


Figure 3: Top view of the Bauknecht glass-ceramic hob (CHR 6642 IN).

### 3. SETUP AND INSTALLATION

---

The Bauknecht Heko 600 Pyro Black is a built-in appliance. Professional installation by a qualified technician is highly recommended to ensure proper functioning and safety. Incorrect installation can void the warranty and pose safety risks.

#### 3.1 Unpacking

- Carefully remove all packaging materials.
- Check the appliance for any transport damage. Do not install a damaged appliance.
- Ensure all included components, such as the stovetop combo, oven racks, and rails, are present.

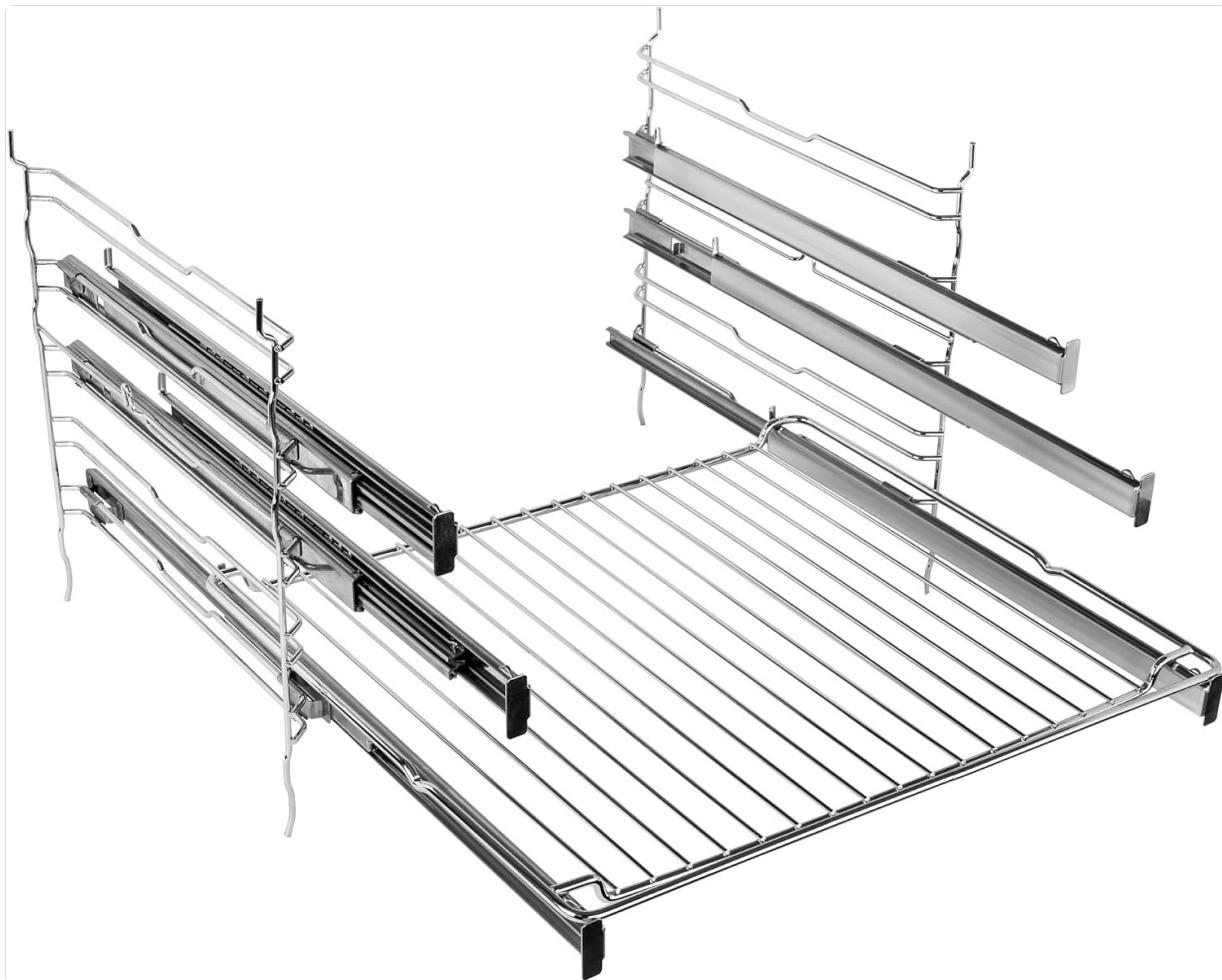


Figure 4: Oven interior showing racks and telescopic rails.

### 3.2 Placement and Dimensions

The appliance is designed for built-in installation. Refer to the technical data sheet for precise cutout dimensions for your kitchen cabinetry.

- **Oven Dimensions:** 59.5W x 59.5H x 65D centimeters (Product dimensions).
- **Hob Size:** 60 cm.
- Ensure adequate ventilation around the appliance as specified in the installation guide provided with the product packaging.



Figure 5: Technical data sheet for the Bauknecht cooktop, showing dimensions and specifications (German).

# TECHNISCHE DATEN

## Bauknecht Kochfeld

Name oder Warenzeichen des Lieferanten	Bauknecht
Typ / Verkaufsbezeichnung	CHR 6642 IN
Kochfeld	4 / - / -
Anzahl der Kochzonen / Kochplatten / Gasbrenner	-
ActiveCook Modus	-
Displaytyp	-
Anzahl ActiveCook Modus Kochzonen	- / - / -
ActiveHeat / Active Frying / Active Grilling	-
Kochassistent: Anzahl Kochprogramme	-
Beheizungsart: Induktion / Strahlungskochzonen / Gas	- / - / -
Flexible Kochzonen	-
<b>Automatikfunktionen</b>	
Kochen [Simmern]	-
Schmelzen	-
Warmhalten	-
Kochen	-
Mokka	-
DUO-Kochzonen	2
3-Kreis-Kochzonen	-
Stufenlos automatisch regelbare Kochzonen	-
Lightronic-Regelung	-
7-Takt geregelte Kochzonen	-
Blitzkochzonen	-
Topferkennung / Induktion	- / -
Digital-Display	-
Restwärmeanzeige	•
Kindersicherung	-
Timer	-
Flacher Rahmen / Profilrahmen / rahmenlos / schmal	• / - / - / -
Ausschnittmaße Höhe	mm 52
Ausschnittmaße Breite x Tiefe	mm 560 x 490
Gesamtanschlusswert	kW 7
Gewicht netto	kg 8

## Erläuterungen

- = vorhanden bzw. ja
- = nicht vorhanden bzw. nein

Technische Änderungen vorbehalten.  
Stand der Tabellenangaben 08/24.

Liefermöglichkeiten, Änderungen und Irrtümer vorbehalten - Stand 30.08.2024

Figure 6: Technical data sheet for the Bauknecht Heko 600 Pyro Black, detailing oven and hob specifications and dimensions (German).

## 3.3 Electrical Connection

The appliance requires a dedicated electrical circuit. The voltage is 2.2E+2 Volts. All electrical connections must be performed by a qualified electrician in accordance with local regulations.

## 4. OPERATING INSTRUCTIONS

## 4.1 Oven Operation (HIS5 EP8VS3 ES)

The oven is controlled via an electronic display and rotary knobs. The display shows current settings and cooking progress.



Figure 7: Close-up of the oven's electronic display and control knobs.



Figure 8: Detailed view of the oven's display showing temperature and mode settings.

### 4.1.1 Selecting a Cooking Function

1. Turn the function selector knob to choose your desired cooking mode (e.g., Hot Air, Top/Bottom Heat, Grill, Convection, Pizza Function, Slow Cooking).
2. Turn the temperature selector knob to set the desired temperature. The electronic display will show the selected settings.
3. Press the start button (if available) or wait for the oven to begin heating.

### 4.1.2 Using Special Functions

- **Pizza Function:** Ideal for achieving a crispy base. Select this mode and set the recommended temperature for pizza.
- **Slow Cooking:** For tender results, select the slow cooking function and set a lower temperature for longer cooking times.

## 4.2 Hob Operation (CHR 6642 IN)

The glass-ceramic hob features a touch control panel for easy and precise adjustment of cooking zones.



Figure 9: The glass-ceramic hob integrated into a kitchen countertop.

#### 4.2.1 Activating a Cooking Zone

1. Place a suitable pot or pan on the desired cooking zone.
2. Touch the power button to turn on the hob.
3. Select the desired cooking zone by touching its corresponding control.
4. Adjust the heat level using the '+' and '-' touch controls.

#### 4.2.2 Using the Dual Circuit Cooking Zone

The hob includes a dual circuit cooking zone, suitable for larger pots or roasting dishes.



Figure 10: Close-up of the roasting dish dual circuit cooking zone on the hob.



Figure 11: Another close-up showing the dual circuit cooking zone in detail.

- To activate the extended area, select the dual circuit zone and then touch the specific expansion control.

#### 4.2.3 Child Lock

- To activate the Child Lock, touch and hold the lock symbol until an indicator light appears. This prevents accidental changes to settings or activation.

- To deactivate, touch and hold the lock symbol again.

#### 4.2.4 Residual Heat Indicator

After a cooking zone is turned off, an 'H' (or similar symbol) will appear on the display to indicate that the zone is still hot. Do not touch the surface until the indicator disappears.

### 5. MAINTENANCE AND CLEANING

---

#### 5.1 Oven Cleaning (Pyrolysis)

The oven features a Pyrolysis self-cleaning function:

1. Remove all oven accessories (racks, trays, side rails) before starting pyrolysis.
2. Wipe away any large food spills or residues.
3. Close the oven door.
4. Select the Pyrolysis function from the oven menu. Follow the on-screen prompts to start the cycle.
5. During the cycle, the oven will reach very high temperatures, burning food residues to ash. Ensure good ventilation in the kitchen.
6. Once the cycle is complete and the oven has cooled down, wipe away the ash with a damp cloth.

#### 5.2 Hob Cleaning

The glass-ceramic hob should be cleaned regularly to maintain its appearance and performance.

- Ensure the hob is cool before cleaning. The residual heat indicator should be off.
- Use a soft cloth or sponge with a specialized glass-ceramic hob cleaner.
- For stubborn stains, use a hob scraper designed for glass-ceramic surfaces.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the glass surface.
- Wipe dry with a clean cloth to prevent water marks.

### 6. TROUBLESHOOTING

---

If you encounter issues with your Bauknecht Heko 600 Pyro Black, refer to the following common troubleshooting steps. For more complex problems, contact a qualified service technician.

- **Appliance Not Turning On:** Check if the appliance is properly plugged in and if there is power to the outlet. Check your household fuse box or circuit breaker.
- **Oven Not Heating:** Ensure the door is fully closed. Verify that a cooking function and temperature have been correctly selected.
- **Hob Not Heating:** Ensure the hob is powered on and the specific cooking zone is activated. Check if the Child Lock is engaged.
- **Error Codes on Display:** If an error code appears, consult the full product manual (usually provided with the appliance) or contact Bauknecht customer support, providing the exact code displayed.
- **Uneven Cooking:** Ensure food is placed correctly in the oven and that appropriate cooking functions (e.g., Hot Air for even distribution) are selected.

### 7. SPECIFICATIONS

Detailed technical specifications for the Bauknecht Heko 600 Pyro Black oven and hob combination.

Feature	Specification
Brand	Bauknecht
Model Name	HEKO 600 Pyro Black
Item Model Number	859800008706
Color	Black/Silver
Material	Glass
Oven Capacity	65 Liters
Energy Efficiency Class	A+
Hob Type	Glass Ceramic
Number of Cooking Zones	4
Control Type	Touch (Hob), Rotary Knobs & Electronic Display (Oven)
Installation Method	Built-in
Voltage	2.2E+2 Volts
Item Weight	28.2 Kilograms
Product Dimensions (Oven)	65D x 59.5W x 59.5H centimeters
Package Dimensions	67.5 x 65 x 62 cm

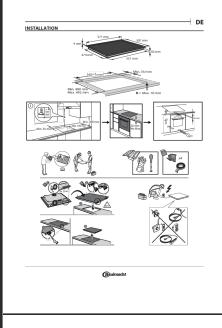
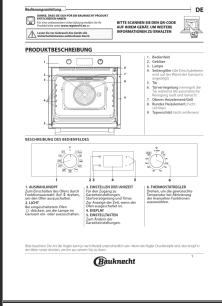
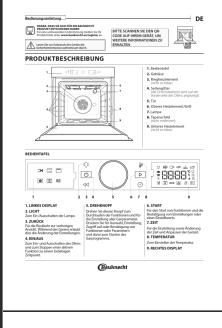
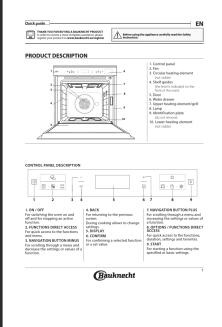
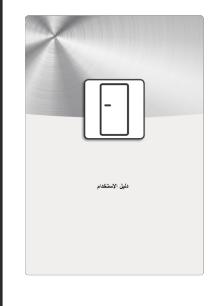
## 8. WARRANTY AND SUPPORT

Bauknecht appliances are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your product or visit the official Bauknecht website for your region.

If you require technical assistance, spare parts, or service, please contact Bauknecht customer support. When contacting support, please have your appliance's model name (HEKO 600 Pyro Black) and item model number (859800008706) readily available.

- **Manufacturer:** Bauknecht
- **Website:** [www.bauknecht.com](http://www.bauknecht.com) (Please check for your regional website)

## Related Documents - HEKO 600 Pyro Black

	<p><a href="#">Bauknecht Induktionskochfeld Installations- und Bedienungsanleitung</a></p> <p>Umfassende Anleitung zur Installation, Bedienung und Wartung Ihres Bauknecht Induktionskochfelds, inklusive Flexi-Duo-Technologie und Fehlerbehebung.</p>
	<p><a href="#">Bauknecht Oven Owner's Manual: Features, Functions, and Maintenance</a></p> <p>A comprehensive guide for Bauknecht ovens, detailing product features, accessories, various cooking functions (Conventional, Forced Air, Grill, etc.), cleaning procedures (SmartClean, Pyro), maintenance tips, and troubleshooting advice. Includes detailed cooking tables for optimal results.</p>
	<p><a href="#">Bauknecht Backofen Bedienungsanleitung: Funktionen, Gartabellen &amp; Tipps</a></p> <p>Umfassende Bedienungsanleitung für Bauknecht Backöfen, inklusive aller Funktionen, detaillierter Gartabellen und praktischer Tipps zur optimalen Nutzung und Pflege.</p>
	<p><a href="#">Bauknecht Oven User Manual &amp; Quick Guide</a></p> <p>Discover how to make the most of your Bauknecht oven with this comprehensive user manual and quick guide. It details product features, control panel functions, and essential operating procedures. Explore a wide range of cooking functions, including manual settings, specialized programs like My Menu, and advanced techniques such as steam cooking. The guide also provides practical advice on using accessories, detailed cooking tables for various dishes, and step-by-step instructions for cleaning and maintenance. For optimal performance and support, users are encouraged to register their appliance.</p>
	<p><a href="#">Bauknecht Induction Hob with Integrated Extractor - Installation and User Manual</a></p> <p>Comprehensive guide for the Bauknecht BVH 2065B F KIT induction hob with integrated downdraft extractor. Covers safety, installation, operation, and maintenance for optimal performance.</p>
	<p><a href="#">Bauknecht BKSI 18VS2 دليل المستخدم لجهاز</a></p> <p>يقدم إرشادات مفصلة حول الاستخدام الآمن، الصيانة، التنظيف، واستكشاف الأخطاء وإصلاحها لضمان الأداء الأمثل.</p>

