

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ARCADE1UP](#) /
- › [Arcade1Up PAC-Man Plus Deluxe Arcade Machine User Manual](#)

## ARCADE1UP PAC-A-405411

# Arcade1Up PAC-Man Plus Deluxe Arcade Machine User Manual

Model: PAC-A-405411

## INTRODUCTION

Welcome to the world of classic arcade gaming with your new Arcade1Up PAC-Man Plus Deluxe Arcade Machine. This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your arcade cabinet. Designed for home use, this machine brings the authentic arcade experience with 14 classic games, a 17-inch color monitor, and real-feel joysticks and buttons.



Figure 1: The Arcade1Up PAC-Man Plus Deluxe Arcade Machine, showcasing its classic design and vibrant graphics.

## WHAT'S IN THE BOX

Upon opening your package, please verify that all components are present and undamaged. The standard contents include:

- Arcade Machine Cabinet Components
- Control Panel Assembly
- 17-inch BOE Color Monitor
- Light-Up Marquee
- Power Adapter
- Hardware Kit (screws, bolts, etc.)
- Instruction Manual (this document)
- Wall Anchor System



Figure 2: The product packaging, indicating the contents and overall design.

## SETUP

Assembly typically takes approximately 2-3 hours. It is recommended to have two people for certain steps, especially when joining the upper and lower sections.

### 1. Unpacking and Preparation

1. Carefully unpack all components from the box. Keep packaging materials for potential future transport or returns.
2. Identify all parts using the included parts list. Ensure no pieces are missing or damaged.
3. Choose a suitable location for the arcade machine. Ensure it is on a flat, stable surface and near a power outlet.

### 2. Cabinet Assembly

1. Follow the step-by-step pictorial instructions provided in the separate assembly guide. Pay close attention to the orientation of each panel.
2. Assemble the base and side panels first, ensuring all screws are tightened securely but do not overtighten.
3. Install the monitor into its designated slot, connecting the necessary cables as instructed.
4. Attach the control panel, ensuring all joystick and button connections are firm.
5. Mount the light-up marquee at the top of the cabinet.

### 3. Power Connection

1. Once the cabinet is fully assembled, connect the power adapter to the machine's power input port.
2. Plug the power adapter into a standard wall outlet.

### 4. Wall Anchoring (Recommended)

1. For safety and stability, especially in households with children or pets, utilize the included wall anchor system.
2. Follow the specific instructions for installing the wall anchors to prevent tipping.

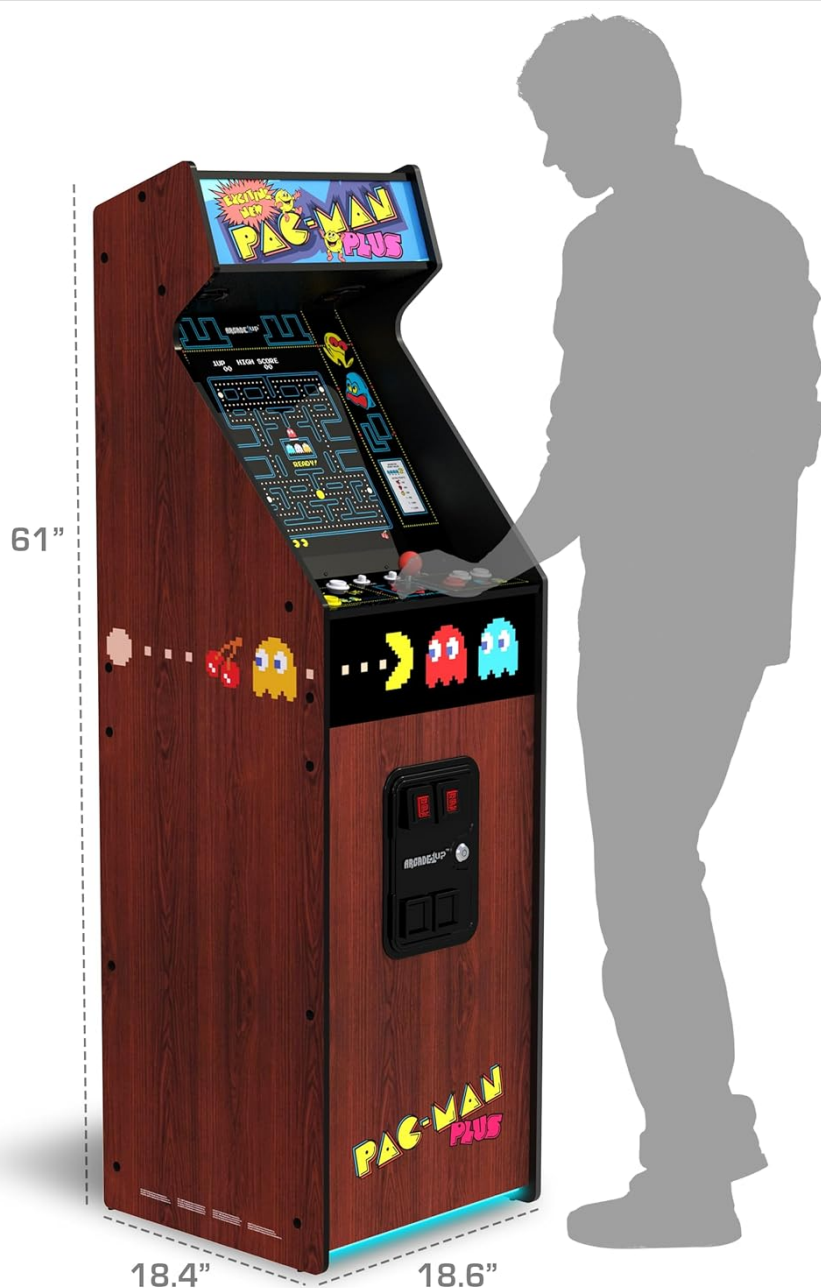


Figure 3: The Arcade1Up machine with approximate dimensions, illustrating its size relative to a person.

## OPERATING INSTRUCTIONS

Your Arcade1Up PAC-Man Plus Deluxe machine is designed for intuitive operation.

### 1. Powering On/Off

1. To power on, ensure the machine is plugged in and locate the power switch, usually on the back or bottom of the control panel. Flip the switch to the 'ON' position.
2. To power off, flip the power switch to the 'OFF' position.

### 2. Game Selection

1. Upon startup, the machine will display a game selection menu.
2. Use the joystick to navigate through the list of 14 classic games.
3. Press the 'START' button (typically Player 1 Start) to select and launch a game.

### 3. Gameplay

1. **Joystick:** Controls character movement in most games.
2. **Buttons:** Perform actions such as firing, jumping, or other game-specific functions. Refer to the on-screen instructions or game-specific guides for button layouts.
3. **Coin Door Buttons:** Press these buttons to simulate inserting coins, allowing you to start a new game or add credits.

### 4. Volume Adjustment

1. Locate the volume control, usually a dial or button on the control panel or rear of the machine. Adjust to your preferred sound level.

### 5. Wi-Fi Leaderboards

1. This machine features Wi-Fi connectivity for online leaderboards.
2. Access the Wi-Fi settings through the main menu to connect to your home network.
3. Once connected, your high scores in supported games will be uploaded to the global leaderboards.





# ARCADE1UP

14 GAMES INCLUDED

PAC-MAN

PAC-MANIA

PAC-MAN<sup>TM</sup>  
PLUS

PAC-LAND

SUPER  
PAC-MAN

PAC & PAL

Galaga

DISDUBS

Galaxian

DISDUBS 2

Galaga  
88

MADDPY

ROMBERS

ROLLING  
THUNDER

Figure 4: The Arcade1Up machine displaying the list of 14 included classic games.



Figure 5: Top-down view of the control panel and screen, showing the joystick, buttons, and game display.

## MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your arcade machine.

### 1. Cleaning

1. **Cabinet:** Wipe down the cabinet surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
2. **Screen:** Use a microfiber cloth specifically designed for electronics screens. If necessary, lightly dampen the cloth with water or a screen-safe cleaner. Do not spray cleaner directly onto the screen.
3. **Control Panel:** Gently wipe the joystick and buttons with a damp cloth. Ensure no liquid seeps into the button mechanisms.

### 2. Dusting

1. Regularly dust the machine, especially around vents and openings, to prevent dust buildup which can affect internal components.

### 3. Power Cord Inspection

1. Periodically inspect the power cord for any signs of damage, fraying, or kinks. If damage is found, discontinue use and contact customer support.

## TROUBLESHOOTING

This section addresses common issues you might encounter with your arcade machine.

Problem	Possible Cause	Solution
Machine does not power on.	Power cord not connected; Power switch off; Outlet issue.	Ensure power cord is securely plugged into machine and outlet. Verify power switch is ON. Test outlet with another device.
No image on screen.	Monitor cable loose; Monitor power issue.	Check monitor cable connections inside the cabinet. Ensure machine is powered on.
No sound.	Volume too low; Speaker cable loose.	Adjust volume control. Check speaker cable connections.
Joystick or buttons unresponsive.	Loose connections; Damaged component.	Check internal wiring for the affected control. If problem persists, contact customer support.
Wi-Fi connection issues.	Incorrect password; Router too far; Network interference.	Double-check Wi-Fi password. Move machine closer to router or reduce interference. Restart router.

If you encounter an issue not listed here or if the suggested solutions do not resolve the problem, please contact Arcade1Up Customer Support.

## SPECIFICATIONS

**Model Number:** PAC-A-405411

**Product Dimensions:** 18.6 x 18.4 x 61 inches (L x W x H)

**Item Weight:** Approximately 57.2 pounds

**Monitor:** 17-inch BOE Color Monitor

**Games Included:** 14 Classic Games (PAC-Man Plus, PAC-Man, PAC-Land, Galaga, Dig Dug, Dig Dug II, PAC-Mania, PAC-Pal, Galaga '88, Mappy, Galaxian, Super PAC-Man, Rompers, Rolling Thunder)

**Features:** Wi-Fi Leaderboards, Light-Up Marquee, 3D Faux Molded Coin Door, Exclusive Cabinet Under Glow, Dual Speakers

**Manufacturer:** Tastemakers LLC

**Release Date:** October 8, 2024



## WARRANTY INFORMATION

Arcade1Up products typically come with a limited manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms, duration, and claim procedures, please refer to the warranty card included with your product or visit the official Arcade1Up website. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For technical assistance, parts replacement, or any other inquiries, please contact Arcade1Up Customer Support.

**Online Support:** Visit the official Arcade1Up website for FAQs, troubleshooting guides, and contact forms.

**Brand Store:** Visit the [ARCADE1UP Store on Amazon](#)

**Customer Service:** Refer to the contact information provided in your product packaging or on the official website.



Please have your model number (PAC-A-405411) and proof of purchase ready when contacting support.

## IMPORTANT NOTE ON VIDEOS

The provided product data did not include specific video URLs or creator type information, which is necessary to embed official product videos. Therefore, no videos could be embedded in this manual.

© 2025 ARCADE1UP. All rights reserved. PAC-MAN™ & ©Bandai Namco Entertainment Inc.

### Related Documents - PAC-A-405411

	<p><a href="#">Arcade1Up Pac-Man Deluxe Owner's Manual - Safety, Setup, and Troubleshooting</a></p> <p>This official owner's manual provides essential safety instructions, installation guidance, game control details, and troubleshooting tips for the Arcade1Up Pac-Man Deluxe arcade machine.</p>
	<p><a href="#">Arcade1Up 40th Anniversary Cabinet Assembly Guide</a></p> <p>Comprehensive assembly instructions for the Arcade1Up 40th Anniversary arcade cabinet. Includes a detailed parts list, tools required, step-by-step guidance with textual descriptions of diagrams, and safety information.</p>



[Arcade1Up Time Crisis Deluxe Owner's Manual: Setup, Controls, and Safety Guide](#)

Comprehensive owner's manual for the Arcade1Up Time Crisis Deluxe arcade machine. Learn about safety precautions, installation, game controls for Time Crisis, Point Blank, and Steel Gunner, troubleshooting tips, and product specifications.



**Arcade1Up-PacMan**  
User Manual • Uživatelský manuál •  
Ужывателський мануал • Hozzávalósi útmutató •  
Benutzerhandbuch

[Arcade1Up Pac-Man Jr. User Manual](#)

User manual for the Arcade1Up Pac-Man Jr. arcade machine, covering setup, safety precautions, game modes, controls, and anti-tip device installation.



[Arcade1Up Counter-Cade Owners Manual - Safety, Controls, and Troubleshooting](#)

Comprehensive owners manual for the Arcade1Up Counter-Cade, detailing safety instructions, installation, game controls for Pac-Man, Space Invaders, Dig Dug, and more, plus troubleshooting tips.



[Arcade1Up Class of 81 Owner's Manual - MSP-A-10171](#)

Comprehensive owner's manual for the Arcade1Up Class of 81 (MSP-A-10171) featuring safety instructions, troubleshooting, game settings, and control layouts for classic arcade games.