

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ATOZEE](#) /

› [ATOZEE YQ10S 10.1-inch Android 14 Tablet User Manual](#)

ATOZEE ATOZEEYQ10S

ATOZEE YQ10S 10.1-inch Android 14 Tablet User Manual

Model: ATOZEEYQ10S | Brand: ATOZEE

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your ATOZEE YQ10S 10.1-inch Android 14 Tablet. Please read it thoroughly to ensure proper use and to maximize your device's performance and longevity.

2. WHAT'S IN THE BOX

- ATOZEE YQ10S 10.1-inch Android 14 Tablet
- USB Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your tablet.



Figure 3.1: Front and back view of the ATOZEE YQ10S tablet, highlighting its sleek design and camera placement.

Key components typically include:

- **Power Button:** Located on the side, used to turn the tablet on/off or wake/sleep the screen.
- **Volume Buttons:** Adjust audio levels.
- **USB-C Port:** For charging and data transfer.
- **Headphone Jack:** For connecting wired headphones.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For taking photos and videos.
- **MicroSD Card Slot:** For expanding storage capacity.

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB charging cable to the tablet's USB-C port and

the other end to a compatible USB power adapter (not included) or a computer's USB port.

10.1 Inch 1280*800 IPS DISPLAY

10.1 Inches

1280*800 IPS

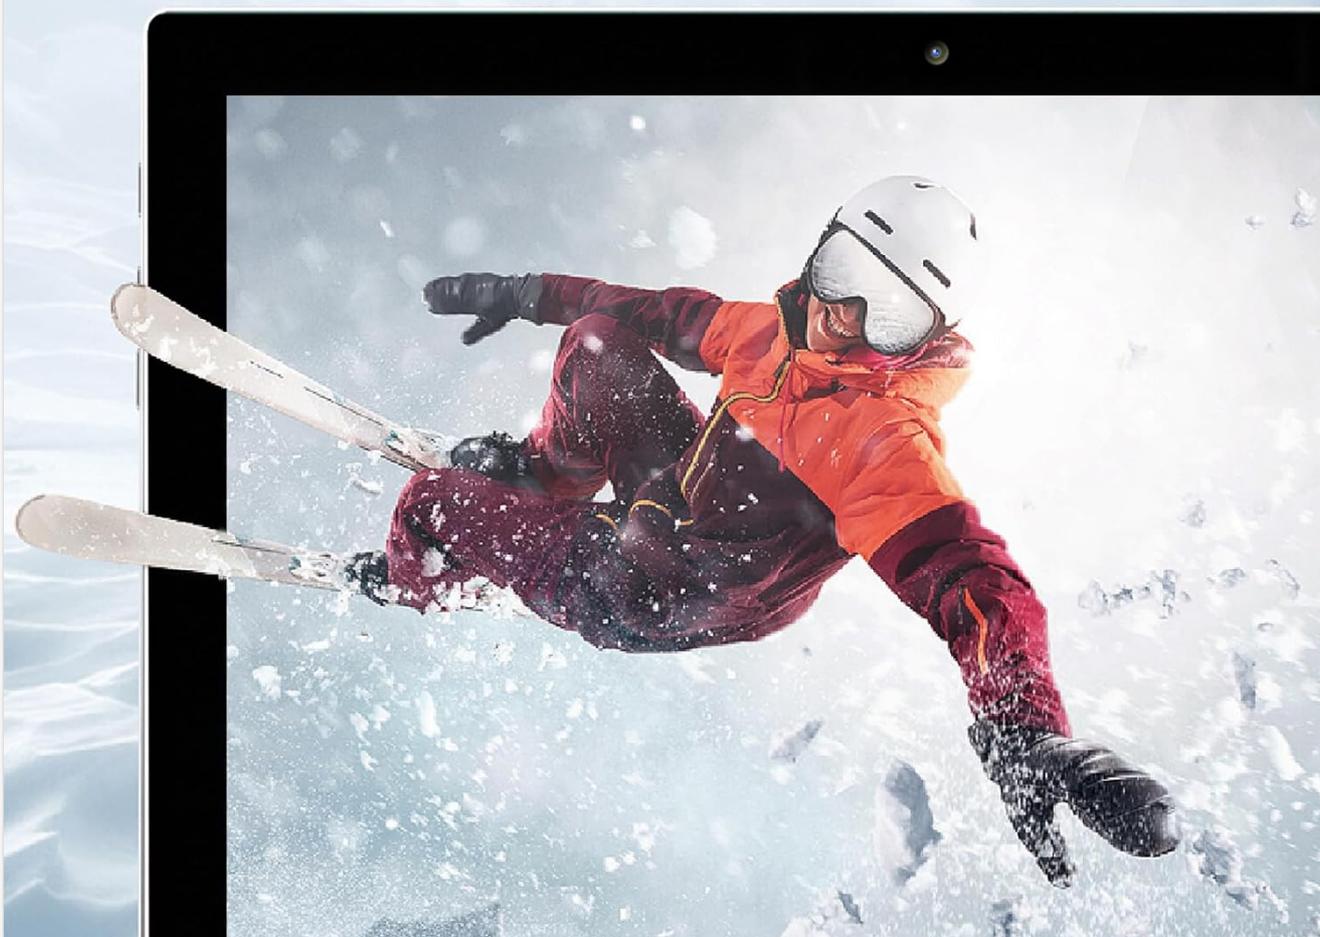


Figure 4.1: The tablet screen displaying a charging indicator, showing 75% battery charged.

The battery indicator on the screen will show charging status. A full charge typically takes several hours.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the ATOZEE logo appears.
- **To Power Off:** Press and hold the Power button until a menu appears, then select "Power off".
- **To Restart:** Press and hold the Power button until a menu appears, then select "Restart".
- **To Sleep/Wake:** Briefly press the Power button.

4.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.

3. Sign in with your Google account or create a new one. This is necessary to download apps from the Google Play Store.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password) for security.

4.4 Inserting a MicroSD Card

To expand storage, locate the MicroSD card slot on the side of the tablet. Gently insert a MicroSD card (up to 1024GB) into the slot until it clicks into place. The tablet will prompt you to format the card for use.

5. OPERATING THE TABLET

5.1 Navigating Android 14

Your tablet runs on Android 14, offering an intuitive user experience. Swipe up from the bottom to access the app drawer, swipe down from the top for quick settings and notifications, and use gestures or navigation buttons for Home, Back, and Recent Apps.



Figure 5.1: The tablet displaying its home screen with various app icons, including Google search bar and Play Store.

5.2 Wi-Fi Connectivity

To connect to Wi-Fi:

1. Go to **Settings > Network & internet > Internet**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

5.3 Bluetooth Pairing

To pair with Bluetooth devices:

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Turn on Bluetooth.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the "Available devices" list to pair.

5.4 Using the Camera

Open the Camera app from the home screen or app drawer. You can switch between the front (2MP) and rear (8MP) cameras, take photos, and record videos. Tap the screen to focus and press the shutter button to capture.



Figure 5.2: A person holding the tablet horizontally, watching content on the screen, demonstrating typical media consumption.

5.5 Display Settings and Reading Mode

Your tablet features a 10.1-inch 1280x800 HD IPS display. To adjust display settings:

- Go to **Settings > Display**.
- Adjust brightness, font size, and display size.
- Activate **Reading Mode** to reduce eye strain, especially during prolonged reading sessions. This mode optimizes backlight and color temperature.

5.6 Managing Storage

The tablet comes with 64GB of internal storage, expandable up to 1024GB with a MicroSD card. To check storage usage and manage files:

- Go to **Settings > Storage**.
- You can view how much space is used by apps, photos, videos, and other files.
- Move files to the MicroSD card to free up internal space.

5.7 Downloading Applications

Access the Google Play Store to download and install a wide variety of applications. Ensure you are signed in with your Google account.



Figure 5.3: The tablet screen showing "GMS Certification" and popular app icons like Instagram, YouTube, and Gmail, indicating access to Google services.

6. MAINTENANCE

6.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials, which can damage the display or finish.

6.2 Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not let the battery completely drain frequently.

- Use the provided charging cable for optimal charging.

6.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

7. TROUBLESHOOTING

| Problem | Possible Solution |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tablet does not turn on. | Ensure the tablet is charged. Connect it to a power source and wait a few minutes before attempting to power on again. If unresponsive, try holding the power button for 10-15 seconds. |
| Slow performance or apps freezing. | Close unused apps, clear cache, or restart the tablet. Ensure sufficient storage space is available. Consider reducing the number of background processes. |
| Wi-Fi connection issues. | Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal. Re-enter the Wi-Fi password if necessary. |
| Battery drains quickly. | Reduce screen brightness, close background apps, disable unused features like Bluetooth or GPS, and check for apps consuming excessive power in battery settings. |
| Tablet not charging. | Verify the charging cable and adapter are securely connected and undamaged. Try a different compatible cable and adapter. Ensure the charging port is clean. |

8. SPECIFICATIONS

Detailed technical specifications for the ATOZEE YQ10S tablet:

| Feature | Detail |
|------------------------|------------------------------------|
| Brand | ATOZEE |
| Model Name | ATOZEEYQ10S |
| Operating System | Android 14 |
| Screen Size | 10.1 Inches |
| Screen Resolution | 1280 x 800 pixels (HD IPS) |
| Processor | Quad-Core (ATOZEE Processor Brand) |
| RAM | 8GB (6GB Expand Memory) |
| Internal Storage (ROM) | 64GB |
| Expandable Storage | Up to 1024GB via MicroSD card |

| Feature | Detail |
|----------------------------|------------------------------|
| Rear Camera | 8 MP |
| Front Camera | 2 MP |
| Wireless Type | 802.11n (Wi-Fi 6 compatible) |
| Bluetooth | Yes |
| Battery Capacity | 6000mAh Lithium Ion |
| Average Battery Life | 7-13 Hours (usage dependent) |
| Item Weight | 1 pound |
| Product Dimensions (LxWxH) | 9.6 x 6.7 x 0.3 inches |

New upgraded version of **Android 14**

New upgraded version of Android 14 tablet is equipped with a powerful Quad-Core CPU, providing smooth and fast performance. It uses a low-power process to ensure the lowest power consumption and heat generation.

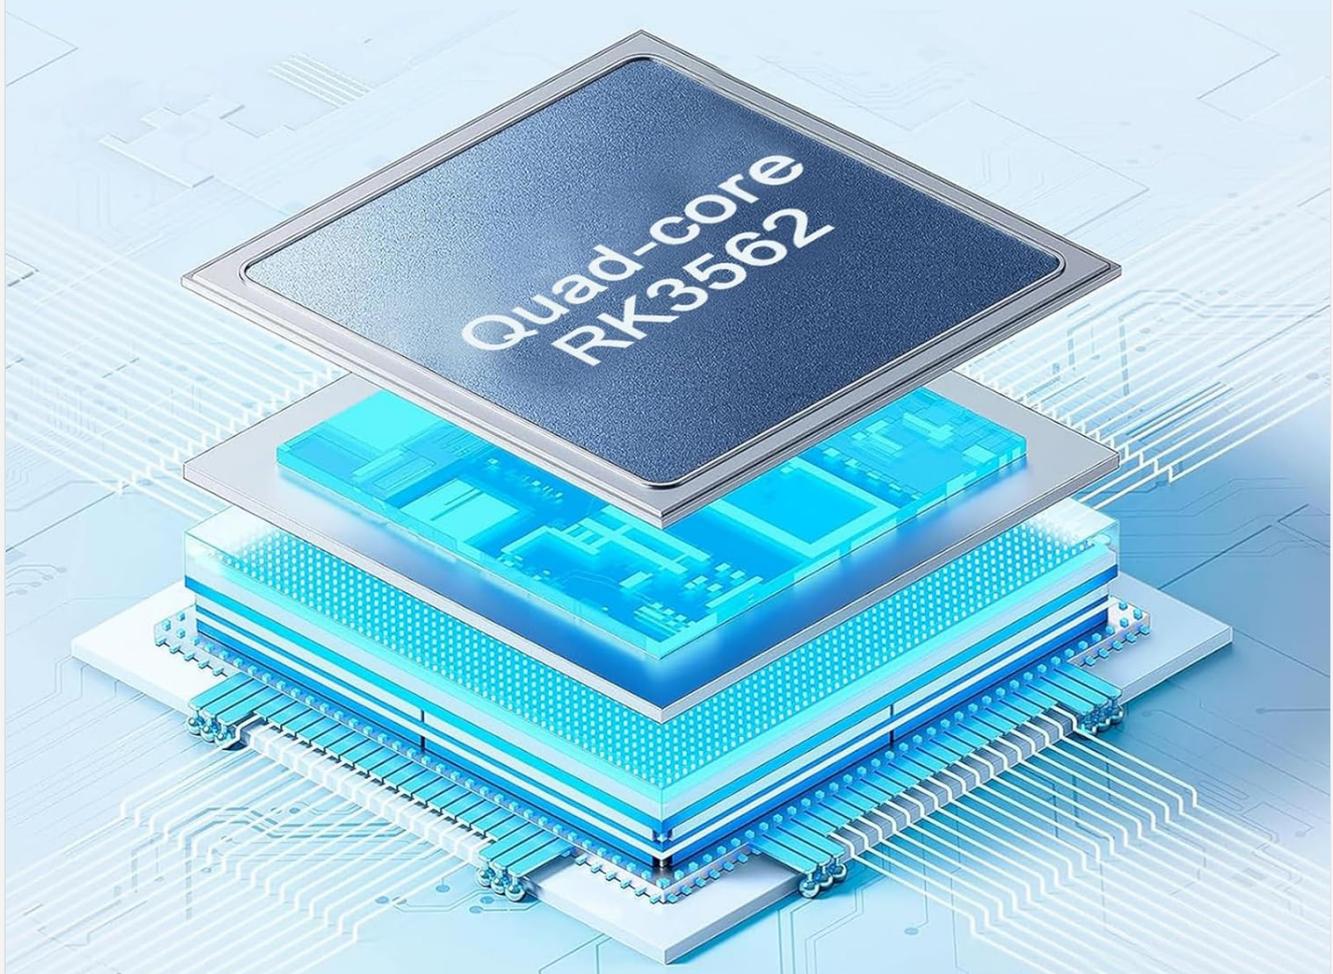


Figure 8.1: An illustrative diagram of the Quad-core RK3562 processor, highlighting its layered architecture for smooth performance.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official ATOZEE support website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in this manual, please contact ATOZEE customer service for assistance.



© 2025 ATOZEE. All rights reserved.

Related Documents - ATOZEEYQ10S

| | |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Atozee Q3K Kids Tablet: User Manual and Specifications</p> <p>Comprehensive user manual for the Atozee Q3K kids tablet, detailing specifications, features, port layout, and FCC compliance information. Features Android 14 (Go edition) and a 7-inch display.</p> |
|  | <p>AT70K Kids Tablet User Manual</p> <p>User manual for the AT70K Kids Tablet, detailing specifications, device layout, and basic operation. Includes FCC statement.</p> |