

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [AMZBABYCHEF](#) /
- > [AMZBABYCHEF 10-in-1 Baby Bottle Warmer Instruction Manual](#)

AMZBABYCHEF B0DG59P44T

AMZBABYCHEF 10-in-1 Baby Bottle Warmer Instruction Manual

Model: B0DG59P44T

INTRODUCTION

Thank you for choosing the AMZBABYCHEF 10-in-1 Baby Bottle Warmer. This versatile device is designed to simplify feeding routines by offering multiple functions including fast warming, thawing, steaming, food heating, and a 24-hour keep warm feature. It is equipped with precise temperature control, a night light, and a memory function for convenience and safety. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: Overview of the 10-in-1 multi-function baby bottle warmer, showing icons for Fast Warming, Thawing, Food Heating, Steaming, 24H Keep Warm, Timer, Adjustable Temp, Auto Shut-off, Night Light, and Memory Function.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in

any manner.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the water level is appropriate for the selected function to prevent dry burning.
- Always check the temperature of the milk or food before feeding to a baby.

PRODUCT OVERVIEW

Components

- Main Warmer Unit
- Bottle Basket/Lifting Rack
- Measuring Cup
- Lid
- Control Panel with Digital Display

Key Features

- **Fast Warming:** Heats milk in approximately 5-8 minutes.
- **10-in-1 Functionality:** Includes Fast Steaming, Water Bath Warming, 24H Keep Warm, Thaw, Steam, Food Heating, Adjustable Timer, Adjustable Temp, Memory Function, and Night Light Feeding.
- **Precise Temperature Control:** Adjustable to 1°F increments for accurate heating.
- **Nutrient Preservation:** Gentle water bath heating maintains milk's nutritional value.
- **Auto Shut-off:** Automatically turns off when milk is ready.
- **Night Light Function:** Provides gentle illumination for nighttime feedings.
- **Memory Function:** Remembers the last used setting.
- **Double Bottle Design:** Accommodates two bottles or various bottle types, storage bags, and food jars.



Image: The AMZBABYCHEF 10-in-1 Baby Bottle Warmer, showing its compact design and digital control panel.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, clean all removable parts (bottle basket, lid) with warm soapy water. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the warmer on a stable, flat, heat-resistant surface, away from direct sunlight or heat sources.
4. **Power Connection:** Ensure the warmer is unplugged before adding water or bottles.

OPERATING INSTRUCTIONS

General Operation:

1. Place the bottle(s) or food jar(s) into the bottle basket.
2. Add the appropriate amount of purified water into the warming chamber using the measuring cup. The water level should be below the bottle rim but cover the milk level.
3. Place the lid on the warmer.
4. Plug the warmer into a power outlet. The display will light up.

5. Select the desired function using the control panel buttons.
6. Adjust temperature and time as needed using the +/- buttons.
7. The warmer will begin operation and automatically shut off when the cycle is complete.
8. Carefully remove the bottle/jar using the bottle basket to avoid burns. Always check the temperature before feeding.

Specific Functions:

Fast Warming

This mode uses steam to quickly warm milk or formula. Ideal for urgent feeding needs.

Steps: Add water, place bottle, select "Fast Warming" mode. The warmer will heat rapidly to the preset temperature.



Image: Illustration of the fast warming function, showing two bottles being heated in a water bath with steam arrows indicating rapid heating.

Water Bath Warming / 24H Keep Warm

Gently warms milk to body temperature and can maintain it for up to 24 hours. This preserves nutrients and is perfect for night feedings.

Steps: Add water, place bottle, select "Keep Warm" mode, set desired temperature.

360° All-round Steaming

Maintain the bottles clean



Image: A mother feeding a baby at night, with the bottle warmer visible on a table, highlighting its night light function for convenient night feedings.

Thaw Function

Safely thaws frozen breast milk or baby food using a gentle water bath, preserving nutrients.

Steps: Add water, place frozen milk bag or food jar, select "Thaw" mode.



Gently Thawing

Use water to heat evenly, thawing breast milk quickly while preserving nutrients

Image: A hand placing a breast milk storage bag into the warmer for thawing, emphasizing the water bath method for nutrient preservation.

Steaming Function

Provides 360° all-round steaming to clean bottles, pacifiers, and small accessories.

Steps: Add water, place items in basket, select "Steam" mode.



Steaming Function

High-temperature steam steaming bottles & pacifiers to maintain clean

Image: The warmer with steam rising, indicating the steaming function for cleaning bottles and pacifiers.

Food Heating

Heats baby food jars to a suitable temperature, preserving flavor and nutrition.

Steps: Add water, place food jar, select "Food Heating" mode.



Baby Food Heating

Defrost, heat baby jars with one-touch

Image: A hand placing a baby food jar into the warmer, illustrating the food heating function.

Memory Function

The warmer remembers your last used setting, eliminating the need to reconfigure settings for repetitive tasks.

Steps: The device automatically saves the last used settings for convenience.



Smart Memory Function

Remember your last used setting, so that you don't have to go through the trouble of setting it up again

Image: Close-up of the warmer's control panel with a hand interacting with it, highlighting the smart memory function.

Video Demonstration:



Video: A demonstration of the AMZBABYCHEF Baby Bottle Warmer in use, showing how to add water, place a bottle, and select a warming setting. This video provides a visual guide to the product's operation.

MAINTENANCE AND CLEANING

- **Daily Cleaning:** After each use, unplug the warmer and allow it to cool. Empty any remaining water. Wipe the interior and exterior of the warming chamber with a damp cloth.
- **Deep Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up. To descale, mix 2 oz (60ml) of white vinegar with 4 oz (120ml) of cold water. Pour the solution into the warming chamber. Let it stand for 30 minutes or until the scale dissolves. Do not turn on the warmer during descaling. Empty the solution and rinse the chamber thoroughly with clean water.
- **Removable Parts:** The bottle basket and lid can be washed with warm soapy water and rinsed thoroughly.
- **Storage:** Store the clean, dry warmer in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.
Milk not warming or warming too slowly.	Insufficient water; incorrect setting; limescale buildup.	Add more water; select appropriate mode/temperature; descale the warmer.
Display shows an error code.	Low water level; overheating.	Add water to the chamber; unplug and allow to cool, then restart.
Unpleasant odor during use.	First use odor; residue from previous use.	This is normal for first use. Ensure the warmer is clean. Run a steaming cycle with clean water.

SPECIFICATIONS

- **Model:** B0DG59P44T
- **Material:** Plastic

- **Package Dimensions:** 9.21 x 8.15 x 5.87 inches
- **Item Weight:** 1.92 pounds
- **Functions:** Fast Warming, Water Bath Warming, 24H Keep Warm, Thaw, Steam, Food Heating, Adjustable Timer, Adjustable Temp, Memory Function, Night Light.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact AMZBABYCHEF customer service directly. Contact details are typically provided on the product packaging or through the retailer's website.