

Manuals.plus /

› FOHERE /

› FOHERE Induction 16-Piece Pot Set with Removable Handle Instruction Manual

FOHERE 16-Piece Pot Set

FOHERE Induction 16-Piece Pot Set with Removable Handle Instruction Manual

Model: 16-Piece Pot Set

1. PRODUCT OVERVIEW

The FOHERE 16-Piece Induction Pot Set with Removable Handle is designed for versatile cooking and efficient storage. This set features a healthy ceramic non-stick coating and includes a variety of pots and pans suitable for different culinary needs.

Included Components:

- 1 x 26 cm Deep Frying Pan
- 1 x 20 cm Frying Pan
- 1 x 28 cm Frying Pan
- 1 x 18 cm Saucepan
- 1 x 20 cm Saucepan
- 1 x 20 cm Silicone Lid
- 1 x 26 cm Silicone Lid
- 1 x 18 cm Fridge Storage Lid
- 1 x 20 cm Fridge Storage Lid
- 2 x Removable Handles
- 5 x Pan Protectors (1 large, 2 medium, 2 small)

Ensemble de Cuisson de 16 Pièces



Poêle à frire profonde de 26 cm*1



Casserole de 18 cm*1



Poêle à frire de 20 cm*1



Casserole de 20 cm*1



Poêle à frire de 28 cm*1



Couvercle en silicone
26cm/20cm



Protège-poêles*5



Couvercle de rangement pour
réfrigérateur de 20 cm/18cm



Poignée détachable*2

Image: All components of the FOHERE 16-piece cookware set, including various pans, pots, lids, removable handles, and pan protectors.

2. KEY FEATURES

- **Healthy Ceramic Coating:** Made from advanced natural ceramic, this cookware is free from PFAS, PTFE, PFOA, lead, and cadmium, ensuring a healthy cooking experience. It offers a superior non-stick effect with

minimal oil.

- **Innovative Detachable Handles:** The handles feature a secure snap-to-detach mechanism, designed for safety and stability. Two silicone pads provide enhanced friction and support.
- **Optimal Storage Space:** The removable handles and stackable design allow for efficient storage, saving up to 70% of kitchen cabinet space.
- **Oven and Dishwasher Safe:** The cookware (without handles) is oven safe. The entire set is dishwasher safe for easy cleaning.
- **Multi-Cooktop Compatibility:** Suitable for induction, gas, electric, and ceramic cooktops.

Céramique Antiadhésive Pro

Non réactif, sans produits chimiques nocifs, pour une cuisine plus saine



Image: A frying pan with an egg sliding off, demonstrating the professional ceramic non-stick coating. Labels indicate it is free from PTFE, PFOA, lead, and cadmium.

Économie d'espace

Empiler pour économiser **70%** d'espace



Image: The cookware set stacked neatly, illustrating its space-saving design. An arrow indicates 70% space saving.

Lave-vaisselle sécurisé

Pas de souci pour le nettoyage



*Conseils : Choisir des détergents doux peut mieux préserver le revêtement

Image: Various pieces of the cookware set, including pots, pans, and lids, placed inside a dishwasher, indicating they are dishwasher safe.

Plus de friction, plus stable




Pousser pour détacher



Coussin en silicone à double couche & prise vers le haut



Augmente la friction
et le support

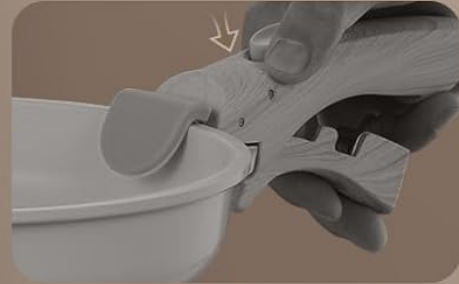

Appui accidentel et chute



Coussin en silicone à couche unique & prise vers le bas



Facile à glisser

Image: A detailed view of the removable handle mechanism, highlighting the double-layer silicone cushion and upward grip for increased friction and stable support, contrasting with less stable designs.

3. SETUP

3.1 Initial Cleaning

Before first use, wash all pots, pans, and lids with warm soapy water. Rinse thoroughly and dry completely. It is recommended to condition the non-stick surface by rubbing a small amount of cooking oil over the interior surface with a paper towel, then wiping off any excess.

3.2 Attaching and Detaching Handles

To attach a handle, align the handle's gripping mechanism with the rim of the pot or pan. Press the handle firmly against the cookware and ensure the snap mechanism engages securely. To detach, press the release button or lever on the handle and pull it away from the cookware. Always ensure the handle is securely attached before lifting or moving cookware.

Appuyer pour retirer

Poussez pour détacher, afin de prévenir les pressions accidentelles et les chutes



Image: A hand demonstrating how to press the button to detach the handle from a frying pan, emphasizing the secure mechanism to prevent accidental detachment.

4. OPERATING INSTRUCTIONS

4.1 Cooktop Compatibility

This cookware set is compatible with various heat sources:

- Gas Stoves
- Electric Stoves
- Induction Cooktops
- Ceramic Cooktops

Ensure the base of the cookware is centered on the heat source for even heating.

Adapté à plusieurs types de cuisinières



Gaz



Fours



Induction



Plaques électriques



Vitrocér amique

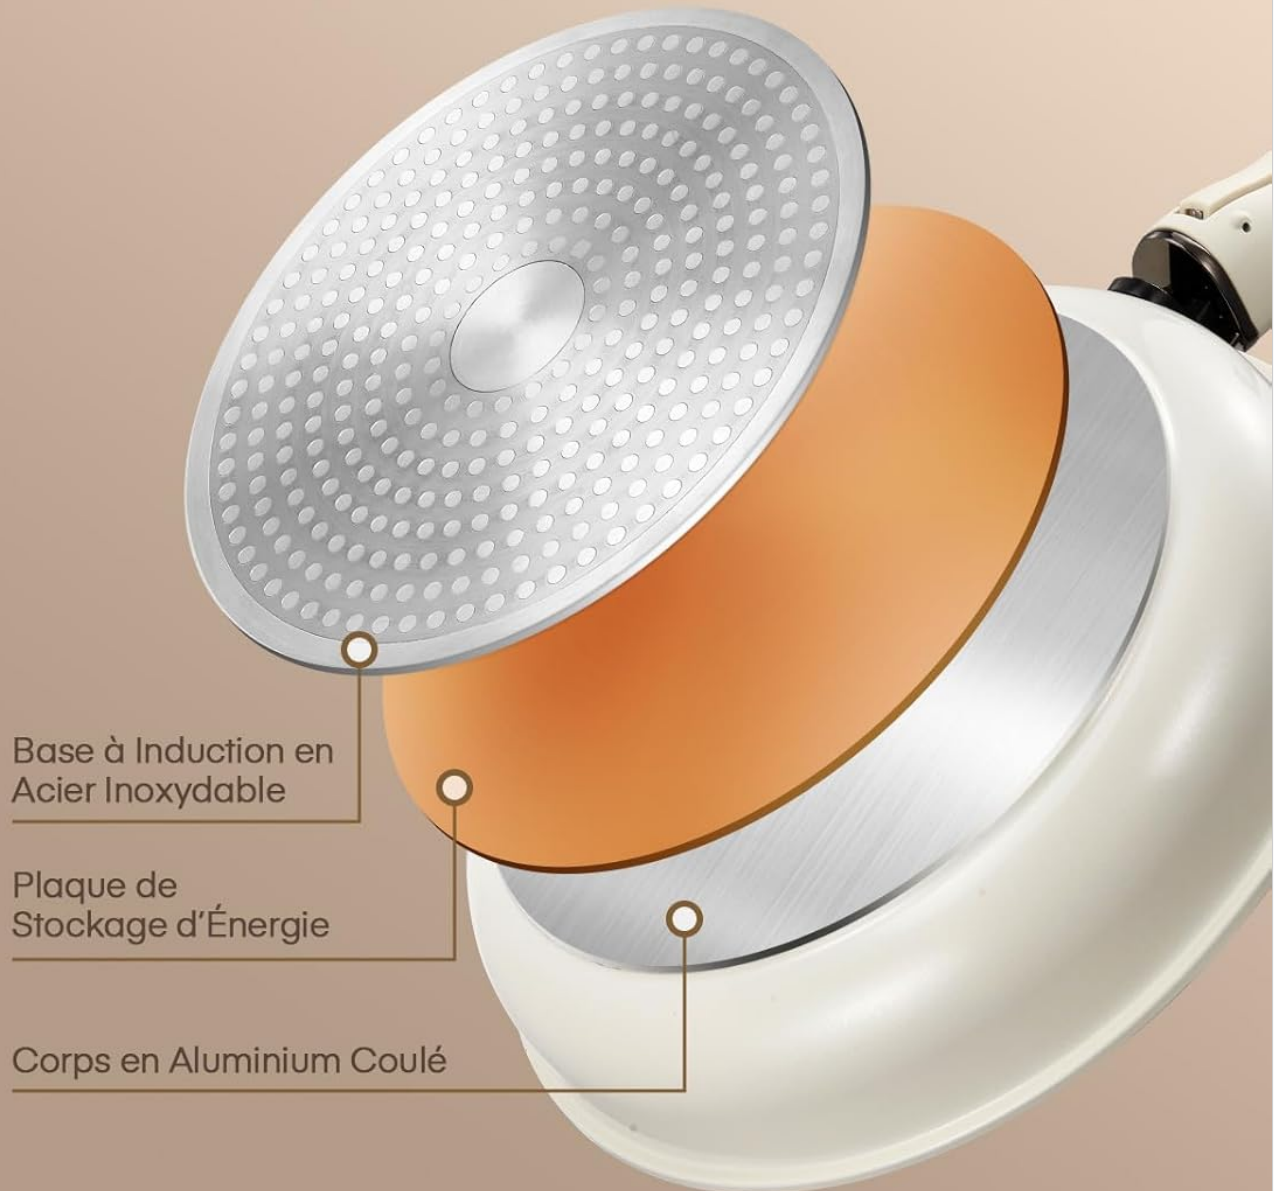


Image: A diagram illustrating the pan's construction (cast aluminum body, energy storage plate, stainless steel induction base) and icons indicating compatibility with gas, oven, induction, electric, and ceramic cooktops.

4.2 Cooking Recommendations

- **Heat Settings:** Use low to medium heat for most cooking tasks. High heat is generally not necessary due to the efficient heat distribution of the cookware and can damage the non-stick coating over time.
- **Oil/Butter:** While the non-stick coating allows for cooking with minimal oil, a small amount can enhance flavor

and browning.

- **Utensils:** Use wooden, silicone, or plastic utensils to protect the non-stick surface. Avoid metal utensils that can scratch the coating.
- **Oven Use:** Remove detachable handles before placing pots or pans in the oven. The cookware itself is oven safe.

5. CARE AND MAINTENANCE

5.1 Cleaning

- **Hand Washing:** For best results and to prolong the life of the non-stick coating, hand washing with warm soapy water and a soft sponge is recommended.
- **Dishwasher Use:** The cookware is dishwasher safe. However, frequent dishwasher use may reduce the lifespan of the non-stick coating. Ensure no sharp objects are in contact with the coating during washing.
- **Stubborn Food:** If food is stuck, soak the pan in warm soapy water for a few minutes before cleaning. Do not use abrasive cleaners, steel wool, or scouring pads.

Super Facile à Nettoyer

Le revêtement antiadhésif facilite le nettoyage après la cuisson.



Image: A hand rinsing a frying pan under a faucet, demonstrating how easily food residue washes off the non-stick surface.

5.2 Storage

Utilize the provided pan protectors when stacking cookware to prevent scratches and damage to the non-stick surface. Store handles separately or attached to the outermost pan for easy access.

6. TROUBLESHOOTING

- **Food Sticking:** Ensure you are using low to medium heat. Overheating can damage the non-stick coating. Re-condition the pan with a small amount of oil after cleaning.
- **Handle Not Attaching Securely:** Check for any debris in the handle mechanism or on the rim of the pan. Ensure the handle is correctly aligned before pressing to attach. If issues persist, inspect the handle for damage.
- **Discoloration:** Minor discoloration can occur over time, especially with high heat. This typically does not affect performance. Avoid using extremely high heat.

7. SPECIFICATIONS

Feature	Specification
Brand	FOHERE
Model	16-Piece Pot Set
Material	Aluminum (Cookware Body), Plastic (Handle)
Coating	Ceramic Non-Stick (Teflon-free, PFAS-free, PTFE-free, PFOA-free, lead-free, cadmium-free)
Color	White
Number of Pieces	16
Dishwasher Safe	Yes
Oven Safe	Yes (without handles)
Cooktop Compatibility	Induction, Gas, Electric, Ceramic
UPC	762765693889

8. WARRANTY AND SUPPORT

FOHERE products are manufactured to high-quality standards. For specific warranty information or support inquiries, please refer to the product packaging or contact FOHERE customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, please visit the official FOHERE website or contact their customer support channels.