

Furmax GD0418

Furmax Height Adjustable Gaming Desk User Manual

Model: GD0418

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your Furmax Height Adjustable Gaming Desk. Designed for both work and gaming, this desk features a sturdy T-shaped design, a carbon fiber surface, and convenient accessories to enhance your experience. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

PRODUCT FEATURES

- **Sturdy T-Shaped Design:** Constructed with durable metal, the T-shape design provides enhanced stability and strong load-bearing capacity. Adjustable foot pads ensure stability on uneven surfaces.
- **Adjustable Height:** Manually adjust the desk height from 22 inches to 31 inches to achieve your most comfortable working or gaming position, helping to relieve pressure during extended use.
- **Carbon Fiber Surface:** The desktop features a smooth, textured carbon fiber surface that is scratch-resistant and easy to clean, providing an optimal experience for gaming and office tasks.
- **Spacious Desktop:** Measuring 47 inches (D) x 23.6 inches (W) x 31 inches (H), this desk offers ample space for monitors and other equipment, suitable for use as a computer desk, home office workstation, or gaming table.
- **Convenient Accessories:** Includes a dedicated cup holder to keep beverages secure and a headphone hook to keep your gaming area organized and clutter-free.
- **Full Covered High-Precision Mouse Pad:** A large, full-coverage mouse pad is included to complement the carbon fiber surface, enhancing the gaming atmosphere.

SETUP AND ASSEMBLY

Assembly of the Furmax Gaming Desk is required. Please follow the included assembly instructions carefully. It is recommended to assemble the desk on a soft, clean surface to prevent scratches. Ensure all components are present before beginning assembly.

- Unpack all components and verify against the parts list provided in the separate assembly guide.

- Assemble the T-shaped legs to the desktop using the provided hardware. Ensure all screws are tightened securely but do not overtighten.
- Attach the cup holder and headphone hook to the designated locations on the desk.
- Adjust the foot pads at the base of the legs to ensure the desk is level and stable on your floor.

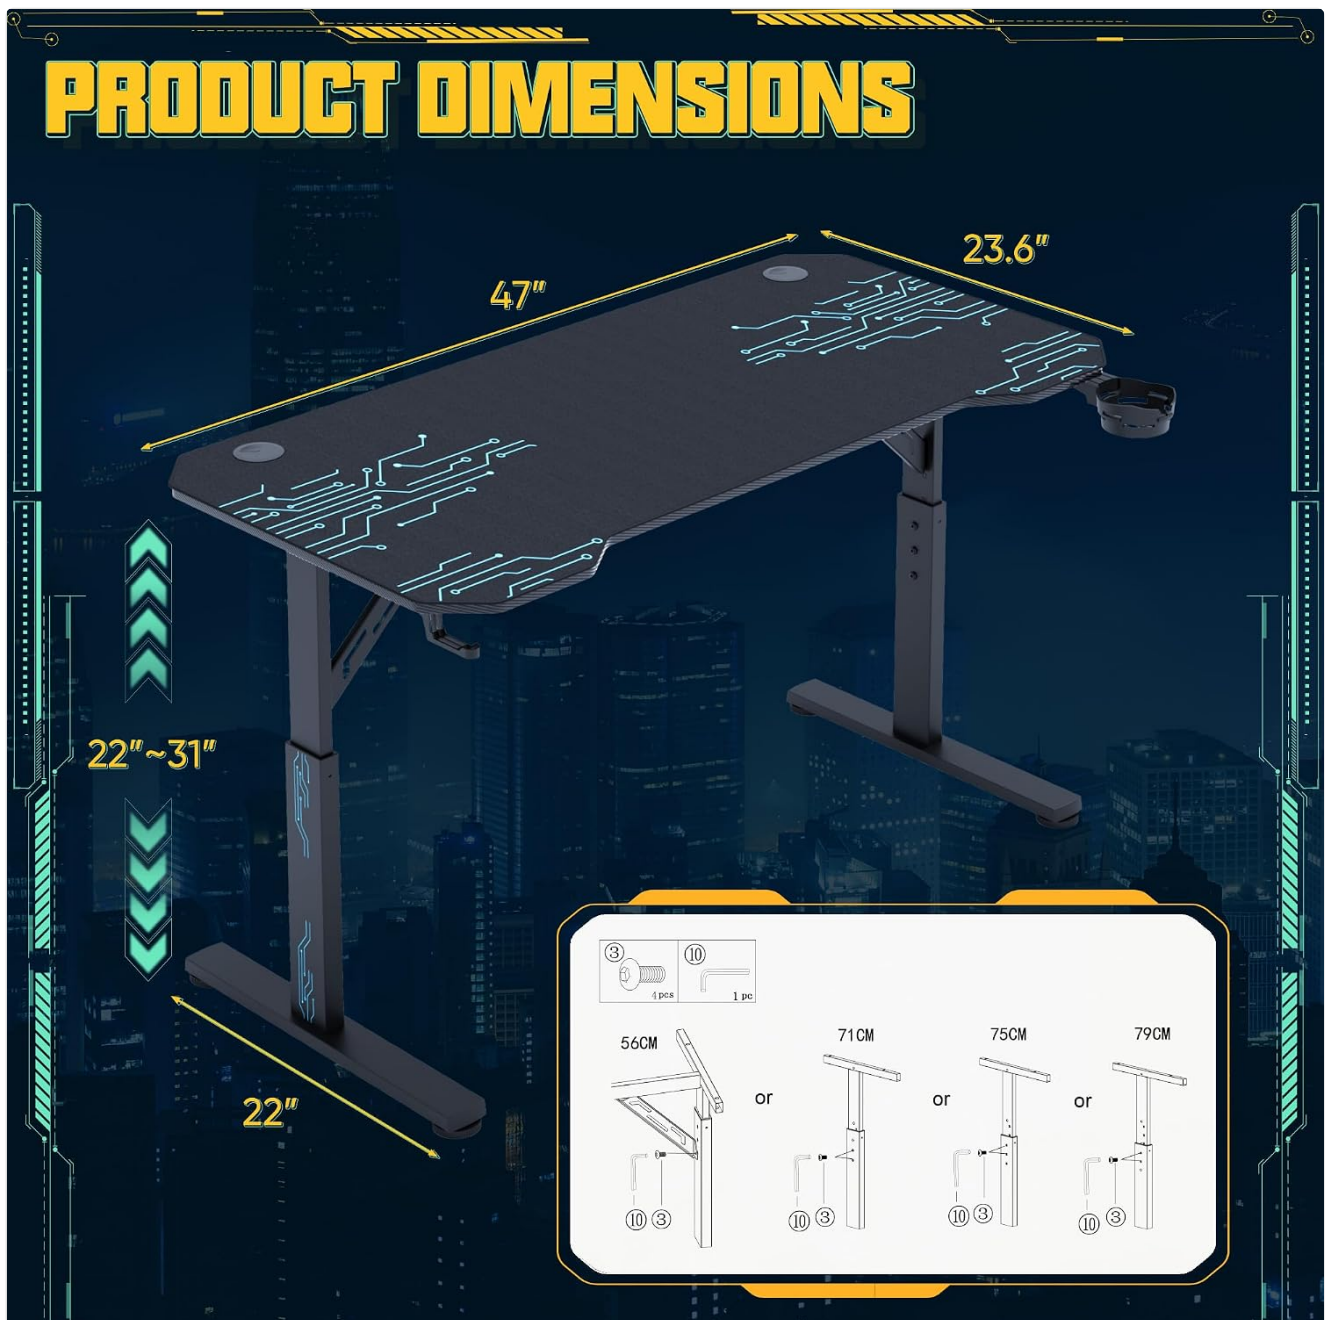


Figure 1: Product Dimensions and Assembly Overview.

PROFESSIONAL ACCESSORIES FOR FREE

CUP HOLDER: PUT BEVERAGES ON AND ENJOY



FULL COVERED HIGH-PRECISION MOUSEPAD



HEADPHONE HOOK: CONVENIENT FOR HEADPHONE STORAGE



ADJUSTABLE FOOT PAD



Figure 2: Included Accessories: Cup Holder, Headphone Hook, Mouse Pad, and Adjustable Foot Pad.

OPERATING INSTRUCTIONS

Adjusting Desk Height

The Furmax Gaming Desk features manual height adjustment. To change the desk height:

1. Clear the desktop of any heavy or unstable items to prevent them from falling during adjustment.
2. Locate the height adjustment pins or mechanisms on the desk legs.
3. Carefully lift or lower the desktop to the desired height. Ensure both sides are adjusted equally to maintain a level surface.
4. Secure the height adjustment mechanisms firmly in place at the chosen setting.

The desk can be adjusted between 22 inches (minimum) and 31 inches (maximum) in height.



Figure 3: Adjustable Height Feature.

MAINTENANCE

Regular maintenance will help prolong the life and appearance of your Furmax Gaming Desk.

- **Cleaning:** Wipe the carbon fiber surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Hardware Check:** Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary to maintain stability.
- **Foot Pads:** Ensure the adjustable foot pads are clean and free of debris to prevent scratching floors and maintain stability.

TROUBLESHOOTING

If you encounter any issues with your Furmax Gaming Desk, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Desk is wobbly or unstable.	Uneven floor; loose screws; improperly adjusted foot pads.	Adjust the foot pads to level the desk. Check and tighten all assembly screws. Ensure the desk is on a flat surface.
Difficulty adjusting height.	Adjustment pins not fully disengaged/engaged; obstruction.	Ensure the adjustment pins are fully disengaged before moving and fully engaged after setting the height. Check for any obstructions around the legs.
Mouse pad has creases.	Folded during packaging or storage.	Lay the mouse pad flat for a period, or gently roll it in the opposite direction of the crease. Warmth (e.g., from a hairdryer on low setting, held at a distance) can help relax the material.

SPECIFICATIONS

Feature	Detail
Brand	Furmax
Model Number	GD0418
Product Dimensions (D x W x H)	47"D x 23.6"W x 31"H
Color	Black
Base Material	Alloy Steel
Top Material Type	Carbon Fiber
Special Feature	Adjustable Height
Minimum Height	22 Inches
Maximum Height	31 Inches
Included Components	Headphone Hook, Cup Holder
Item Weight	37.27 Pounds
Required Assembly	Yes

CARBON FIBER SURFACE

Amazing Touch for Your Gaming Experience



Figure 4: Carbon Fiber Surface and T-Shape Design.

IMPORTANT SAFETY INFORMATION

Please adhere to the following safety guidelines to prevent injury or damage to the product:

- Always assemble the desk on a stable, level surface.
- Tighten all bolts and screws securely during assembly and periodically check for looseness.
- Do not adjust the desk height while in use or with heavy objects on the desktop.
- Keep the desk away from direct heat sources and open flames.
- Do not place excessively heavy objects on the edges of the desk to prevent tipping.
- Ensure proper cable management to avoid tripping hazards.

WARRANTY

The Furmax Height Adjustable Gaming Desk comes with a Limited Warranty. Please refer to the warranty card

included with your product for specific terms, conditions, and duration of coverage. This warranty typically covers manufacturing defects under normal use.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your Furmax Gaming Desk, please contact Furmax customer support. You can find contact information on the Furmax official website or through your purchase platform. For more information, visit the [Furmax Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DG5NZQRM>

More documents and user manuals: <https://manuals.plus/>