

## Lueptexx NA9-HKWH001-800W-4

# Lueptexx 800W Convection Wall Panel Heater Instruction Manual

Model: NA9-HKWH001-800W-4

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance and retain for future reference. Failure to follow these instructions may result in fire, electric shock, injury, or property damage.

- **Electrical Safety:** Ensure the heater is plugged into a properly grounded 120V AC outlet. Do not overload electrical circuits. An 800W heater draws approximately 6.7 amps, which is generally safe for standard 15-amp household circuits, but avoid using other high-wattage appliances on the same circuit.
- **Placement:** Do not place the heater directly below a power outlet. Maintain a minimum distance of 3 feet (0.9 meters) from combustible materials such as furniture, curtains, bedding, paper, clothes, and other objects.
- **Ventilation:** Do not cover the heater or obstruct its air inlets/outlets. This can lead to overheating and fire.
- **Water and Moisture:** Do not use the heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water. Never immerse the heater in water.
- **Children and Pets:** This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. The child lock feature should be activated in households with children or pets.
- **Overheat Protection:** The heater is equipped with an automatic overheat protection system that will shut off the unit if it becomes too hot. If this occurs, unplug the heater, allow it to cool, and check for any obstructions before restarting.
- **Tip-Over Protection:** The heater includes a tip-over safety switch that automatically turns off the unit if it is accidentally knocked over.
- **Materials:** Constructed with V0 flame retardant materials for enhanced safety.
- **Maintenance:** Always unplug the heater before cleaning or performing any maintenance.

## 2. PRODUCT OVERVIEW

The Lueptexx 800W Convection Wall Panel Heater is designed to provide efficient and quiet indoor heating. It utilizes advanced convection technology to distribute warmth evenly without a fan, reducing noise and maintaining air quality. This heater offers versatile installation options, functioning as either a wall-mounted unit or a portable heater with included wheels.

### **Key Features:**

- 800W Convection Heating: Fan-less design for quiet and uniform heat distribution.
- Energy Efficient: Features an ECO Mode to optimize energy consumption.
- Dual Installation: Can be wall-mounted or used as a portable unit with wheels.
- User-Friendly Controls: Intuitive touch panel with LED display and remote control.
- Programmable Timer: 1-24 hour auto-off timer.
- Safety Features: Includes tip-over protection, overheat protection, and child lock.

### **Package Contents:**

- Lueptexx 800W Convection Wall Panel Heater Unit
- Remote Control (requires 2 AAA batteries, not included)
- Wheel Base Assembly Kit
- Wall Mounting Brackets and Hardware
- Wall Mounting Template
- Instruction Manual



Image 2.1: The Lueptexx 800W Convection Wall Panel Heater with its remote control, illustrating its sleek design and digital display.

### 3. SETUP

---

The Lueptexx heater offers two installation methods: portable with wheels or fixed wall-mounted.

#### 3.1 Portable Setup (with Wheels)

1. Carefully unpack all components.
2. Attach the wheel base to the bottom of the heater unit using the provided screws. Ensure the wheels are securely fastened.
3. Place the heater on a flat, stable surface, ensuring it is upright and not obstructed.

#### 3.2 Wall-Mount Setup

1. Select a suitable wall location, ensuring it is away from combustible materials and not directly under an electrical outlet.
2. Use the provided wall mounting template to mark the drill holes on the wall.
3. Drill holes at the marked positions and insert wall anchors if necessary.
4. Secure the wall mounting brackets to the wall using the provided screws.
5. Carefully hang the heater unit onto the wall brackets, ensuring it is securely seated.




Image 3.1: Visual representation of the heater in both wall-mounted and portable configurations with its rolling stand.

## 4. OPERATING INSTRUCTIONS

The heater can be controlled via the touch panel on the unit or the included remote control.


### 4.1 Power On/Off

- Plug the heater into a suitable 120V AC power outlet.
- Press the **Power button**  on the control panel or remote to turn the unit on or off. The LED display will illuminate when powered on.

## 4.2 Setting Temperature


- While the heater is on, use the **Up**  and **Down**  arrows on the control panel or remote to adjust the desired temperature. The adjustable range is typically 45°F to 86°F (7°C to 30°C).
- The heater will automatically maintain the set temperature.

## 4.3 Operating Modes

Press the **Mode button**  to cycle through the available heating modes:

- **Constant Temperature Mode:** Maintains a consistent temperature.
- **ECO Mode:** Optimizes energy consumption by adjusting heat output based on the ambient temperature and set temperature. This mode can save up to 50% on heating bills.
- **Comfort Mode:** Provides a steady, comfortable heating level.
- **Night Mode:** Designed for quiet operation during sleep, often with reduced display brightness.

## 4.4 Timer Function

- Press the **Timer button**  on the control panel or remote.
- Use the **Up** and **Down** arrows to set the desired auto-off time, from 1 to 24 hours. The heater will automatically turn off after the set duration.

## 4.5 Child Lock

- To activate the child lock, press and hold the **Child Lock button**  for a few seconds until the lock indicator appears on the display. This prevents accidental changes to settings.
- To deactivate, press and hold the **Child Lock button** again until the indicator disappears.

## 4.6 Mute Function

- The heater may have an option to mute operation beeps. Refer to the specific icon on the control panel or remote for this function.

## Touch Panel & Remote Control



Image 4.1: The heater's touch control panel and remote control, highlighting the digital display and various function buttons.



Image 4.2: The heater illustrating its 1-24 hour timer function for automatic shut-off.



Image 4.3: Diagram illustrating the energy-saving benefits of the ECO Mode compared to other heating methods.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and longevity of your heater.

### 5.1 Cleaning

1. Always unplug the heater from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
3. Ensure no water enters the interior of the heater.
4. Periodically check the air inlets and outlets for dust or debris. Use a vacuum cleaner with a brush attachment to gently remove any accumulations.

### 5.2 Storage

- If storing the heater for an extended period, ensure it is clean and dry.
- Store the heater in its original packaging or a protective cover in a cool, dry place.
- Keep the power cord neatly coiled and avoid placing heavy objects on it.

## 6. TROUBLESHOOTING

---

If you encounter issues with your heater, refer to the following common problems and solutions:

- **Heater does not turn on:**
  - Ensure the power cord is securely plugged into a working electrical outlet.
  - Check your household circuit breaker or fuse box.
  - Verify that the power button on the unit or remote has been pressed.

- If the heater was recently tipped over or overheated, the safety features might have activated. Unplug the unit, wait 10-15 minutes for it to reset, and then plug it back in.
- **Heater is on but not producing heat:**
  - Check the set temperature. Ensure it is higher than the current room temperature.
  - Ensure the heater's air inlets/outlets are not obstructed.
  - The overheat protection may have been triggered. Follow the steps above to reset.
- **Controls are unresponsive or erratic:**
  - For remote control, replace the batteries (2 AAA, not included).
  - Unplug the heater from the power outlet for a few minutes, then plug it back in to perform a soft reset.
  - Ensure there is no interference with the remote control signal.
- **Heater makes unusual noises:**
  - As a fan-less convection heater, it should operate quietly. If unusual noises occur, unplug the unit immediately and contact customer support.

If the problem persists after attempting these troubleshooting steps, please contact Lueptexx customer support for assistance.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Lueptexx
Model Number	NA9-HKWH001-800W-4
Special Features	Adjustable Temperature, Child Lock, Digital Display, Energy Efficient, Remote Control
Color	White
Form Factor	Wall Mount / Portable
Indoor/Outdoor Usage	Indoor
Product Dimensions (D x W x H)	3.3" x 19.7" x 22.4"
Mounting Type	Wall Mount
Room Type	Bedroom, Home Office, Kids Room, Living Room, Study Room
Heating Coverage	150-300 sq.ft
Heat Output	800 Watts
Fuel Type	Electric
Voltage	120 Volts

Feature	Specification
Item Weight	21.3 pounds

## 8. WARRANTY AND SUPPORT

---

For information regarding the product warranty, please refer to the documentation included with your purchase or visit the official Lueptexx website. If you require technical support, have questions about operation, or need assistance with troubleshooting beyond what is provided in this manual, please contact Lueptexx customer service.

Contact information can typically be found on the product packaging, the manufacturer's website, or through your retailer.