

[Manuals.plus](#) /

› [Wisoqu](#) /

› Wisoqu Music Boxing Machine User Manual (Model Wisoqurk4dnxcs7a-11)

Wisoqu Wisoqurk4dnxcs7a-11

Wisoqu Music Boxing Machine User Manual

Model: Wisoqurk4dnxcs7a-11

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Wisoqu Music Boxing Machine. Please read it thoroughly before installation and operation. Keep this manual for future reference.

2. SAFETY INFORMATION

- Ensure the boxing machine is securely mounted to a stable wall surface before use.
- Do not use the machine if any parts are damaged or missing.
- Children should only use the device under adult supervision.
- Consult a physician before starting any new exercise regimen.
- Keep hands and fingers clear of moving parts during operation.
- Use appropriate protective gear, such as boxing gloves, to prevent injury.
- Avoid exposing the device to water or extreme temperatures.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Music Boxing Machine
- 2 x Long Hook and Loop Straps
- 2 x Short Hook and Loop Straps
- 6 x Cushion Pads
- 1 x Type-C Charging Cable



Image: All components included in the Wisoqu Music Boxing Machine package.

4. PRODUCT OVERVIEW

The Wisoqu Music Boxing Machine is a smart, wall-mounted device designed for fitness and coordination training. It features LED electronic targets that light up in sequence, accompanied by music playback via Bluetooth connection.

Key Features:

- **Interactive LED Targets:** Lights guide your punches, improving reaction time and accuracy.
- **Bluetooth Connectivity:** Connect your device to play music during workouts.
- **Stereo Sound:** Built-in sound system enhances the workout experience.
- **Durable Construction:** Made from PU Leather and PP for longevity.
- **Wall-Mounted Design:** Saves space and provides a stable punching surface.



Image: Top view of the Wisoqu Music Boxing Machine.

Stereo sound

Premium sound amplification



Image: The boxing machine demonstrating fast Bluetooth connection and music playback.

Improve response speed and coordination



Image: Diagram showing the internal stereo sound components for premium sound amplification.

5. SETUP

5.1 Charging the Device

1. Locate the Type-C charging port on the side of the boxing machine.
2. Connect the provided Type-C charging cable to the port.
3. Plug the other end of the cable into a standard USB power adapter (not included).
4. The LED indicator will show charging status. Charge fully before first use.

5.2 Wall Mounting

The Wisoqu Music Boxing Machine is designed for wall mounting. It is suitable for various wall surfaces including white walls, marble, solid wood walls, and tiles.

1. Choose a sturdy and flat wall surface at an appropriate height for your workout.

2. Clean the wall surface thoroughly to ensure proper adhesion.
3. Apply the long hook and loop straps to the back of the boxing machine and the corresponding short straps to the wall. Ensure they are aligned for a secure fit.
4. Press the boxing machine firmly against the wall to secure it.
5. For added stability, use the included cushion pads as needed to fill any gaps or provide extra support.

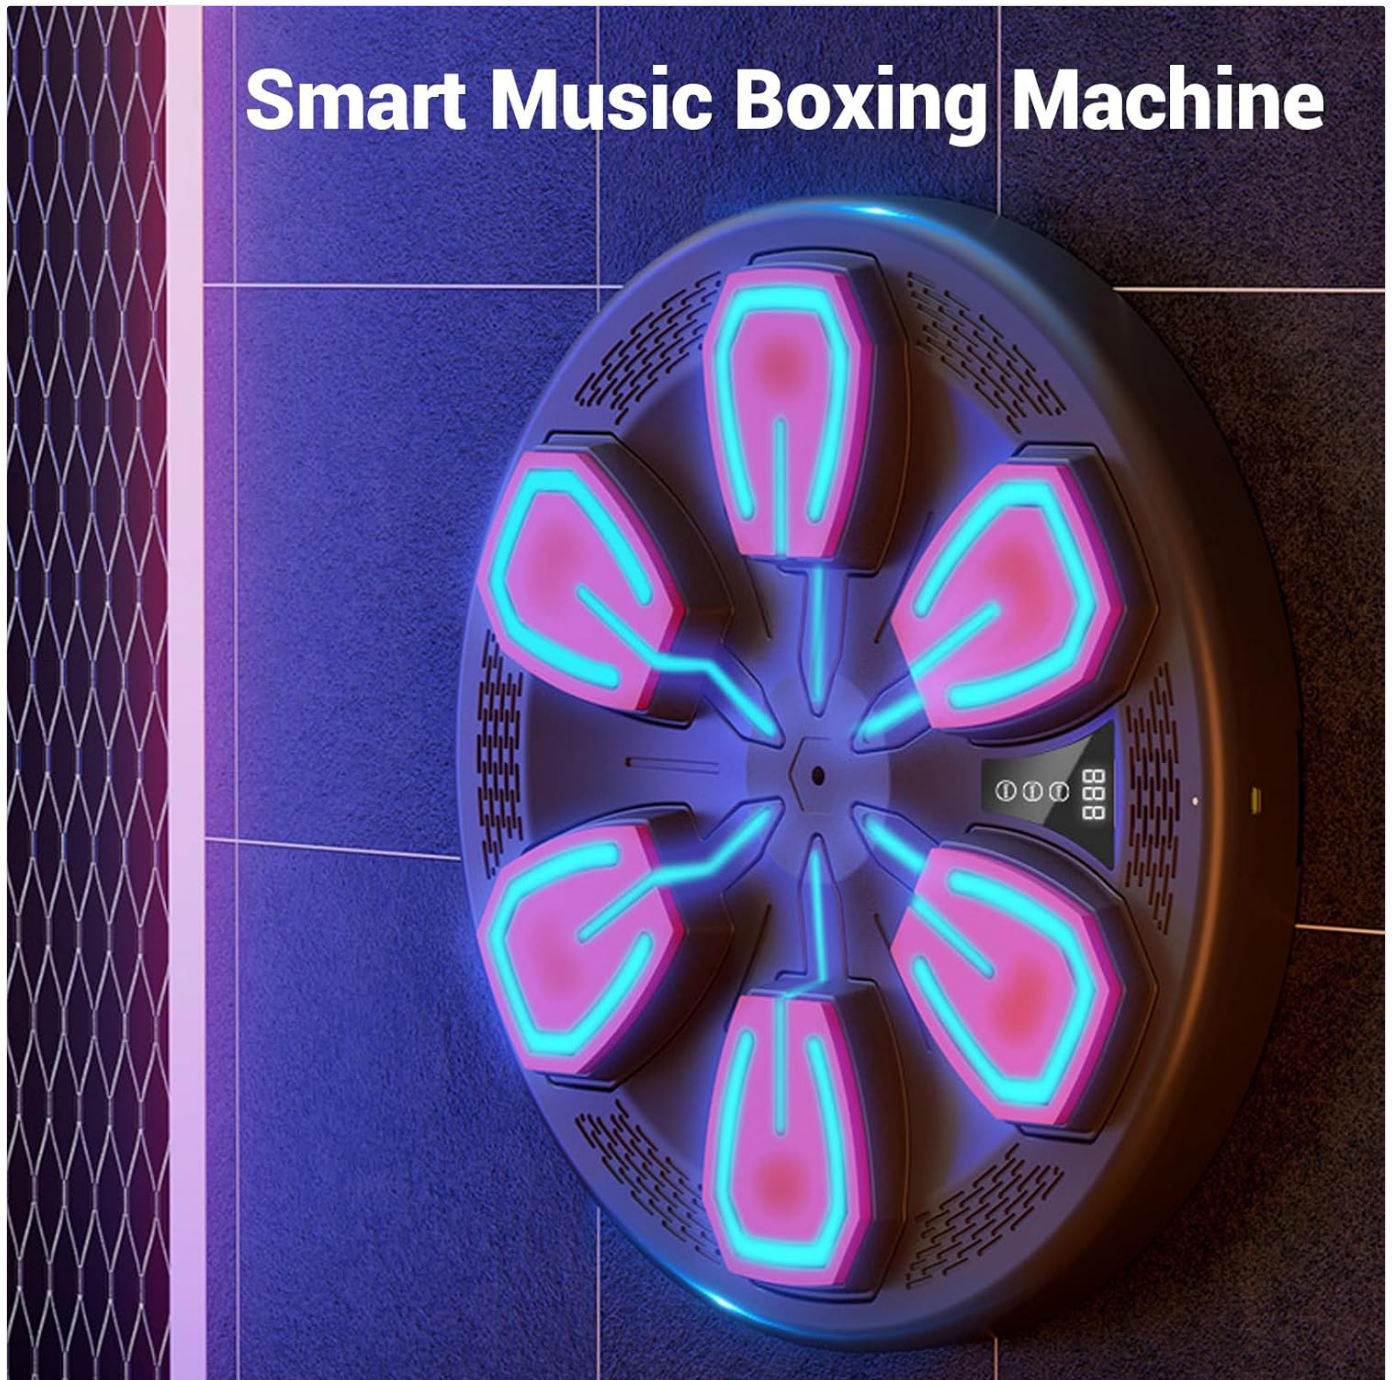


Image: The Smart Music Boxing Machine securely mounted on a wall.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To power on, press and hold the power button located on the control panel until the LED lights illuminate.
- To power off, press and hold the power button again until the LED lights turn off.

6.2 Bluetooth Connection

1. Ensure the boxing machine is powered on.
2. Activate Bluetooth on your smartphone or other audio device.
3. Search for available Bluetooth devices. The boxing machine will appear as "Music Boxing Machine" or similar.
4. Select the device to pair. A confirmation sound will indicate a successful connection.
5. You can now play music from your connected device through the boxing machine's speakers.

6.3 Starting a Workout

1. Once powered on and optionally connected to Bluetooth, the machine will enter standby mode.
2. The LED targets will light up in a sequence, indicating where to punch.
3. Punch the illuminated targets to register hits and continue the sequence.
4. The machine tracks your hits and can help improve your response speed and coordination.



Image: An adult demonstrating use of the boxing machine.

Fast connection Music playback

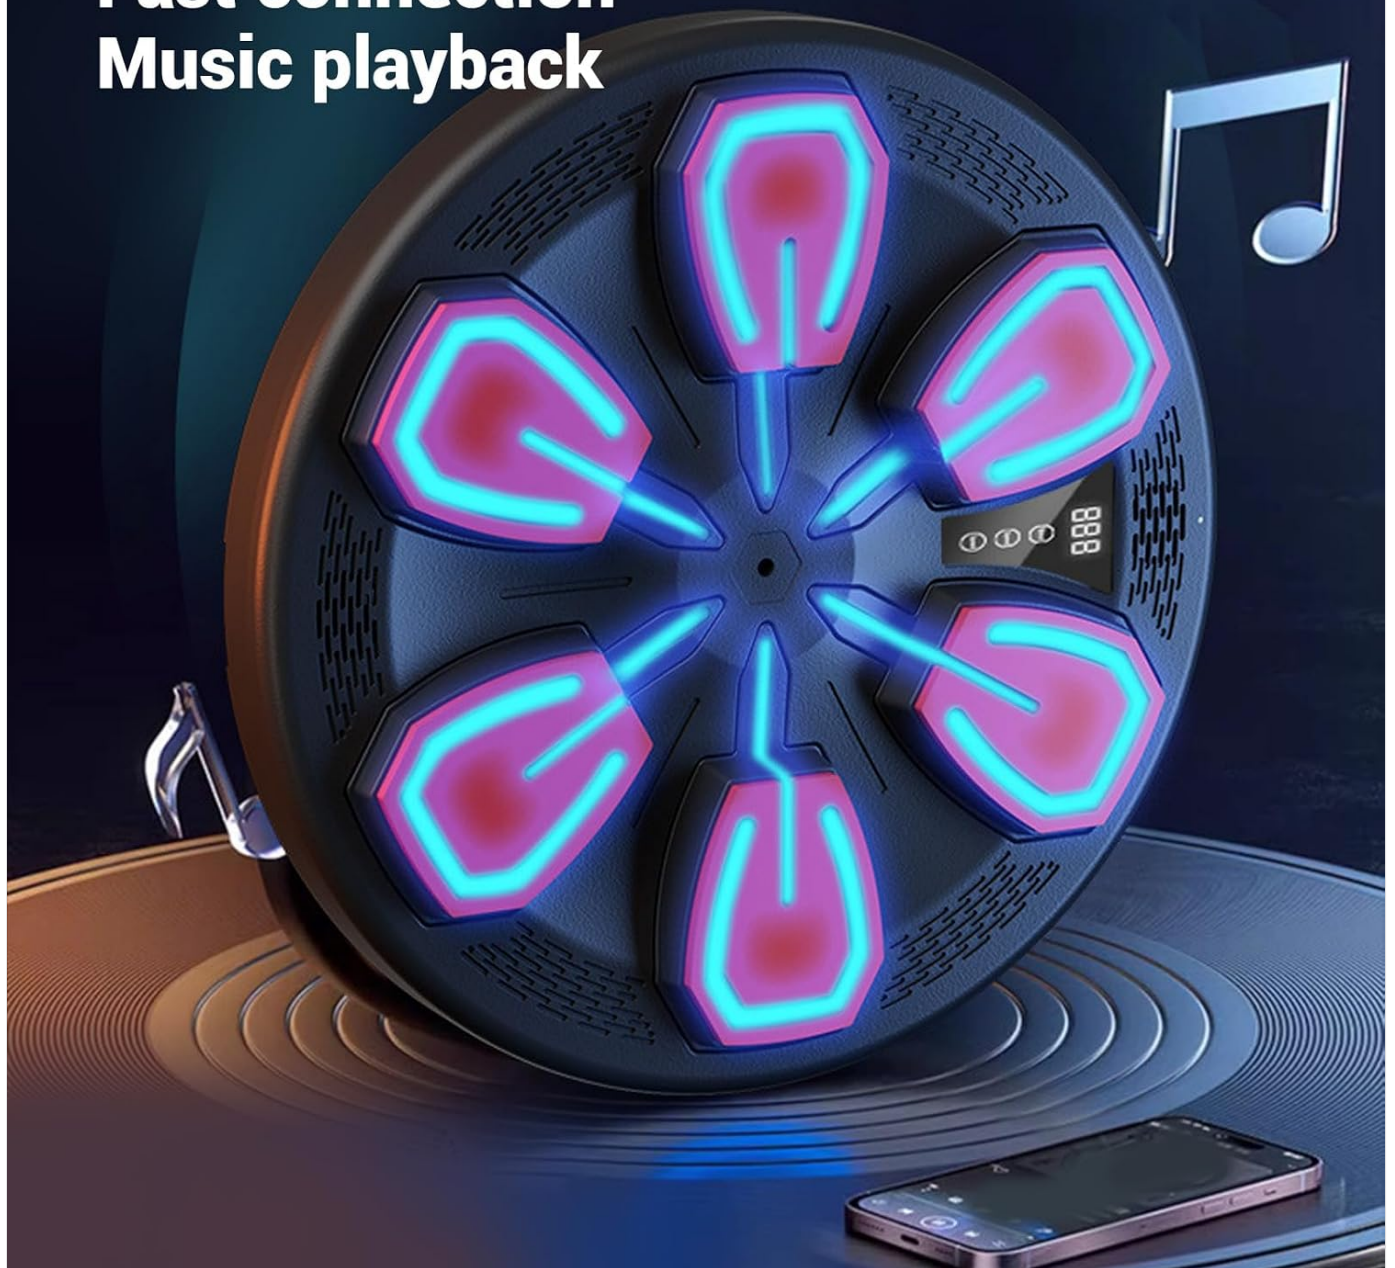


Image: A child using the boxing machine with adult supervision.

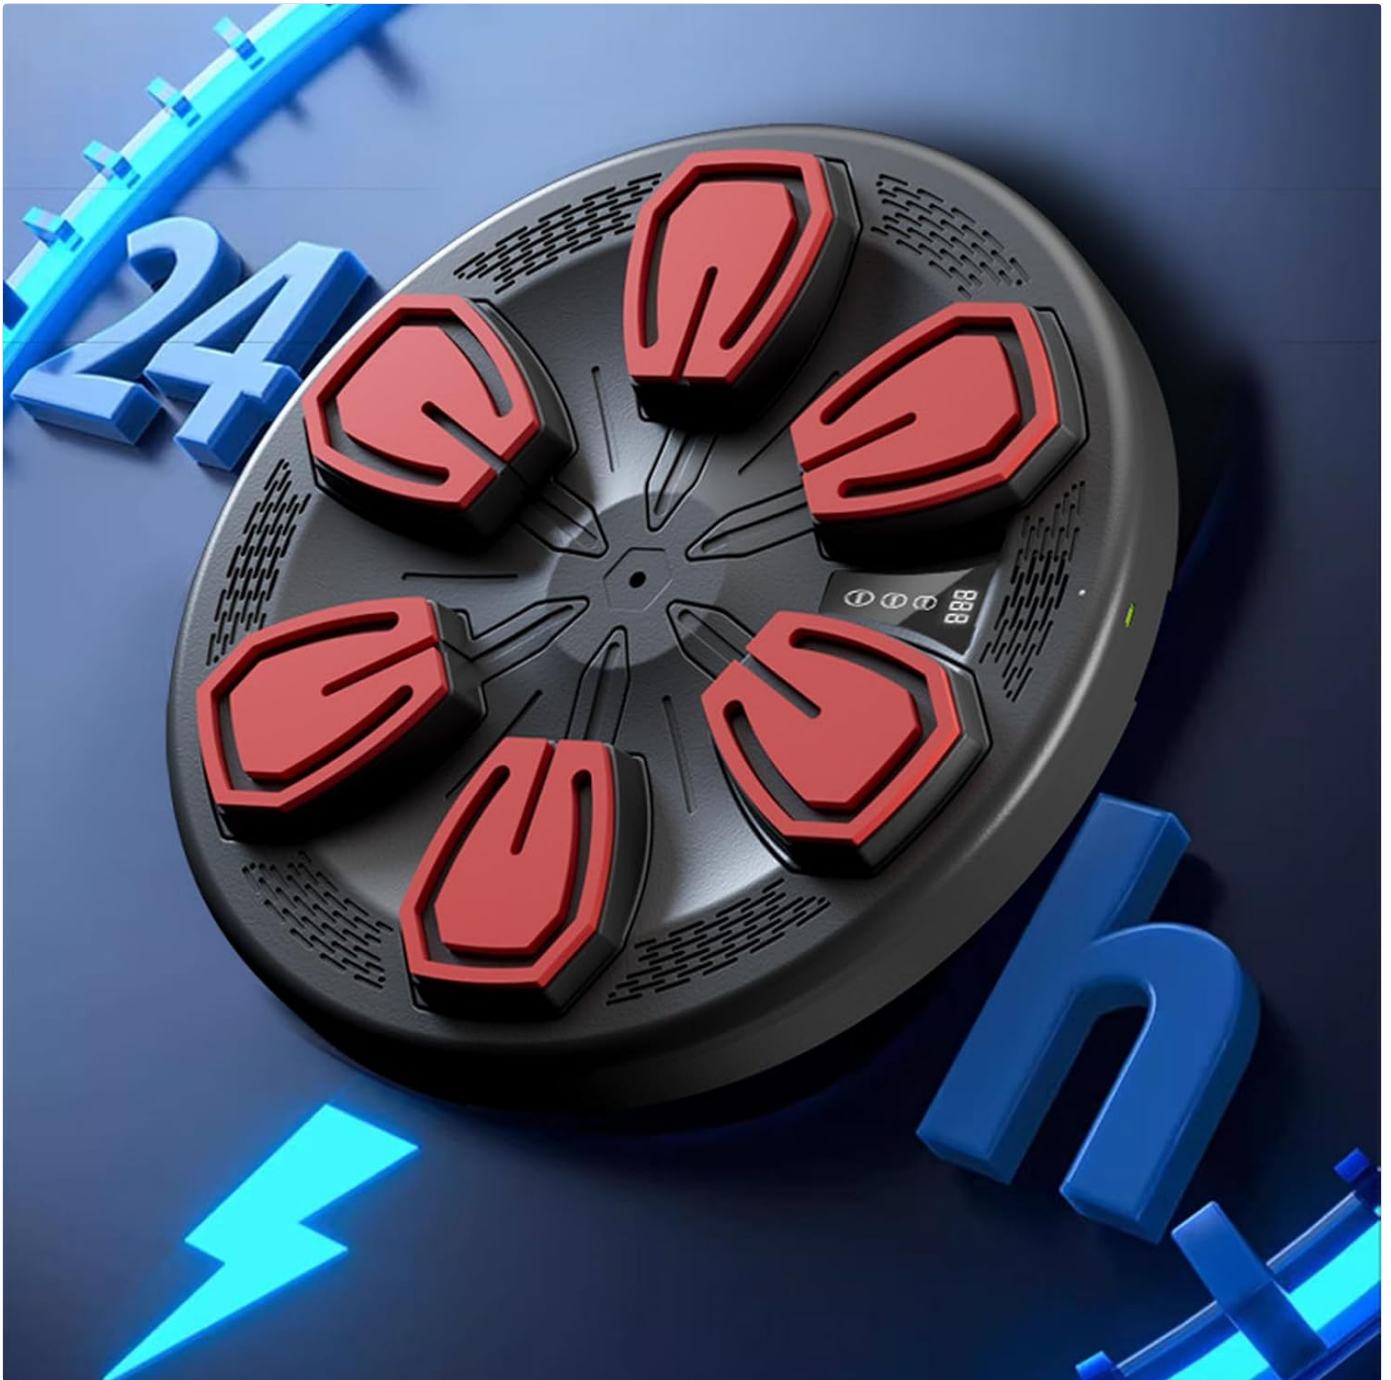


Image: The boxing machine in action, designed to improve response speed and coordination.

7. MAINTENANCE

- **Cleaning:** Wipe the surface of the boxing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and moisture when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in constant use.
- **Inspection:** Periodically check the mounting straps and wall adhesion to ensure the machine remains securely attached.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Low battery or power button not pressed correctly.	Charge the device using the provided Type-C cable. Press and hold the power button for 3-5 seconds.
Cannot connect via Bluetooth.	Bluetooth is off on your device, or the boxing machine is not in pairing mode.	Ensure Bluetooth is enabled on your phone. Restart the boxing machine. Try pairing again. Keep devices within range.
LED targets are not lighting up.	Device is in standby mode or a malfunction.	Ensure the device is powered on and not in standby. If the issue persists, contact support.
Machine is not securely mounted.	Improper installation or worn straps.	Re-evaluate mounting location and method. Ensure straps are clean and firmly attached. Replace straps if worn.

9. SPECIFICATIONS

Feature	Detail
Item Type	Music Boxing Machine
Material	PU Leather + PP
Battery Model	Lithium Battery (built-in)
Battery Capacity	500mAh
Charging Method	Type-C Charging
Package Dimensions (L x W x H)	16.93 x 16.93 x 3.15 inches
Package Weight	1.99 Kilograms
Model Name	Wisoqurk4dnxcs7a-11

10. WARRANTY AND SUPPORT

Wisoqu products are manufactured to high-quality standards. For warranty information or technical support, please refer to the retailer's return policy or contact Wisoqu customer service through the official brand store or your purchase platform. For further assistance, please visit the [Wisoqu Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question