

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack StreetStyle Digital Grey Dial Grey Silicone Strap Watch - Model 38120PP02 User Manual

Fastrack 38120PP02

Fastrack StreetStyle Digital Watch - Model 38120PP02 User Manual

Your guide to setting up, operating, and maintaining your Fastrack StreetStyle Digital Watch.

1. INTRODUCTION

The Fastrack StreetStyle Digital Watch, Model 38120PP02, is designed for individuals seeking a blend of modern aesthetics and practical functionality. This manual provides essential information to ensure optimal use and longevity of your watch.

Key Features:

- Digital Display: Clear time, day, and date readout for quick reference.
- Sporty Grey Design: Stylish matte finish with a modern streetwear vibe.
- Durable Silicone Strap: Lightweight and comfortable for extended wear.
- Functional Layout: Includes additional icons for quick glance features.
- Everyday Ready: Perfect for casual wear, sports, and outdoor activities.
- Alarm Functionality
- Light Up Display
- Water Resistance: 30 Metres

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Fastrack StreetStyle Digital Watch.



Figure 2.1: Front view of the Fastrack StreetStyle Digital Watch, showcasing the grey digital dial and matching silicone strap.



Figure 2.2: Angled view of the watch, highlighting the side buttons for function control.



Figure 2.3: Side profile of the watch, illustrating its thickness and button placement.



Figure 2.4: Rear view of the watch, displaying the stainless steel back and the silicone strap with its buckle closure.

Your browser does not support the video tag.

Video 2.1: An overview of the Fastrack StreetStyle Digital Watch, demonstrating its design and basic features.

3. SETUP

3.1 Initial Power On

Your watch is typically ready for use upon unboxing. If the display is blank, it may be in power-saving mode or require a button press to activate. Press any button to wake the display.

3.2 Setting Time and Date

1. Press the **MODE** button (usually bottom-left) repeatedly until the time setting mode is displayed (often indicated by flashing digits).
2. Use the **SET** or **ADJUST** button (usually top-right) to select the digit you wish to change (hours, minutes, year, month, day).

3. Use the **START/STOP** or **LIGHT** button (usually top-left or bottom-right) to increase the selected digit. Hold to fast-forward.
4. Once all settings are correct, press the **MODE** button again to exit the setting mode.

Note: Button functions may vary slightly. Refer to the watch's physical buttons for specific labels if available.

4. OPERATING INSTRUCTIONS

4.1 Switching Modes

Press the **MODE** button to cycle through different functions such as Time, Date, Alarm, Stopwatch, etc. The current mode is usually indicated on the display.

4.2 Using the Alarm

1. Navigate to the Alarm mode using the **MODE** button.
2. Press the **SET** button to activate the alarm setting.
3. Adjust the alarm time using the **START/STOP** or **LIGHT** button.
4. Press **SET** again to confirm and activate/deactivate the alarm. An alarm icon will typically appear when active.

4.3 Using the Backlight

Press the **LIGHT** button (often located on the top-left) to illuminate the display in low-light conditions. The light will typically stay on for a few seconds.

4.4 Stopwatch Function

1. Switch to Stopwatch mode using the **MODE** button.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause/resume.
4. Press the **RESET** button (often the **SET** button in stopwatch mode) to clear the stopwatch.

5. MAINTENANCE

5.1 Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and components. For the silicone strap, mild soap and water can be used, ensuring it is thoroughly rinsed and dried.

5.2 Water Resistance

This watch has a water resistance depth of **30 Metres**. This means it is suitable for everyday use and can withstand splashes or brief immersion in water. However, it is *not* recommended for swimming, showering, or diving. Avoid operating buttons while the watch is wet to prevent water ingress.

5.3 Battery Replacement

The watch is powered by a battery. When the display dims or functions become erratic, the battery may need

replacement. Battery replacement should be performed by a qualified watch technician or an authorized service center to ensure proper sealing and water resistance integrity. Attempting to replace the battery yourself may void the warranty.

6. TROUBLESHOOTING

Common Issues and Solutions:

- **Display is blank:**
Press any button to wake the watch. If it remains blank, the battery may be depleted. Refer to Section 5.3 for battery replacement.
- **Time is incorrect:**
Follow the instructions in Section 3.2 to reset the time and date.
- **Buttons are unresponsive:**
Ensure the watch is not in a locked mode (if applicable). If the issue persists, a soft reset (removing and reinserting the battery, performed by a technician) might be necessary.
- **Water inside the watch:**
Immediately take the watch to an authorized service center. Do not attempt to dry it yourself, as this can cause further damage.

7. SPECIFICATIONS

Feature	Detail
Brand	Fastrack
Model Name	StreetStyle
Model Number	38120PP02
Display Type	Digital
Movement Type	Digital
Special Features	Alarm, Light Up
Power Source	Battery Powered
Strap Type	Two Piece Strap
Water Resistance Depth	30 Metres
Clasp Type	Buckle
Band Material	Silicone
Case Material	Acrylonitrile Butadiene Styrene (ABS)
Crystal Material	Acrylic
Case Diameter	48.9 Millimetres
Band Width	23 Millimetres

Case Thickness	15.5 Millimetres
Band Length	25.5 Centimetres
Item Weight	200 Grams
Country of Origin	India

8. WARRANTY AND SUPPORT

8.1 Warranty Policy

Your Fastrack StreetStyle Digital Watch comes with a **12-month manufacturer warranty** on manufacturing defects. To avail warranty services, you must present your original purchase invoice at any authorized Titan Service Center. No separate warranty card is required.

8.2 Customer Support

For further details, service-related queries, or assistance, please contact Titan India customer care:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** customercare@titan.co.in
- **Manufacturer:** Titan Company Limited, #3, SIPCOT Industrial Complex, Hosur - 635126, Tamil Nadu, India.

For more information, you can also visit the [Fastrack Store on Amazon.in](#).