

[Manuals.plus](#) /

› [Fastrack](#) /

› Fastrack StreetStyle Digital Watch 38120PP03 User Manual

## Fastrack 38120PP03

# Fastrack StreetStyle Digital Watch 38120PP03 User Manual

Model: 38120PP03

## INTRODUCTION

---

Thank you for choosing the Fastrack StreetStyle Digital Watch, model 38120PP03. This manual provides essential information for the proper setup, operation, and maintenance of your new watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

The Fastrack StreetStyle watch combines a bold blue design with practical digital functions, including time, day, date, and alarm. Its durable silicone strap and water-resistant construction make it suitable for active lifestyles.

## PRODUCT OVERVIEW

---

### Key Features

- **Digital Display:** Shows time, day, date, and alarm for everyday convenience.
- **Bold Blue Design:** Eye-catching color with a modern street-inspired look.
- **Durable Silicone Strap:** Comfortable, lightweight, and made for active lifestyles.
- **Functional Layout:** Easy-to-read segmented display for quick information access.
- **Water Resistance:** Rated for 30 meters, suitable for splashes and brief immersion.

### Watch Components



Figure 1: Front view of the Fastrack StreetStyle Digital Watch, highlighting the digital display and overall design.

The watch features a clear digital display for time, date, and other functions. The blue silicone strap is designed for comfort and durability. Control buttons are located on the sides of the watch case for mode selection and setting adjustments.



Figure 2: Side view of the watch, illustrating the control buttons for various functions.

The control buttons (typically A, B, C, D) are used to navigate through modes, adjust settings, and activate features like the backlight. Refer to the 'Operating Instructions' section for detailed button functions.



Figure 3: Rear view of the watch, showing the stainless steel case back and strap buckle.

The stainless steel case back provides durability and protection. The silicone strap features a secure buckle closure for a comfortable fit.

## SETUP

---

### Initial Setup and Time Setting

Upon first use or after a battery change, you may need to set the time and date. The watch typically has four buttons: A (top-left), B (bottom-left), C (top-right), and D (bottom-right). Refer to Figure 2 for button locations.

1. In normal timekeeping mode, press and hold button **A** (Mode/Set) for a few seconds until the seconds start flashing. This indicates you are in setting mode.
2. Press button **B** (Adjust/Light) to cycle through the settings: seconds, hour, minute, 12/24-hour format, year, month, and day.
3. Use button **C** (Increase) or **D** (Decrease) to change the flashing value.
4. Once all settings are adjusted, press button **A** again to exit the setting mode and return to normal timekeeping.

## OPERATING INSTRUCTIONS

---

### Mode Selection

Press button **A** (Mode) repeatedly to cycle through the different modes:

- **Timekeeping Mode:** Displays current time, day, and date.
- **Alarm Mode:** Allows setting and activating the alarm.
- **Stopwatch Mode:** Used for measuring elapsed time.

### Alarm Function

1. From Timekeeping Mode, press button **A** once to enter Alarm Mode.
2. Press and hold button **A** until the alarm hour digits start flashing.
3. Use button **C** or **D** to set the desired alarm hour.
4. Press button **B** to move to the minute setting, then use button **C** or **D** to set the desired alarm minute.
5. Press button **A** to confirm and exit alarm setting.
6. To turn the alarm ON/OFF, press button **C** while in Alarm Mode. An alarm icon will appear/disappear on the display.

### Stopwatch Function

1. From Timekeeping Mode, press button **A** twice to enter Stopwatch Mode.
2. Press button **C** to start the stopwatch.
3. Press button **C** again to pause the stopwatch.
4. Press button **C** again to resume.
5. Press button **D** to reset the stopwatch to zero while it is paused.
6. Press button **A** to return to Timekeeping Mode.

### Backlight

Press button **B** (Adjust/Light) briefly to illuminate the display for a few seconds in low-light conditions.

## MAINTENANCE

---

### Cleaning

- Wipe the watch case and strap regularly with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

### Water Resistance

- This watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for everyday use, splashes, rain, and brief immersion in water.
- It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals.
- Do not operate the buttons while the watch is wet or submerged.
- If the watch is exposed to saltwater, rinse it with fresh water and wipe it dry immediately.

## Battery Replacement

When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should be performed by a qualified watch technician or an authorized service center to ensure proper sealing and water resistance. Attempting to replace the battery yourself may void the warranty.

## TROUBLESHOOTING

---

Problem	Solution
Display is blank or dim.	The battery may be low or depleted. Replace the battery at an authorized service center.
Time is incorrect.	Reset the time and date following the instructions in the 'Setup' section. Ensure the 12/24-hour format is correct.
Buttons are unresponsive.	Ensure the watch is not wet. If the issue persists, the watch may require servicing.
Water inside the display.	Stop using the watch immediately and take it to an authorized service center. This indicates a compromised water seal.

## SPECIFICATIONS

---

Feature	Detail
Model Name	StreetStyle
Model Number	38120PP03
Display Type	Digital
Movement Type	Digital
Special Features	Alarm, Light Up
Power Source Type	Battery Powered
Strap Type	Two Piece Strap
Water Resistance Depth	30 Metres
Clasp Type	Buckle
Band Material	Silicone
Case Material	Acrylonitrile Butadiene Styrene
Crystal Material	Acrylic
Case Diameter	48.9 Millimetres
Band Width	23 Millimetres
Case Thickness	15.5 Millimetres

Feature	Detail
Band Length	25.5 Centimetres
Band Colour	Blue
Dial Colour	Blue
Item Weight	200 Grams

## WARRANTY INFORMATION

---

Your Fastrack StreetStyle Digital Watch comes with a **12-month manufacturer warranty** on manufacturing defects. This warranty covers defects in materials and workmanship under normal use.

### How to Avail Warranty:

- To avail warranty service, you must present your original purchase invoice at any authorized Titan Service Center.
- No separate warranty card is required; the invoice serves as proof of purchase and warranty validity.

For detailed warranty terms and conditions, please refer to the official Fastrack website or contact customer support.

## SUPPORT AND CONTACT

---

For any service-related queries, technical assistance, or to locate an authorized service center, please contact Fastrack customer support:

- **Toll-Free Number:** 1800-266-0123 (Available 10 AM to 7 PM, all days of the week)
- **Email:** [customercare@titan.co.in](mailto:customercare@titan.co.in)
- **Manufacturer:** Titan Company Limited, #3, SIPCOT Industrial Complex, Hosur - 635126, Tamil Nadu, India.

Please have your product model number (38120PP03) and purchase invoice ready when contacting support.