

BRANDT LVC337B

BRANDT LVC337B Freestanding Dishwasher Instruction Manual

Model: LVC337B

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your BRANDT LVC337B freestanding dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.

The BRANDT LVC337B is a freestanding dishwasher designed for 13 place settings, featuring a refined black finish and operating at a quiet 47dB.

2. SAFETY INFORMATION

General Safety:

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged or malfunctioning.
- Keep children away from the dishwasher, especially when it is operating or when the door is open. Detergents can be corrosive.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Do not touch the heating element during or immediately after use.
- Sharp items should be loaded with points down to prevent injury.

Electrical Safety:

- Before cleaning or maintenance, always disconnect the appliance from the power supply.
- Do not use extension cords or multiple adapters.

Water Safety:

- Ensure water inlet and outlet hoses are securely connected to prevent leaks.
- Check hoses regularly for signs of wear or damage.

3. SETUP AND INSTALLATION

The BRANDT LVC337B is a freestanding appliance, meaning it does not require integration into cabinetry. Follow these

steps for proper setup.

3.1 Unpacking and Positioning

- Carefully remove all packaging materials.
- Position the dishwasher on a firm, level floor. Adjust the leveling feet to ensure stability and prevent vibrations.
- Ensure there is adequate space around the appliance for ventilation and door opening.



Figure 1: Exterior view of the BRANDT LVC337B freestanding dishwasher.

3.2 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked and is positioned at the correct height (refer to installation diagram in a full manual for specific height requirements).

3.3 Electrical Connection

- Plug the dishwasher into a properly grounded electrical outlet.
- Verify that the voltage and frequency match the specifications on the rating plate of the appliance.

3.4 Initial Use

- Before the first wash, fill the salt dispenser with dishwasher salt (if applicable to your water hardness).
- Fill the rinse aid dispenser.
- Run a short wash cycle without dishes to clean the interior.

4. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your BRANDT LVC337B dishwasher.

4.1 Control Panel Overview



Figure 2: The control panel of the BRANDT LVC337B dishwasher, showing buttons and display.

The control panel typically includes:

- **Power Button:** To turn the dishwasher on/off.
- **Program Selector:** To choose the desired wash cycle.
- **Start/Pause Button:** To begin or temporarily stop a cycle.
- **Display:** Shows program status, remaining time, or error codes.

4.2 Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to dishes. The LVC337B is designed for 13 place settings.



Figure 3: Interior view of the BRANDT LVC337B dishwasher, showing the upper and lower racks and cutlery basket.

- Scrape off large food particles from dishes before loading.
- Place larger items and pots in the lower rack.
- Place glasses, cups, and smaller plates in the upper rack.
- Utensils should be placed in the included cutlery basket, with handles down for forks and spoons, and points down for knives.
- Ensure spray arms can rotate freely and are not blocked by dishes.

4.3 Selecting a Wash Program

Your dishwasher offers various programs to suit different needs. One of the special functions is a **Quick Wash** program.

- Close the dishwasher door.
- Press the Power button to turn on the appliance.
- Use the Program Selector to choose the desired wash cycle (e.g., Eco, Intensive, Quick Wash).
- Add dishwasher detergent to the dispenser.
- Press the Start/Pause button to begin the cycle.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

5.1 Cleaning Filters

- The filter system should be checked and cleaned regularly (e.g., weekly).
- Remove the coarse filter, fine filter, and main filter. Rinse them under running water to remove food particles.
- Reassemble the filters correctly and place them back into the dishwasher.

5.2 Cleaning Spray Arms

- Periodically check the spray arm nozzles for blockages.
- If necessary, remove the spray arms and clean the nozzles with a thin object like a toothpick.

5.3 Exterior and Interior Cleaning

- Wipe the exterior of the dishwasher with a damp cloth and mild detergent.
- Clean the door seal regularly to remove food residue.
- For interior cleaning, you can use a dishwasher cleaner product periodically.

5.4 Adding Salt and Rinse Aid

- Monitor the salt and rinse aid indicator lights on the control panel.
- Refill the salt dispenser with dishwasher salt to soften water and prevent limescale.
- Refill the rinse aid dispenser to ensure streak-free drying.

6. TROUBLESHOOTING

Before contacting customer support, refer to this section for solutions to common issues.

6.1 Dishwasher Does Not Start

- Check if the power cord is securely plugged in.
- Ensure the door is fully closed and latched.
- Verify that the water supply tap is open.
- Check if a program has been selected and the Start button pressed.

6.2 Poor Cleaning Results

- Ensure dishes are loaded correctly and not blocking spray arms.
- Check and clean the filters.
- Verify that the detergent dispenser is not blocked and sufficient detergent is used.
- Check water hardness settings and ensure salt dispenser is filled.
- Select a more intensive wash program if needed.

6.3 Water Not Draining

- Check if the drain hose is kinked or blocked.
- Clean the filter system thoroughly.
- Ensure the drain pump is not obstructed.

6.4 Leaks

- Check the tightness of the water inlet and drain hose connections.
- Inspect the door seal for damage or obstructions.
- Ensure the dishwasher is level.

7. SPECIFICATIONS

Model	LVC337B
Installation Method	Freestanding
Capacity	13 Place Settings
Noise Level	47 dB
Dimensions (Approx.)	60cm Width
Special Functions	Quick Wash
Included Components	Cutlery Basket
Energy Consumption (per 100 cycles)	84 kWh
Water Consumption (per cycle)	11.0 L
Standard Cycle Duration	3:30 (3 hours 30 minutes)
ASIN	B0DG5Z1B1F

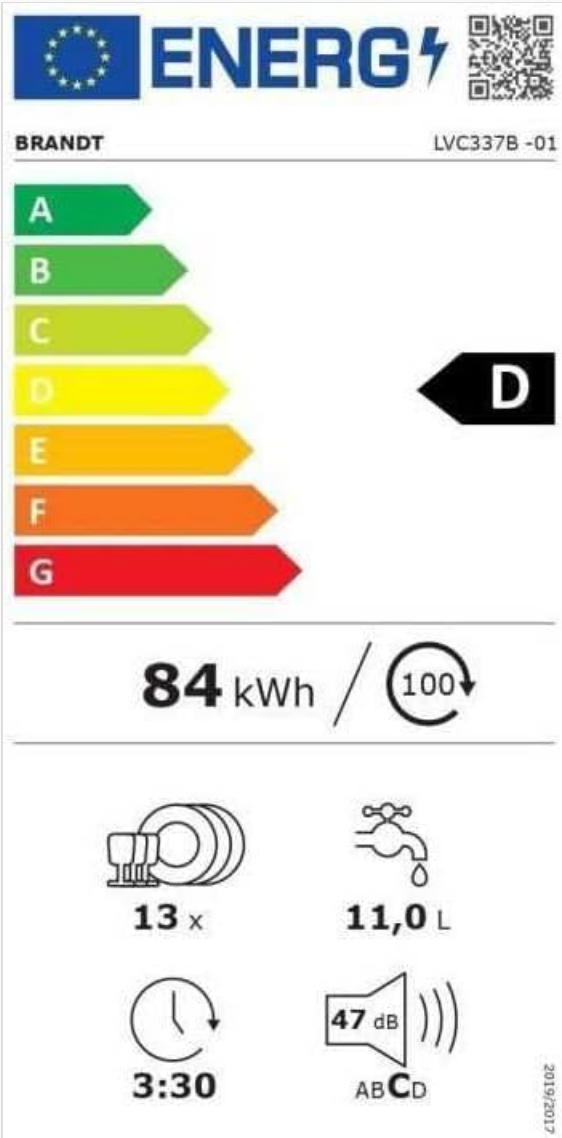


Figure 4: Energy label for the BRANDT LVC337B dishwasher, showing efficiency ratings and consumption data.

8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your appliance or contact your retailer. Keep your proof of purchase for any warranty claims.

BRANDT offers Specialized Customer Support for assistance with your appliance. For technical support, service requests, or general inquiries, please contact BRANDT customer service through their official website or the contact details provided in your purchase documentation.

Please note that information regarding the availability of spare parts for this model is currently unavailable through general product specifications. For specific spare part inquiries, please contact BRANDT customer support directly.

© 2026 BRANDT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question