

- Manuals.plus /
- › [DERCASS](#) /
- › DERCASS Space-Saving Murphy Bed Twin Grey (Model GX002043AAE) Instruction Manual

DERCASS GX002043AAE

DERCASS Space-Saving Murphy Bed Instruction Manual

Model: GX002043AAE (Twin Grey)

PRODUCT OVERVIEW

The DERCASS Space-Saving Murphy Bed is designed to maximize space in your living area. This innovative bed frame folds compactly into a cabinet, providing a versatile solution for bedrooms, guest rooms, or multi-functional spaces. When folded, the unit appears as a stylish cabinet, concealing the bed entirely. The design also accommodates your mattress and bedding within the cabinet when stored.



Image: The DERCASS Space-Saving Murphy Bed in its unfolded position, ready for use. It features a grey cabinet structure with a twin-sized mattress and bedding, situated in a room with light-colored walls and a patterned rug.

SETUP AND ASSEMBLY

Assembly of the DERCASS Space-Saving Murphy Bed is required. Please ensure all components are present before beginning. It is recommended to have at least two adults for assembly due to the size and weight of the components.

Before You Begin:

- Unpack all parts and hardware. Verify against the included parts list (not provided in this manual, refer to packaging).
- Clear a spacious area for assembly.
- Gather necessary tools (e.g., screwdriver, Allen wrench - typically included or standard household tools).

Assembly Steps (General Guidance):

1. Assemble the main cabinet frame according to the manufacturer's instructions. Ensure all connections are secure.
2. Attach the bed frame mechanism to the cabinet. Pay close attention to the alignment and secure fastening of all pivot points and support arms.
3. Install the wooden slats onto the bed frame. These slats provide support for your mattress and eliminate the need for a box spring.
4. Attach any decorative panels or handles to the cabinet doors.
5. Carefully test the folding and unfolding mechanism to ensure smooth operation and stability.

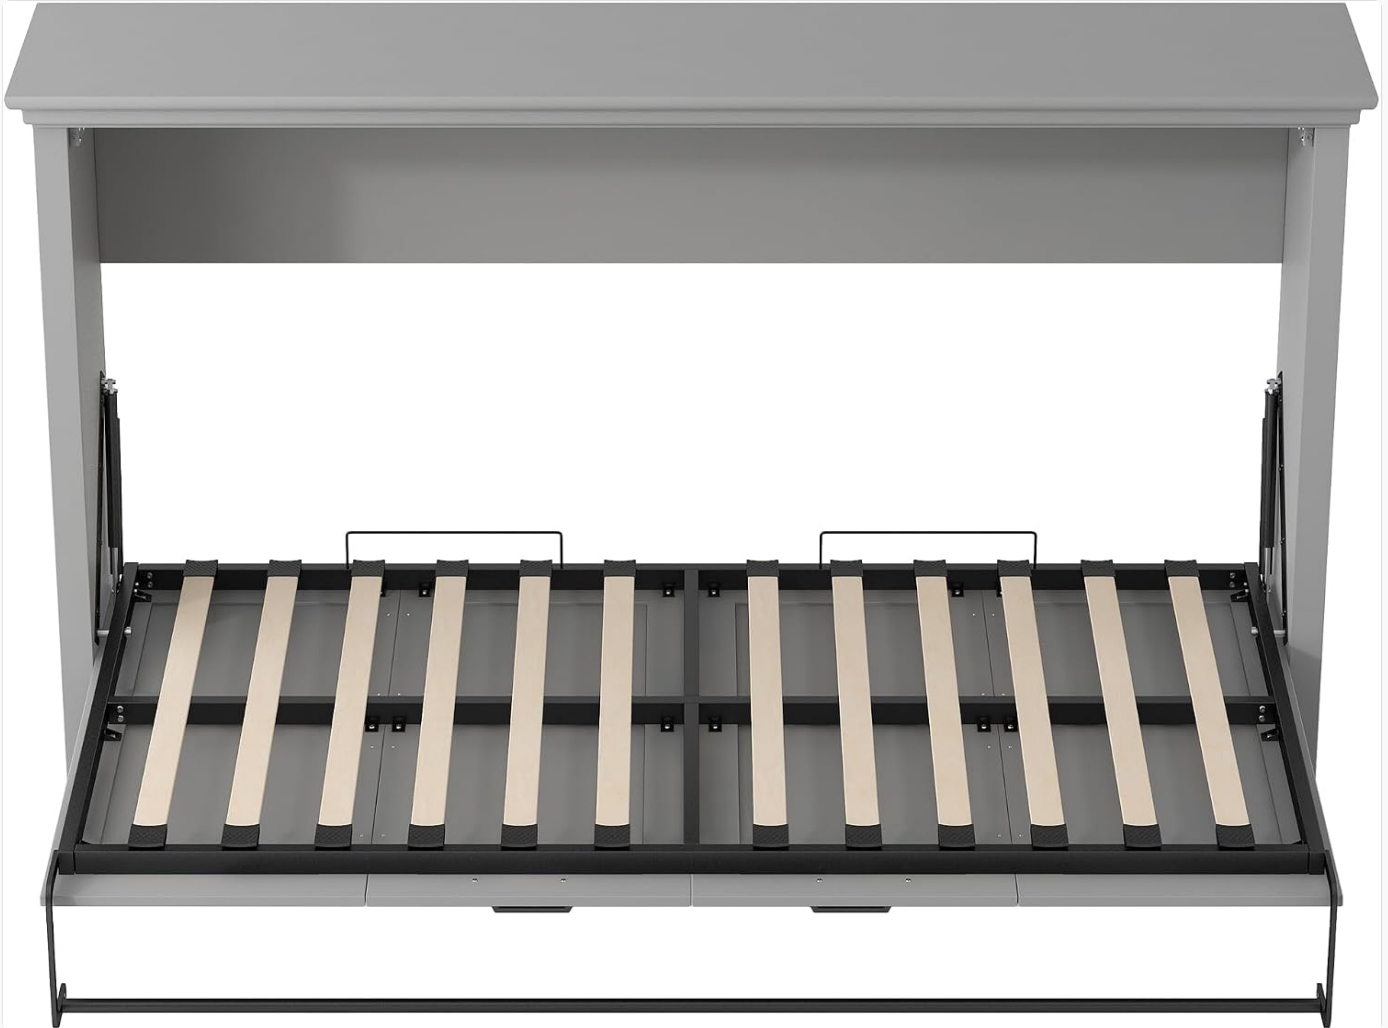


Image: A detailed view of the bed frame's wooden slat foundation, designed to support a mattress without a box spring. This image highlights the robust construction of the bed base.

OPERATING INSTRUCTIONS

The DERCASS Space-Saving Murphy Bed is designed for easy conversion between its cabinet and bed configurations.

To Unfold the Bed:

1. Ensure the area in front of the cabinet is clear of obstructions.
2. Gently pull the cabinet doors open.
3. Locate the bed frame handle or mechanism. Carefully pull the bed frame downwards and outwards until it is fully extended and resting on its support legs.

4. Confirm that the support legs are securely locked into place to ensure stability.

To Fold the Bed into the Cabinet:

1. Remove all bedding and the mattress from the bed frame. (Note: The design allows for mattress and sheets to remain, but for initial folding or if experiencing difficulty, removal is recommended).
2. Lift the bed frame from the foot end, guiding it upwards and inwards towards the cabinet.
3. Ensure the support legs retract properly as the bed frame folds.
4. Once the bed frame is fully retracted into the cabinet, close and secure the cabinet doors.



Image: The DERCASS Space-Saving Murphy Bed fully folded, appearing as a sleek grey cabinet with two handles. This demonstrates its space-saving design when not in use.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your DERCASS Murphy Bed.

Cleaning:

- Wipe the cabinet surfaces with a dry, soft cloth to remove dust and light smudges.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.

Mechanism Care:

- Periodically inspect all moving parts, hinges, and fasteners for tightness. Tighten any loose screws or bolts.
- If the folding mechanism becomes stiff, a small amount of silicone-based lubricant can be applied to pivot points, avoiding contact with wood surfaces.

TROUBLESHOOTING

If you encounter issues with your DERCASS Murphy Bed, refer to the following common problems and solutions:

Bed Does Not Fold/Unfold Smoothly:

- **Check for Obstructions:** Ensure no items are blocking the bed frame's path or interfering with the mechanism.
- **Verify Fasteners:** Inspect all screws and bolts on the folding mechanism and cabinet for looseness. Tighten as necessary.
- **Lubrication:** Apply a small amount of silicone lubricant to the pivot points of the mechanism if it feels stiff.

Bed Frame Feels Unstable:

- **Ensure Legs are Locked:** When unfolded, confirm that the support legs are fully extended and locked into their stable position.
- **Check Assembly:** Re-verify that all assembly steps were followed correctly and all connections are tight.
- **Level Surface:** Ensure the cabinet is placed on a flat, level surface. Uneven flooring can affect stability.

Mattress/Bedding Does Not Fit When Folded:

- **Mattress Thickness:** Ensure your mattress thickness is within the recommended 8-10 inches. Thicker mattresses may prevent proper folding.
- **Bedding Volume:** Excessive bedding (e.g., thick comforters, multiple pillows) may need to be removed before folding.

SPECIFICATIONS

Detailed specifications for the DERCASS Space-Saving Murphy Bed (Twin Grey, Model GX002043AAE):

SIZE:INCH

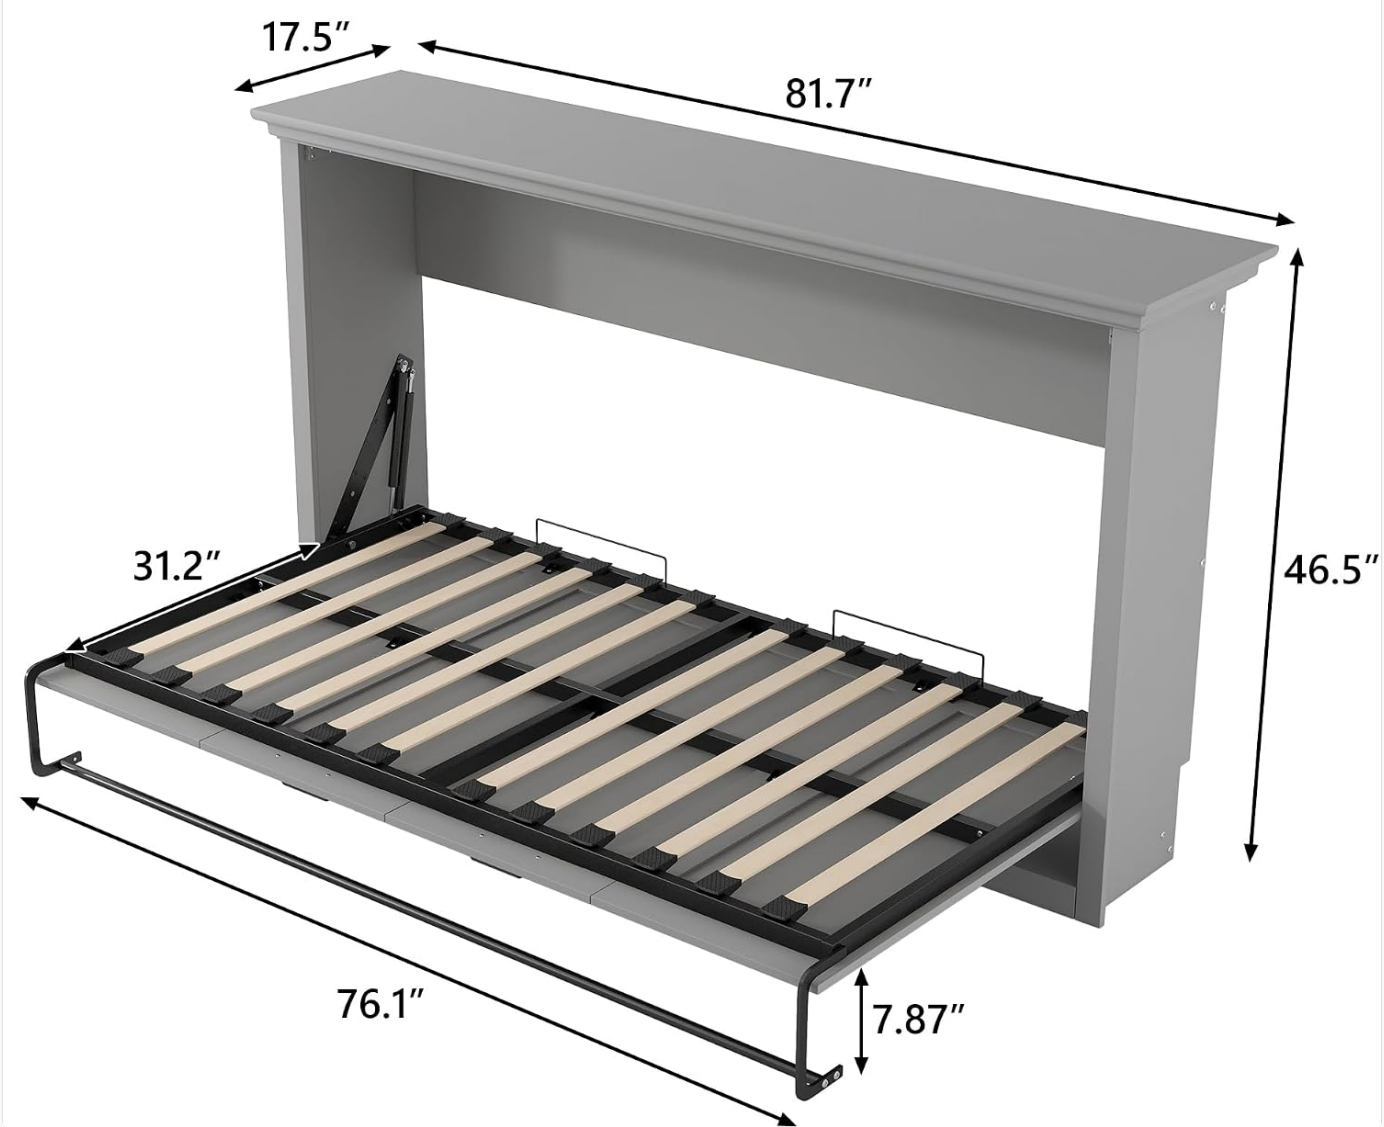


Image: A technical diagram illustrating the key dimensions of the DERCASS Murphy Bed in inches, including length, width, and height of both the cabinet and the unfolded bed frame.

Feature	Detail
Brand	DERCASS
Model Number	GX002043AAE
Size	Twin
Color	Grey
Material	MDF, Metal
Overall Product Dimensions (L x W x H)	81.7" x 48.7" x 46.5"
Twin Bed Dimensions	76.1" x 39"
Recommended Mattress Thickness	8-10 inches

Feature	Detail
Weight Capacity	1000 lbs
Assembly Required	Yes
Box Spring Required	No
Product Care Instructions	Wipe with Dry Cloth
Item Weight	170 pounds
UPC	717392786794

WARRANTY INFORMATION

Specific warranty details for the DERCASS Space-Saving Murphy Bed are not provided in this manual. For information regarding product warranty, including coverage duration and terms, please refer to the documentation included with your purchase or contact DERCASS customer support directly. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, parts replacement, or any questions not covered in this manual, please contact DERCASS customer support. Contact information can typically be found on the product packaging, the seller's website, or through your purchase platform.

When contacting support, please have your model number (GX002043AAE) and proof of purchase readily available.

© 2024 DERCASS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DG6358KS>

More documents and user manuals: <https://manuals.plus/>