

[Manuals.plus](#) /

› [Nokia](#) /

› Nokia C100 Smartphone User Manual

Nokia C100

Nokia C100 Smartphone User Manual

Model: C100 (TA-1484) | Brand: Nokia

INTRODUCTION

The Nokia C100 is an unlocked smartphone designed for ease of use and reliable performance. It operates on Android™ 12, offering a secure, personal, and intuitive user experience. This manual provides essential information for setting up, operating, and maintaining your device.



Image: Front and back view of the Nokia C100 smartphone, highlighting its compact design.

WHAT'S IN THE BOX

Your Nokia C100 package includes the following items:

- Nokia C100 Smartphone

- Power Adapter
- USB Cable
- *(Note: SIM card and headphones are sold separately)*

SETUP

1. Insert SIM Card

Before powering on your device, insert your Nano-SIM card. The SIM card tray is typically located on the side of the phone. Use the provided SIM ejector tool (if included) to open the tray. Place the SIM card into the tray with the gold contacts facing down, then reinsert the tray firmly.





Image: Rear view of the Nokia C100, showing the camera module and the textured back cover. The SIM tray is located on the side edge.

2. Charge the Battery

Connect the USB cable to the power adapter and then to your phone's charging port. Plug the power adapter into a wall outlet. The phone's battery icon will indicate charging status. A full charge takes approximately 3 hours. The device features a 3000 Milliamp Hours (mAh) battery.

3. Power On and Initial Setup

Press and hold the power button (usually on the right side) until the Nokia logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings. Your phone runs on Android 12.0.

OPERATING YOUR DEVICE

Basic Navigation

- **Touchscreen:** Navigate by tapping, swiping, pinching, and spreading on the 5.45-inch display.
- **Buttons:** Use the physical buttons for power, volume control, and other functions as indicated on the device.
- **Home Screen:** Access your apps, widgets, and notifications from the customizable home screen.

Making Calls and Sending Messages

Tap the [Phone](#) icon to make calls. Enter the number or select a contact. Tap the [Messages](#) icon to send and receive text messages. You can also use various messaging apps available on the Google Play Store.

Internet and Connectivity

Connect to the internet via Wi-Fi or your mobile data (4G). The phone supports Bluetooth for connecting to accessories and USB for data transfer and charging. Built-in GPS allows for location services and navigation.

Your browser does not support the video tag.

Video: Official product video for the Nokia C100, demonstrating various features and use cases. This video is provided by Parktel USA.

CAMERA FEATURES

The Nokia C100 is equipped with both front and rear cameras. The 8MP rear camera allows for clear photos, while the front camera is suitable for selfies and video calls.

- **Portrait Mode:** Enhance your selfies with face retouch on portrait mode, which sharpens the subject and blurs the background for a professional look.
- **Video Recording:** Capture moments with video recording capabilities.



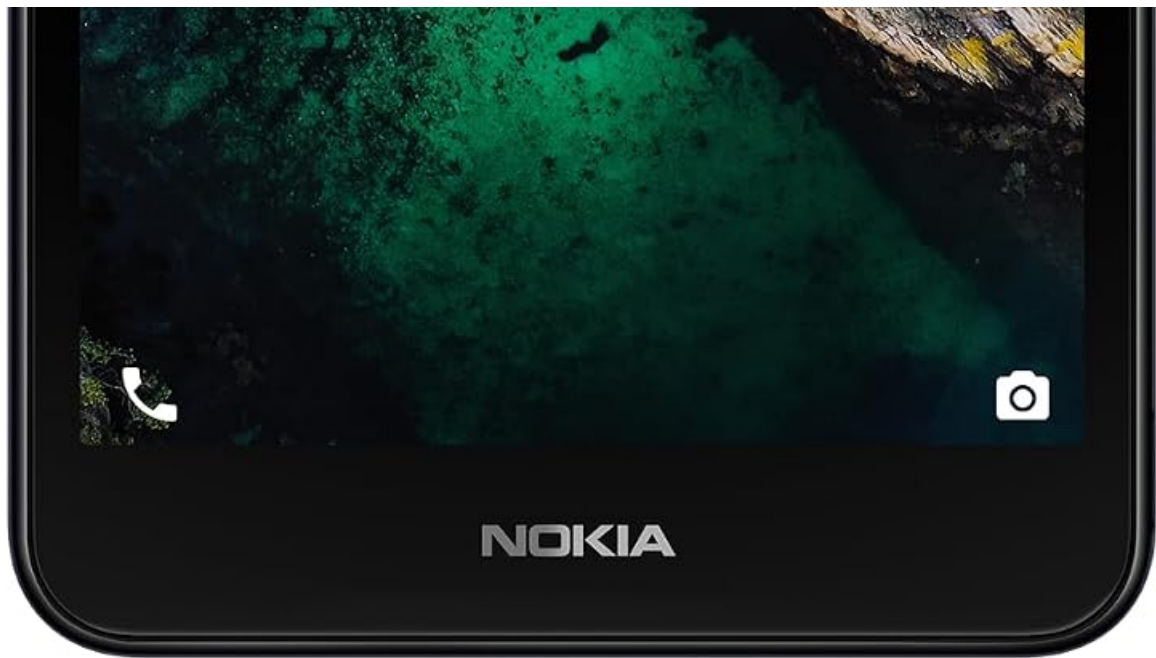


Image: Front view of the Nokia C100, showing the display with a nature-themed lock screen and the front camera at the top.

BATTERY LIFE

The Nokia C100 is designed with an all-day battery life to support your daily activities. The 3000 mAh Lithium Ion battery provides up to 8 hours of talk time. Actual battery performance may vary based on network conditions, usage patterns, and other factors.

MAINTENANCE

- **Keep Clean:** Regularly wipe your phone with a soft, dry cloth. Avoid harsh chemicals.
- **Software Updates:** Ensure your device's software is up to date to benefit from the latest features and security enhancements. Go to *Settings > System > System update*
- **Temperature:** Avoid exposing your phone to extreme temperatures (hot or cold) or direct sunlight for prolonged periods.
- **Storage:** Manage your 32GB internal storage by regularly deleting unnecessary files and apps, or by utilizing expandable memory options.

TROUBLESHOOTING

Common Issues and Solutions

- **Phone Not Responding:** Press and hold the power button for about 10-15 seconds to force a restart.
- **Network Issues:** Check if your SIM card is properly inserted. Ensure mobile data is enabled in settings. If issues persist, contact your carrier.
- **Battery Draining Quickly:** Reduce screen brightness, close unused apps, and disable unnecessary features like GPS or Bluetooth when not in use.
- **App Crashes:** Clear the app's cache (*Settings > Apps > [App Name] > Storage & cache > Clear cache*) or reinstall the app.
- **Slow Performance:** Free up storage space, restart your phone, or consider a factory reset as a last resort (*Note: This will erase all data*).

SPECIFICATIONS

Feature	Detail
Model Name	C100
Item Model Number	TA-1484
Operating System	Android 12.0
Screen Size	5.45 Inches
Resolution	720 x 1440
RAM Memory Installed Size	2 GB
Memory Storage Capacity	32 GB (Expandable)
CPU Speed	2 GHz
Battery Power Rating	3000 mAh Lithium Ion
Phone Talk Time	8 Hours
Charging Time	3 Hours
Rear Camera	8MP
Connectivity Technologies	Bluetooth, USB, Wi-Fi
Special Features	Built-In GPS, Expandable Memory
Audio Jack	3.5 mm
Product Dimensions	6.3 x 3 x 0.35 inches
Item Weight	6.1 ounces
Wireless Carrier	Unlocked for All Carriers

WARRANTY AND SUPPORT

Your Nokia C100 smartphone is covered by a manufacturer's limited warranty. Please refer to the warranty card included in your product packaging or visit the official Nokia support website for detailed information regarding warranty terms, conditions, and how to obtain service. For technical assistance, contact Nokia customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question