

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli YK-BH Replacement Remote Control User Manual

Effireli YK-BH

Effireli YK-BH Replacement Remote Control User Manual

Model: YK-BH

1. INTRODUCTION

This manual provides instructions for the Effireli YK-BH replacement remote control. This remote is designed to operate various Bauhn, Caixun, and JVC televisions without requiring any programming or setup. Simply insert batteries and begin use.

Compatible Models: ATV65UHDS-1020, ATV55UHDS-0920, V004, EC32S1N, EC32S2N, KALED24EH7520SVA.

If your specific TV model is not listed, or if your original remote appears significantly different, please contact customer support for compatibility verification.

2. SETUP

2.1 Battery Installation

The Effireli YK-BH remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image 1: Effireli YK-BH Replacement Remote Control. This image shows the front of the remote control, highlighting its button layout and overall design. The battery compartment is located on the back.

2.2 Initial Use

This remote control is pre-programmed and does not require any additional setup. Once batteries are installed, it is ready for immediate use with compatible televisions. Point the remote directly at your television's infrared receiver.

3. OPERATING THE REMOTE CONTROL

The Effireli YK-BH remote control features standard buttons for TV operation. Below is a general guide to common functions:

- **Power Button:** Turns the television on or off.
- **Volume Up/Down:** Adjusts the audio volume.
- **Channel Up/Down:** Changes the television channel.

- **Mute Button:** Silences the television audio.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used for menu navigation and selection.
- **Menu Button:** Accesses the television's main menu.
- **Exit Button:** Exits current menu or on-screen display.

Note: Specific button functions may vary slightly depending on your television model.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

5. TROUBLESHOOTING

- **Remote is not working:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Make sure there are no obstructions between the remote and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Limited range or intermittent response:**
 - Check battery levels and replace if necessary.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.
- **Certain buttons do not work:**
 - Verify that your TV model is listed as compatible. Some advanced functions may not be supported on all TV models.
 - Clean the remote control, especially around the buttons, to ensure no debris is causing sticking.

6. SPECIFICATIONS

- **Model Number:** YK-BH
- **Brand:** Effireli
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Television
- **Special Feature:** No Programming Required
- **Maximum Range:** Approximately 10 meters (33 feet)

- **Power Source:** 2 x AAA Batteries (not included)

7. WARRANTY INFORMATION

This product comes with a 12-month warranty covering manufacturing defects from the date of purchase. Additionally, a 30-day money-back guarantee is offered. Returns and exchanges are accepted within the warranty period for eligible issues.

For warranty claims or returns, please retain your proof of purchase.

8. CUSTOMER SUPPORT

If you encounter issues not covered in this manual, or if you need to confirm compatibility for a specific TV model not listed, please contact Effireli customer support. Provide your product model number (YK-BH) and details of your television model for efficient assistance.

Contact information for support is typically found on the product packaging or the retailer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DG6LCSGJ>

More documents and user manuals: <https://manuals.plus/>