

Manuals.plus /

› AdHoc /

› AdHoc Mini Electric Salt and Pepper Grinder User Manual

AdHoc B0DG6TP62P

AdHoc Mini Electric Salt and Pepper Grinder User Manual

Model: B0DG6TP62P

INTRODUCTION

Thank you for choosing the AdHoc Mini Electric Salt and Pepper Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

SAFETY INSTRUCTIONS

- Keep the appliance out of reach of children.
- Do not immerse the grinder in water or other liquids.
- Use only the specified battery type and ensure correct polarity.
- Do not attempt to grind substances other than dry salt crystals or peppercorns.
- Avoid contact with moving parts during operation.
- If the grinder malfunctions, discontinue use and consult the troubleshooting section or contact customer support.

PACKAGE CONTENTS

- 1 x AdHoc Mini Electric Salt and Pepper Grinder
- 1 x User Manual
- (Batteries not included)

PRODUCT OVERVIEW

Familiarize yourself with the components of your AdHoc Mini Electric Grinder:





AdHoc



Figure 1: AdHoc Mini Electric Salt and Pepper Grinder. This image displays the sleek, stainless steel body of the grinder with its transparent spice chamber and single control button.

1. **Control Button:** Activates the grinding mechanism.
2. **Battery Compartment:** Located at the base, for AAA batteries.
3. **Spice Chamber:** Transparent section for holding salt crystals or peppercorns.
4. **CeraCut Ceramic Grinder:** High-efficiency, corrosion-resistant grinding mechanism.
5. **Coarseness Adjustment Dial:** Located at the bottom for adjusting grind size.
6. **Aroma-tight Lid:** Protects spices and ensures a clean surface.



Figure 2: Key features of the AdHoc Mini Electric Grinder. This image highlights the 5.8-inch height, CeraCut Grinder, electric operation for salt and pepper, and stainless steel construction.

Aroma-tight
lid ensures
spices stay
fresh



Figure 3: The grinder with its aroma-tight lid, designed to keep spices fresh and prevent residue on surfaces.

SETUP

1. Inserting Batteries

1. Twist and remove the bottom cap of the grinder to access the battery compartment.
2. Insert 4 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Replace the bottom cap by twisting it back into place until secure.

2. Filling with Spices

1. Hold the grinder firmly and twist the upper stainless steel body counter-clockwise to separate it from the transparent spice chamber.

2. Fill the transparent chamber with your desired dry salt crystals or peppercorns. Do not overfill.
3. Align the upper body with the spice chamber and twist clockwise until it clicks securely into place.

With a long _____
battery life,
you can use it
for hundreds
of recipes.



Figure 4: The grinder filled with peppercorns, demonstrating its capacity and readiness for use.

OPERATING INSTRUCTIONS

1. Grinding Spices

1. Remove the aroma-tight lid from the bottom of the grinder.
2. Hold the grinder over your food or dish.
3. Press and hold the control button on the side of the grinder to activate the grinding mechanism. The integrated LED

light will illuminate during operation.

4. Release the button to stop grinding.
5. Replace the aroma-tight lid after use to maintain freshness and prevent spills.

Season at
the touch
of a button.



Figure 5: The grinder in action, demonstrating the one-button operation and the dispensing of spices.

2. Adjusting Coarseness

1. Locate the coarseness adjustment dial at the very bottom of the grinder.

2. Turn the dial clockwise for a finer grind.
3. Turn the dial counter-clockwise for a coarser grind.
4. Test the grind size on a plate before applying to food.

Made for seasoning
precision with
MicroStep technology



Figure 6: Close-up view of the grinder's base, illustrating the MicroStep technology for precise coarseness adjustment.

MAINTENANCE

Cleaning

- Ensure the grinder is switched off and batteries are removed before cleaning.
- Wipe the exterior of the grinder with a soft, damp cloth. Do not use abrasive cleaners.
- The spice chamber can be detached and cleaned with warm, soapy water. Ensure it is completely dry before reassembling.
- Do not wash the main body with the motor in a dishwasher or immerse it in water.
- Use a small brush to clean any spice residue from the grinding mechanism.

Storage

Store the grinder in a cool, dry place away from direct sunlight and moisture. If storing for an extended period, it is recommended to remove the batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder not operating.	Low or dead batteries; incorrect battery insertion; spice chamber not securely attached.	Replace batteries; check battery polarity; ensure spice chamber is twisted securely.
Grinding mechanism jammed.	Large spice pieces; foreign object; excessive moisture.	Clear the grinding mechanism of any obstructions; ensure spices are dry.
Inconsistent grind.	Coarseness dial not set correctly; grinding mechanism needs cleaning.	Adjust the coarseness dial; clean the grinding mechanism.

SPECIFICATIONS

- **Product Dimensions:** 2.4 x 1.7 x 5.8 inches
- **Item Weight:** 6.7 ounces
- **Material:** Acrylic, Ceramic, Stainless Steel
- **Operation Mode:** Automatic (One-Button)
- **Grinder Type:** CeraCut Ceramic
- **Power Source:** Battery Powered (4 x AAA, not included)
- **Dishwasher Safe:** No

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact AdHoc customer service directly. Contact details can typically be found on the manufacturer's official website or on the product's retail page.

