

Vospeed D01-P

Vospeed Slow Juicer Model D01-P User Manual

For optimal performance and longevity of your appliance

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Vospeed Slow Juicer. Retain this manual for future reference.

- Always ensure the juicer is correctly assembled before operation. A built-in safety switch prevents operation if not assembled properly.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the feeder chute during operation to prevent injury. Use the food pusher provided.
- Unplug the appliance from the power outlet before cleaning, disassembling, or assembling parts.
- Do not operate the juicer if the power cord or plug is damaged, or if the appliance malfunctions or has been dropped or damaged in any way.
- This appliance is for household use only. Do not use outdoors.
- The motor is equipped with temperature-controlled safety. If the motor overheats, it will automatically shut down. Allow it to cool down before resuming use.
- Ensure the juicer is placed on a stable, flat, and dry surface. Non-slip rubber feet provide stability during use.

2. PRODUCT OVERVIEW

2.1 Components

Familiarize yourself with the parts of your Vospeed Slow Juicer:

- Motor Base with Control Knob
- Juicing Bowl/Collection Container (Large, transparent)
- Filter/Strainer (0.4mm microporous screen)

- Auger/Squeezing Screw
- Feeder Chute with Lid (3.3-inch large diameter)
- Pulp Outlet
- Juice Outlet
- Juice Pitcher (1200ML capacity)
- Pulp Container
- Cleaning Brush
- Locking Bar Safety Setting

2.2 Key Features

- **Powerful Masticating Juicer:** Gently extracts juice to preserve nutrients.
- **Large Filling Funnel:** Accommodates whole fruits and vegetables, reducing preparation time.
- **Leak-Proof Juice Container:** Ensures a clean juicing experience.
- **Two Speed Settings:** Optimized for various ingredient types.
- **Easy to Clean:** Detachable, dishwasher-safe parts and included cleaning brush.
- **Safety Features:** Built-in safety switch, temperature-controlled motor protection, non-slip feet.



Image 2.1: Vospeed Slow Juicer D01-P assembled with a pitcher of juice and fresh produce.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Vospeed Slow Juicer:

1. Place the motor base on a stable, flat, and dry surface.
2. Align the juicing bowl with the motor base and rotate it until it locks securely into place.
3. Insert the filter/strainer into the juicing bowl. Ensure it is seated correctly.
4. Place the auger/squeezing screw into the center of the filter.
5. Attach the feeder chute assembly onto the juicing bowl, aligning the marks, and rotate until it clicks into the locked position. The locking bar should be engaged.
6. Position the juice pitcher under the juice outlet and the pulp container under the pulp outlet.
7. Ensure all parts are securely locked. The juicer will not operate if not correctly assembled due to the built-in safety

switch.

4. OPERATING INSTRUCTIONS

4.1 Ingredient Preparation

- Wash all fruits and vegetables thoroughly.
- For ingredients with large seeds (e.g., peaches, plums), remove the seeds before juicing.
- Peel citrus fruits (oranges, lemons, grapefruits) to avoid bitter taste from the rind.
- For fibrous vegetables like celery or leafy greens, cut them into smaller pieces (approx. 1-2 inches) to prevent clogging.
- The large 3.3-inch feeder chute can accommodate many whole fruits and vegetables, reducing the need for extensive pre-cutting.

3.3-inch large-diameter feeder

Handle large quantities of ingredients at once,
removes external influences and locks in
moisture and nutrients



Image 4.1: The 3.3-inch large-diameter feeder chute, designed to handle larger ingredients.

4.2 Juicing Process

1. Plug the juicer into a suitable power outlet.
2. Turn the control knob to the desired speed setting:
 - **Speed "1" (Low):** Ideal for soft foods such as oranges, grapes, strawberries, and kiwis.
 - **Speed "2" (High):** Suitable for hard foods like carrots, apples, celery, and ginger.
3. Gradually feed the prepared ingredients into the feeder chute. Use the food pusher to guide them down, but do not force them.
4. The juicer will slowly extract the juice, which will flow into the juice pitcher, while the pulp will be expelled into the pulp container.
5. Once juicing is complete, turn the control knob to "0" (Off) and unplug the appliance.

1400W Powerful Motor & 0.4mm microporous screen sharp filter design



Image 4.2: The juicer extracting juice, highlighting the 1400W motor and 0.4mm microporous filter.



Multiple food choices with 2 speeds

Speed "1 "for soft foods.



Speed "2 "for hard foods.



Image 4.3: The two-speed control knob for selecting appropriate juicing speed for various ingredients.

1200ML large juice glass

With its own scale line, one time to undertake many cups of the juice, easy for family dinner or party



Image 4.4: The 1200ML large juice glass, suitable for family use.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your juicer.

1. **Disassembly:** After unplugging, disassemble the juicer in reverse order of assembly.
2. **Rinsing:** Rinse all detachable parts (juicing bowl, filter, auger, feeder chute, juice pitcher, pulp container) under running water immediately after use to prevent pulp from drying and sticking.
3. **Brushing:** Use the provided cleaning brush to remove any stubborn pulp from the filter screen. The 0.4mm microporous screen requires thorough cleaning.
4. **Dishwasher Safe:** All detachable parts are dishwasher safe. Place them on the top rack of your dishwasher.
5. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse it in water.
6. **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing the juicer. Store in a clean,

dry place.



Easy to clean

- 1.The machine comes with a cleaning brush that cleans the filter quickly.
- 2. dishwasher safe.



Image 5.1: Cleaning the filter with the included brush and demonstrating dishwasher-safe parts.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; not assembled correctly; safety lock not engaged; motor overheated.	Check power connection. Ensure all parts are correctly assembled and locked. If motor overheated, allow to cool for 30 minutes.
Excessive vibration or noise.	Unstable surface; parts not assembled correctly; too much ingredient fed at once.	Place on a stable surface. Reassemble parts. Feed ingredients slowly and in smaller quantities.

Problem	Possible Cause	Solution
Pulp is wet, or low juice yield.	Incorrect speed setting for ingredients; filter clogged; ingredients too soft for slow juicing.	Use appropriate speed (Speed 1 for soft, Speed 2 for hard). Clean the filter thoroughly. Some very soft fruits may yield less juice in a slow juicer.
Juicer stops during operation.	Motor overheating protection activated; too much pressure on ingredients; jam.	Turn off, unplug, and allow motor to cool. Disassemble and clear any blockages. Reduce feeding pressure.

locking Bar Safety Setting



Temperature-controlled safety
Motor overheating will trigger automatic shutdown



Built-in safety switch
Start only if correctly assembled



Non-slip rubber feet
Safer and more stable during use



Image 6.1: Overview of the juicer's safety features, including temperature-controlled safety, built-in safety switch, and non-slip rubber feet.

7. SPECIFICATIONS

- **Brand:** Vospeed

- **Model Name:** D01-P
- **Color:** Black
- **Product Dimensions:** 13.94"D x 10.31"W x 17.72"H
- **Juice Pitcher Capacity:** 1.2 Liters
- **Voltage:** 230 Volts
- **Dishwasher Safe Parts:** Yes (Detachable parts)
- **Item Weight:** 8.71 pounds
- **ASIN:** B0DG83P1XV

8. WARRANTY AND SUPPORT

Vospeed products are manufactured to high-quality standards. For warranty information, product support, or to purchase replacement parts, please refer to the warranty card included with your purchase or visit the official Vospeed website. Please have your model number (D01-P) and purchase date available when contacting support. You can visit the Vospeed Store for more information:[Vospeed Official Store](#)

© 2024 Vospeed. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

