

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [RCA](#) /

› [RCA 10.1" WiFi Digital Picture Frame 114KZ Instruction Manual](#)

RCA 114KZ

RCA 10.1" WiFi Digital Picture Frame 114KZ Instruction Manual

INTRODUCTION

Thank you for choosing the RCA 10.1" WiFi Digital Picture Frame, model 114KZ. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your new digital photo frame. Enjoy sharing your cherished memories with family and friends through its intuitive features.

PACKAGE CONTENTS

Please check the box for the following items:

- 2 x RCA 10.1" WiFi Digital Picture Frame
- 2 x Frame Stand
- 2 x Power Adapter
- 2 x User Manual
- 4 x Screws (for wall mounting)



Figure 1: Package Contents. This image displays the contents of the RCA 10.1" WiFi Digital Picture Frame package, including two

frames, two stands, two power adapters, two user manuals, and four screws for mounting.

PRODUCT OVERVIEW

The RCA 114KZ Digital Picture Frame features a 10.1-inch HD IPS touch screen for vivid photo and video display. It supports both portrait and landscape orientations and can be placed on a desk or wall-mounted.



Figure 2: Front View of the Digital Picture Frame. This image highlights the 10.1-inch HD IPS touch screen and its various functions like Photo, Video, Slideshow, Show Caption, Brightness Adjustment, Touch Screen, Sleep Mode, and Weather display.

Auto Rotate & Wall Mountable

Easily switch between portrait and landscape, or mount on the wall to fit your space.



Figure 3: Auto-Rotate and Wall Mounting. This image demonstrates the frame's ability to auto-rotate between portrait and landscape modes, and shows the detachable stand and wall-mount hole for flexible placement.

SETUP

1. Initial Setup and Power On

1. Attach the detachable stand to the back of the frame if you intend to place it on a desk or shelf.
2. Connect the power adapter to the frame and plug it into a power outlet. The frame will automatically power on.
3. Follow the on-screen prompts to select your language and connect to your Wi-Fi network.

2. Uhale App Download and Pairing

1. Download the "Uhale" app from the App Store (iOS) or Google Play Store (Android) on your smartphone.
2. Open the Uhale app and create an account.
3. On your digital picture frame, navigate to the "Add Friend" or "My Frame" section to find your unique frame ID or QR code.
4. In the Uhale app, select "Add Frame" and enter the frame ID or scan the QR code displayed on your digital

picture frame to pair your device.



Figure 4: Wireless Sharing Setup. This image illustrates the process of connecting the digital picture frame to a smartphone via the Uhale app for wireless photo and video sharing.

OPERATING INSTRUCTIONS

1. Sharing Photos and Videos

- **Via Uhale App:** Open the Uhale app, select the desired photos or videos from your gallery, and send them directly to your paired digital picture frame. You can send up to 100 photos at a time.
- **Via Uhale Website:** Upload photos directly from your computer to the frame by logging into the Uhale website.
- **External Storage:** Insert a USB drive or SD card (up to 64GB) into the frame to import, export, or back up photos and videos.



Figure 5: Instant or Scheduled Sending. This image shows how to send photos and videos instantly or schedule them for later delivery using the Uhale app.

2. Slideshow and Display Settings

- **Slideshow Mode:** Customize the slideshow mode, including single or loop playback, playback order, and photo display duration.
- **Brightness Adjustment:** Swipe up and down on the left side of the touch screen to quickly adjust brightness.
- **Volume Adjustment:** Swipe up and down on the right side of the touch screen to quickly adjust the sound

level for videos.

- **Sleep Mode:** Set custom sleep schedules for energy saving.
- **Auto-Rotate:** The frame automatically adjusts photo orientation based on its physical position (portrait or landscape).



Figure 6: Quick Adjust Brightness & Volume. This image demonstrates how to quickly adjust screen brightness by swiping on the left side and volume by swiping on the right side of the touch screen.

3. Managing Photos and Friends

- **Hide/Delete Images:** Tap on a photo to access options to hide or delete specific images.
- **Add Friends:** Invite friends and family to share photos and videos to your frame via the Uhale app using your unique frame ID.

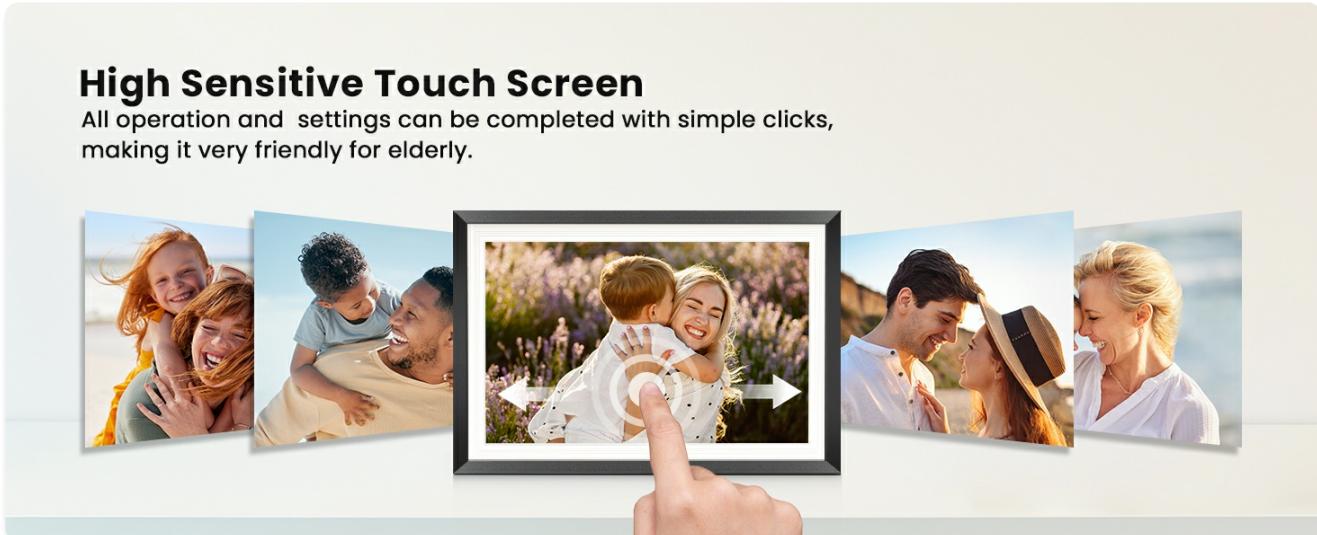


Figure 7: Private & Secure Sharing. This image illustrates the private and secure sharing capabilities of the Uhale app, allowing multiple users to send photos to the frame.

MAINTENANCE

- **Cleaning:** Gently wipe the screen with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Software Updates:** Ensure your frame is connected to Wi-Fi to receive automatic software updates, which improve performance and add new features.
- **Backup:** Regularly back up your cherished photos and videos to an external USB drive or SD card to prevent data loss.

TROUBLESHOOTING

- **Frame not connecting to Wi-Fi:** Ensure your Wi-Fi password is correct and the frame is within range of your router. Try restarting both the frame and your router.
- **Photos not appearing on the frame:** Verify that the frame is connected to Wi-Fi and the Uhale app is successfully paired. Check your internet connection and ensure photos are uploaded correctly through the app or website.
- **Screen is unresponsive:** Try restarting the frame by unplugging it and plugging it back in. If the issue persists, contact customer support.
- **Images appear stretched or cropped:** Adjust the "Fill frame" setting in the slideshow options to ensure photos are displayed as desired.

SPECIFICATIONS

Feature	Detail
Product Dimensions	10.08 x 6.85 x 0.99 inches
Item Weight	1.14 pounds
Item Model Number	114KZ
Brand	RCA
Resolution	1280x800 (WXGA)
Compatible Devices	Smartphone
Screen Size	10.1 Inches
Internal Storage	32GB (stores over 60,000 photos)
Expandable Storage	USB or SD card up to 64GB

WARRANTY AND SUPPORT

Each RCA 10.1" Wi-Fi Digital Frame undergoes inspection at every stage of production to ensure the highest quality standards. RCA provides lifetime technical support for this product.

For technical assistance or any inquiries, please do not hesitate to reach out to us via the Amazon Message Center or our After-Sales Mailbox.

The Cool Gi-ft for Friends



Figure 8: Customer Service. This image outlines RCA's commitment to customer service, including 24-hour quick replies, 30-day return policy, and lifetime technical support.