

## CuisinSmart I7ihIVvNm9TevZWlvdfkEghacmCal

# CuisinSmart 12V Electric Ride-On Motorcycle User Manual

Model: I7ihIVvNm9TevZWlvdfkEghacmCal

## 1. INTRODUCTION

---

Thank you for choosing the CuisinSmart 12V Electric Ride-On Motorcycle. This manual provides essential information for the safe assembly, operation, and maintenance of your new ride-on toy. Please read it thoroughly before use and retain it for future reference.

### 1.1 Important Safety Information

- **Adult Supervision Required:** This product is intended for children aged 3-8 years and must always be operated under direct adult supervision.
- **Weight Limit:** Do not exceed the maximum load capacity of 66 lbs (30 kg).
- **Protective Gear:** Always ensure the child wears a helmet and appropriate safety gear (e.g., knee and elbow pads) while riding.
- **Safe Riding Environment:** Use on flat, dry surfaces away from traffic, swimming pools, or other hazards. Avoid riding on slopes, uneven terrain, or near stairs.
- **Battery Safety:** Only use the provided charger and battery. Do not modify the electrical system.

## 2. PRODUCT COMPONENTS

---

Before assembly, ensure all parts are present and undamaged. Refer to the diagram below for identification.



Image 1: The CuisinSmart 12V Electric Ride-On Motorcycle in red, showcasing its overall design with LED lights on the wheels and training wheels attached.

## 2.1 What's in the Box

- Kids Ride On Motorcycle (Main Body)
- Training Wheels (2)
- Charger
- Rechargeable 12V 7AH Battery (pre-installed or separate)
- Assembly Hardware (screws, washers, etc.)
- Instruction Manual (this document)

## 3. ASSEMBLY INSTRUCTIONS

---

Adult assembly is required. Please follow these steps carefully.

1. **Attach Front Wheel:** Secure the front wheel to the fork using the provided axle, washers, and nuts. Ensure it spins freely.
2. **Install Handlebars:** Insert the handlebars into the steering column and tighten the securing bolt. Ensure the handlebars are straight and firm.
3. **Connect Battery:** Locate the battery compartment (usually under the seat). Connect the battery terminals (red to red, black to black). Ensure connections are secure.
4. **Attach Training Wheels:** Mount the training wheels to the rear axle using the designated slots and hardware. Ensure they are securely fastened and provide stability.
5. **Final Check:** Before first use, inspect all connections, bolts, and wheels to ensure they are properly assembled and tightened.

## 4. BATTERY CHARGING

---

The motorcycle is powered by a 12V 7AH rechargeable battery. Proper charging ensures optimal performance and battery life.

## 4.1 First Use Charging

Before the first use, charge the battery for a full 8-12 hours. Do not overcharge for more than 18 hours.

## 4.2 Regular Charging

- Connect the charger to the charging port on the motorcycle (refer to the control panel image for location).
- Plug the charger into a standard wall outlet.
- Charge for approximately 8-12 hours after each use, or when the power indicator shows low battery.
- Do not charge for more than 18 hours to prevent battery damage.
- Disconnect the charger once charging is complete.



Image 2: Close-up of the motorcycle's control panel, showing the power button, USB port, MP3 input, and battery level indicator. The charging port is typically located near this panel.

## 5. OPERATING INSTRUCTIONS

Familiarize yourself with the controls before allowing a child to operate the motorcycle.

### 5.1 Starting the Motorcycle

1. Ensure the battery is charged.
2. Press the main power button located on the control panel (refer to Image 2). The motorcycle will power on, and lights may illuminate.

### 5.2 Driving the Motorcycle

- **Forward/Reverse Switch:** Use the switch (often near the foot pedal or control panel) to select forward or reverse motion.
- **Manual Throttle:** Twist the right handlebar grip to accelerate forward. The speed range is 1.8 - 3.2

MPH (3-5 KM/H). Release the throttle to slow down.

- **Foot Pedal:** Some models may also include a foot pedal for acceleration. Press the pedal to move forward, release to brake.
- **Steering:** Turn the handlebars left or right to steer the motorcycle.



Image 3: Detail of the manual twist-throttle on the right handlebar, indicating how to control speed.

### 5.3 Entertainment Functions

- **Music/Stories:** The motorcycle has built-in music and stories. Use the buttons on the control panel to cycle through them.
- **USB/MP3 Connectivity:** Connect a USB drive or MP3 player to the designated port on the control panel (refer to Image 2) to play your child's favorite audio.

### 5.4 LED Lights

The motorcycle features LED lights for enhanced visibility and aesthetics. These lights typically activate when the motorcycle is powered on.



Image 4: Close-up view of the wheel with integrated LED lights, which illuminate during operation.

## 6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of the motorcycle.

## 6.1 Cleaning

- Wipe the motorcycle with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.

## 6.2 Battery Care

- Charge the battery fully after each use.
- If storing for an extended period, charge the battery at least once a month to prevent deep discharge.
- Store the battery in a cool, dry place.

## 6.3 Storage

- Store the motorcycle indoors in a dry area when not in use.
- Protect it from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Motorcycle does not start	Battery not charged Battery connection loose Power button not pressed	Charge battery fully Check and secure battery connections Ensure power button is pressed
Motorcycle runs slowly	Low battery charge Overloaded Riding on unsuitable surface	Recharge battery Reduce load (check weight limit) Move to a flat, smooth surface
Lights or music not working	Low battery Loose wiring Faulty component	Charge battery Check visible wiring connections Contact customer support
Motorcycle stops suddenly	Overload protection activated Loose battery connection	Remove weight, wait a few minutes, then restart Check battery connections

## 8. SPECIFICATIONS

Feature	Detail
Model Number	I7ihIVvNm9TevZWlvdfkEghacmCaI
Brand	CuisinSmart
Battery	12V 7AH Rechargeable
Motor	550W
Speed Range	1.8 - 3.2 MPH (3-5 KM/H)

Feature	Detail
Recommended Age	3 - 8 years
Maximum Load	66 lbs (30 kg)
Product Dimensions	42.91 x 13.19 x 22.17 inches
Item Weight	33 pounds
Features	Training Wheels, Manual Throttle, LED Lights, Music, USB, MP3

## 9. WARRANTY INFORMATION

---

CuisinSmart products are manufactured to high-quality standards. This product comes with a limited warranty against manufacturing defects. Please retain your proof of purchase for warranty claims. For specific warranty terms and conditions, refer to the documentation provided at the time of purchase or contact customer support.

## 10. CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, or encounter issues not covered in this manual, please contact CuisinSmart customer support. Contact details can typically be found on the product packaging or the official brand website.

Please have your model number (I7ihIVvNm9TevZWlvdfkEghacmGal) and purchase information ready when contacting support.