

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TFCFL](#) /

› [TFCFL JCE002 Portable Carpet and Upholstery Deep Cleaner Instruction Manual](#)

## TFCFL JCE002

# TFCFL JCE002 Portable Carpet and Upholstery Deep Cleaner Instruction Manual

Model: JCE002

## 1. PRODUCT OVERVIEW

The TFCFL JCE002 is a portable deep cleaner designed for effective spot and stain removal from various fabric surfaces. Its compact design and powerful suction make it suitable for cleaning carpets, upholstery, stairs, and car interiors. This machine features separate tanks for clean and dirty water, ensuring efficient cleaning performance.



Image 1.1: The TFCFL JCE002 Portable Carpet and Upholstery Deep Cleaner, showcasing its compact design and hose attachment.

### Key Features:

- **Powerful Suction:** Equipped with 11Kpa maximum suction force and 450W rated power for efficient dirt and stain removal.
- **Dual Tank System:** Separate 1080ml (38oz) clean water tank and 850ml (29.92oz) dirty water tank to prevent cross-contamination.
- **Versatile Tools:** Includes two cleaning brushes (large and small) for various cleaning scenarios.
- **Compact and Portable:** Designed for easy storage and transport with a convenient handle and wrap-

around hose storage.

- **Extended Reach:** Features a 1.2m (3.94ft) water hose and a 5m (16.4ft) power cord for an operating radius of 6.2m (20.34ft).



Image 1.2: The two included cleaning brushes, designed for different cleaning tasks.

## 2. SAFETY INSTRUCTIONS

---

Please read all safety instructions carefully before operating the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always connect to a properly grounded outlet.
- Do not immerse the appliance in water or other liquids.
- Do not use with a damaged cord or plug. If the cord or plug is damaged, contact customer service for replacement.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Unplug from outlet when not in use and before cleaning or servicing.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## 3. SETUP AND ASSEMBLY

---

Follow these steps to prepare your TFCFL JCE002 deep cleaner for use.

1. **Unpack the Unit:** Carefully remove all components from the packaging. Ensure all parts listed in the package contents are present.
2. **Attach Cleaning Tool:** Select the appropriate cleaning brush (large or small) for your task. Connect the desired brush to the end of the water hose until it clicks securely into place.
3. **Fill the Clean Water Tank:** Locate the clean water tank (usually marked 'MAX FILL' or with a blue cap). Remove the tank and fill it with clean water up to the 'MAX' line. For enhanced cleaning, you may add a suitable carpet cleaning solution as per the solution manufacturer's instructions. Do not overfill.
4. **Secure the Clean Water Tank:** Place the filled clean water tank back into its designated slot on the

main unit, ensuring it is seated firmly.

5. **Position the Dirty Water Tank:** Ensure the dirty water tank is empty and properly installed in its compartment.

## 4. OPERATING INSTRUCTIONS

---

Before operating, ensure the unit is properly set up as described in Section 3.

1. **Plug In:** Connect the power cord to a grounded 110V electrical outlet.
2. **Pre-treat (Optional):** For tough stains, pre-treat the area with a suitable cleaning solution according to the solution manufacturer's instructions. Allow it to sit for a few minutes.
3. **Activate Spray and Suction:** Hold the cleaning tool over the stained area. Press the spray trigger on the handle to dispense cleaning solution onto the surface. Simultaneously, move the tool slowly over the area, applying gentle pressure, to scrub and extract the dirty solution.
4. **Clean the Area:** Continue to spray and extract until the stain is removed and the extracted water appears clean. Overlap passes slightly to ensure thorough cleaning.
5. **Dry the Area:** After cleaning, make several dry passes over the area without pressing the spray trigger to remove as much moisture as possible. This helps to speed up drying time.



Image 4.1: Demonstrating the cleaning tool in action on a carpet stain, showing the spray and suction process.



Image 4.2: The cleaner being used to remove a stain from a couch, highlighting its versatility for upholstery.



Image 4.3: The cleaner being used on a plush toy, demonstrating its gentle yet effective cleaning for delicate items.

## 5. MAINTENANCE AND STORAGE

---

Regular maintenance ensures optimal performance and extends the life of your deep cleaner.

1. **Empty and Rinse Dirty Water Tank:** After each use, remove the dirty water tank. Carefully pour out the dirty water and rinse the tank thoroughly with clean water. Allow it to air dry before reassembling.
2. **Rinse Clean Water Tank:** If cleaning solution was used, rinse the clean water tank to prevent residue

buildup.

3. **Clean Cleaning Tools:** Detach the cleaning brush from the hose. Rinse the brush and nozzle under running water to remove any debris or residue.
4. **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals.
5. **Store:** Wrap the water hose around the designated storage slot on the product housing. Secure the power cord using the organizer ports. Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.



Image 5.1: A hand removing the dirty water tank from the main unit for emptying and cleaning.

## 6. TROUBLESHOOTING

If you encounter issues with your deep cleaner, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
No Power	Unit not plugged in; Power outlet not working; Circuit breaker tripped.	Ensure power cord is securely plugged in. Test the outlet with another appliance. Reset the circuit breaker if necessary.
No Suction	Dirty water tank full; Hose or nozzle clogged; Tank not properly seated.	Empty and clean the dirty water tank. Check hose and nozzle for blockages and clear them. Ensure both tanks are securely in place.
No Spray	Clean water tank empty; Spray nozzle clogged; Tank not properly seated.	Refill the clean water tank. Clean the spray nozzle. Ensure the clean water tank is securely in place.
Leaking	Tanks not properly seated; Tank seals damaged.	Ensure both clean and dirty water tanks are correctly and securely installed. Check tank seals for damage and replace if necessary.

## 7. SPECIFICATIONS

Detailed technical specifications for the TFCFL JCE002 Portable Carpet and Upholstery Deep Cleaner.

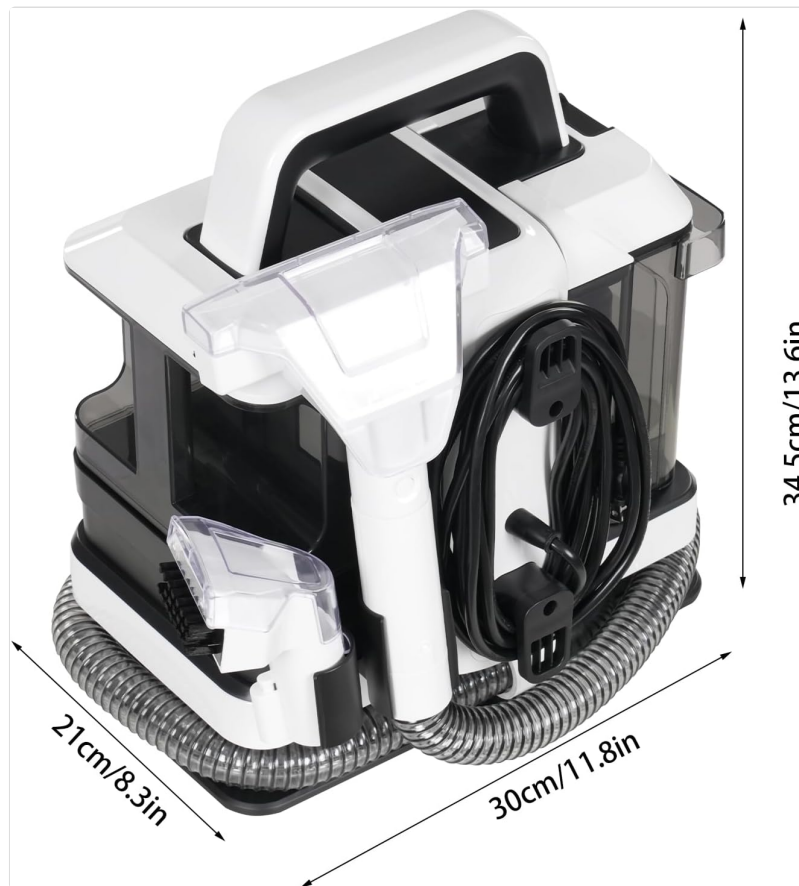


Image 7.1: Visual representation of the cleaner's dimensions: 30cm (11.8in) length, 21cm (8.3in) width, and 34.5cm (13.6in) height.

Feature	Specification
Model	JCE002
Color	White and Black
Material	Plastic and Iron
Type	Handheld Deep Cleaner
Power Source	Corded Electric
Rated Voltage	110V
Rated Power	450W
Clean Water Tank Capacity	1080ml / 38oz
Dirty Water Tank Capacity	850ml / 29.92oz
Noise Level	≤80dB
Max. Suction Force	11KPA

Feature	Specification
Maximum Air Flow	11.5L/s (2.53Gal/s)
Suction Speed (Big Brush)	400ml/min (14.08oz/min)
Suction Speed (Small Brush)	370ml/min (13.02oz/min)
Number of Cleaning Brushes	2
Waterproof Level	IPX4
Water Hose Length	1.2m (3.94ft)
Power Cord Length	5m (16.4ft)
Operating Radius	6.2m (20.34ft)
Overall Size (L*W*H)	30 x 21 x 34.5cm (11.81 x 8.27 x 13.58in)
Net Weight	4.8kg (10.58lbs)