



Manuals.plus /

- › Erazer /
- › Erazer XP2 True Wireless Open Ear Earbuds Instruction Manual

Erazer XP2

Erazer XP2 True Wireless Open Ear Earbuds Instruction Manual

Model: XP2 | Brand: Erazer

INTRODUCTION AND PRODUCT OVERVIEW

Thank you for choosing the Erazer XP2 True Wireless Open Ear Earbuds. These earbuds are designed to provide a high-quality audio experience with an open-ear design for situational awareness, advanced features, and durable construction. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



Image: The Erazer XP2 True Wireless Open Ear Earbuds shown with their charging case, highlighting the sleek design.

Your browser does not support the video tag.

Video: An overview of the Erazer XP2 Over The Ear Earbuds, showcasing their design and key features.

Your browser does not support the video tag.

Video: A demonstration of the True Wireless Open Ear Earbuds, highlighting their comfort and audio experience.

WHAT'S IN THE BOX

- 1 x Pair of Erazer XP2 True Wireless Open Ear Earbuds
- 1 x Charging Case with LED Display
- 1 x Type-C Charging Cable
- 1 x User Manual (this document)

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided Type-C cable to the charging port on the case and a power source. The LED display will indicate charging status. Once the charging case icon shows 100%, wait an additional 15 minutes before disconnecting the charger to ensure a complete charge.

FAST CHARGING

Low power consumption and ultra long endurance

About **1** hour
Fast charging
duration

30 hours

About **8** hours
Single endurance

About **30** hours
Cooperate with the
charging compartment



Image: The charging case displaying charging information, indicating approximately 1 hour for fast charging, 8 hours of single earbud use, and 30 hours of total use with the charging case.

2. Pairing with a Bluetooth Device

1. Ensure the earbuds are in the charging case and the case lid is open.
2. On your mobile phone or other Bluetooth device, enable Bluetooth and search for available devices.
3. Select "Eraser XP2" from the list of devices to pair.
4. Once paired, the earbuds are ready for use.

3. Mandatory Connection (If pairing issues occur)

If you experience difficulty pairing, place both earbuds in the charging case with the lid open. Press the button at the bottom of the charging bay 3 times to initiate a mandatory connection. The Bluetooth icon on the display will turn white upon successful connection.

4. Restarting the Device

To restart the charging case, long-press the button at the bottom of the charging bay for approximately 8 seconds until the startup screen is displayed.

OPERATING INSTRUCTIONS

Charging Case LED Display Functions

The charging case features a color LED display that allows control over various earbud functions. Navigate through the menus by swiping on the screen.

- **Music Interface:** Control music playback (play/pause, next/previous track). Requires connection to a Bluetooth device.
- **Volume Interface:** Adjust earbud volume. Requires connection to a Bluetooth device.
- **Environmental Sound Interface:** Switch between Transparency mode, ANC (Active Noise Cancellation) mode, and Normal mode. Requires connection to a Bluetooth device.
- **Equalizer Interface:** Select sound effects (Standard, Pop, Jazz, Rock, Classic) or custom sound effects. Requires connection to a Bluetooth device.
- **Brightness Adjustment Interface:** Control the brightness of the charging case display (Low, Medium, High).
- **Wallpaper Switching Interface:** Choose from 5 lock screen wallpapers for the display.
- **Spatial Sound Switching Interface:** Select between Movie mode, Music mode, and Game mode for optimized audio.
- **Find the Headset Interface:** Locate misplaced earbuds by making them sound an alert. **Caution:** Do not wear headphones when using this function to avoid injury from excessive sound.
- **Flashlight Function:** Activate the flashlight feature on the charging case for illumination.
- **Language Switch:** Change the display language of the charging case (English, German, Spanish, Portuguese, French).
- **Storage Mode Screen:** Access the test screen. The storage mode in the lower right corner of the single machine storage screen shutdown enters low power consumption. Exiting low power storage mode requires recharging to activate.



Image: The charging case displaying "Bluetooth 5.4", "Touch screen display", "Multiple EQ sound effects", and "Support TF card playback". The earbuds are shown inside the open case.

Earbud Touch Controls

The earbuds feature touch controls for convenient operation. Specific functions include:

- **Double Press (Music Mode):** Double press the right earbud for Volume Up, double press the left earbud for Volume Down.
- **Triple Press (Music Mode):** Triple press the right earbud for Next Track, triple press the left earbud for Previous Track.
- **Switch between Game Mode and Music Mode:** Press and hold either earbud for 3 seconds.

Photo-taking Function

When connected to a Bluetooth device (e.g., mobile phone), the charging case can be used to trigger your phone's camera to take photos. This function may have compatibility issues with some phones or shooting software. If it cannot be used, please ignore this feature.

TikTok Page Flipping and Like Function

When using Camera function or TikTok to Page flipping and like function on an iPhone, it can be used properly. Please turn on the following settings: Open Apple Phone Settings > Accessibility > Touch > AssistiveTouch > AssistiveTouch ON. Then close the camera software or TikTok software and open it again to use. This function is only available for use with TikTok software, and other software may not be able to use it. This feature may have compatibility issues with some phones, and some phones may not be able to use it. If there are situations where it cannot be used, please ignore this feature.

MAINTENANCE

To ensure the longevity and optimal performance of your Erazer XP2 earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the charging contacts on both the earbuds and the charging case. Long-term improper use can cause dust or oxidation on the charging column of the earphones and charging case, resulting in poor charging of the earphones. If this problem occurs, manually clean the dust on the charging column or wipe it with alcohol to ensure normal charging.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Water Exposure:** While the earbuds are waterproof (IPX5 rated), avoid prolonged submersion in water. Dry them thoroughly if they get wet.

IPX5 WATERPROOF

IPX5 waterproof lifestyle, effectively resisting sweat and rain, allowing you to exercise freely



Image: The Earazer XP2 earbuds shown with water droplets, highlighting their IPX5 waterproof rating for sports and outdoor activities.

SPECIFICATIONS

| Feature | Detail |
|------------------------------|--------------------------------------------------------------------------------------|
| Bluetooth Version | v5.4 |
| Control Mode | Touch Operation |
| Bluetooth Effective Distance | 10m |
| Headset Usage Time | 3.5 hours |
| Charging Time | 1.5 hours |
| Water Resistance Level | IPX5 Waterproof |
| Ear Placement | Over Ear (Open Ear Design) |
| Noise Control | Hybrid Noise Cancellation (Transparency, ANC, Normal modes) |
| Audio Driver Type | Dynamic Driver (16.2mm ultra large drive unit with composite titanium nanodiaphragm) |
| Material | Acrylonitrile Butadiene Styrene (ABS) |

UNIDAD MOTRIZ DE ALTA CALIDAD

Excelente calidad de sonido

Composite titanium nanodiaphragm



Image: An exploded view diagram of the earbud's internal structure, highlighting the 16.2mm ultra-large drive unit and composite titanium nanodiaphragm for high-quality sound.

TROUBLESHOOTING & SUPPORT

Common Issues

- **Pairing Problems:** Ensure Bluetooth is enabled on your device and the earbuds are charged. Try the "Mandatory Connection" steps outlined in the Setup section.
- **Charging Issues:** Clean the charging contacts on both earbuds and the case with a dry cloth or alcohol. Ensure the Type-C cable is securely connected.
- **Sound Quality:** Adjust equalizer settings via the charging case display. Ensure earbuds are properly positioned on your ears.
- **Compatibility:** Some advanced features (like TikTok control or camera function) may have compatibility limitations with certain phone models or software versions.

Customer Support

If you encounter any issues or require further assistance, please contact Erazer customer support. We are committed to helping you resolve any problems and ensure your satisfaction.

Email: 7@hifi-e.com