

[Manuals.plus](#) /

› [LEBENLANG](#) /

› [LEBENLANG LBL5267 Portable Garment Steamer Instruction Manual](#)

LEBENLANG LBL5267

LEBENLANG LBL5267 Portable Garment Steamer

INSTRUCTION MANUAL

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

Product Overview

The LEBENLANG LBL5267 Portable Garment Steamer is designed for efficient and convenient wrinkle removal. Its compact, foldable design makes it ideal for travel and quick touch-ups. This manual provides essential information for safe and effective use.



Image: The LEBENLANG LBL5267 Portable Garment Steamer shown with its included accessories, including a foldable hanger and travel bag.

Setup Instructions

- 1. Unpack the Steamer:** Carefully remove all components from the packaging. Ensure all accessories, including the ironing glove, foldable coat hook, and travel bag, are present.
- 2. Unfold the Handle:** The steamer features a foldable handle for compact storage. Gently unfold the handle until it locks securely into place.
- 3. Fill the Water Tank:**
 - Detach the water tank from the main unit.
 - Open the water tank cap.
 - Fill the 4.2 oz (120ml) water tank with distilled water. Using distilled water helps prevent mineral buildup and extends the life of your steamer.
 - Securely close the water tank cap and reattach the tank to the steamer unit.
- 4. Connect to Power:** Plug the steamer into a standard 110V electrical outlet. The indicator light will illuminate.
- 5. Pre-heating:** The steamer will heat up rapidly in less than 25 seconds. Wait for the indicator light to

change or stop blinking, signaling it is ready for use.



Image: Detailed view of the steamer's dimensions (5.1"L x 2"W x 3.7"H), 4.1 oz water capacity, and "does not drip" feature, along with the included protective glove.



Image: The LEBENLANG LBL5267 steamer displayed with its accessories: a foldable hanger, protective glove, and travel bag.

Operating Instructions

- 1. Prepare Garment:** Hang the garment on the included foldable coat hook or a sturdy hanger. For best results, gently pull the fabric taut with one hand while steaming with the other. Use the provided ironing glove for protection against steam.
- 2. Steaming Technique:**
 - Hold the steamer upright, ensuring the steam outlet is facing away from you and others.
 - Press the one-button control to activate steam.
 - Move the steamer slowly over the wrinkled areas of the fabric, either vertically or horizontally. The optimized soleplate ensures precise steam distribution.
 - The steamer is suitable for a wide range of fabrics including cotton, silk, wool, and linen.
- 3. Safety Precautions:**
 - Always use the ironing glove to protect your hand from hot steam.
 - Do not touch the hot steam nozzle directly.
 - Keep the steamer away from children and pets.
 - Ensure the water tank is securely attached before operating.



Image: The steamer's soleplate with steam outlets, highlighting its ability to eliminate bacteria and its versatility for both horizontal and vertical ironing.



Image: A person demonstrating the use of the LEBENLANG LBL5267 steamer on a shirt, showing the handheld operation.

Your browser does not support the video tag.

Video: Official product video demonstrating the LEBENLANG LBL5267 Travel Steamer in use, highlighting its quick heat-up and effectiveness on garments.

Maintenance and Care

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Empty any remaining water from the tank to prevent mineral buildup and bacterial growth.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents. For mineral deposits on the soleplate, gently wipe with a cloth dampened with a vinegar solution, then wipe with clean water.
- **Storage:** Once cool and dry, fold the handle for compact storage. Store the steamer and its accessories in the provided travel bag in a cool, dry place.

Troubleshooting

Problem	Possible Cause	Solution
No steam or weak steam.	Water tank is empty or not properly seated. Steamer not fully heated.	Refill water tank and ensure it is securely attached. Allow steamer to pre-heat completely (indicator light will confirm readiness).
Water spitting from nozzle.	Steamer not fully heated. Mineral buildup in the nozzle.	Allow steamer to pre-heat completely before use. Clean the nozzle as described in the Maintenance section. Ensure only distilled water is used.
Steamer not turning on.	Not plugged in correctly. Power outlet issue.	Check power connection. Try a different electrical outlet.

Product Specifications

Model Number: LBL5267

Brand: LEBENLANG

Wattage: 900 Watts

Voltage: 110 Volts

Heat Time: Less than 25 Seconds

Water Tank Capacity: 4.2 oz (120 ml)

Product Dimensions: 5.1"L x 2"W x 3.7"H

Item Weight: 0.5 Kilograms

Included Components: Travel Steamer, Foldable Coat Hook, Ironing Glove, Travel Bag

Manufacturer: LERO Inc.



Image: The LEBENLANG LBL5267 steamer and its travel bag neatly packed inside luggage, demonstrating its portability.

Warranty and Support

For warranty information or product support, please contact the manufacturer, LERO Inc., directly. Refer to the product packaging or the official LEBENLANG website for contact details and specific warranty terms applicable to your region.

