

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BLACK+DECKER](#) /

› [Black+Decker BXSM1000E Soup Maker User Manual](#)

BLACK+DECKER BXSM1000E

Black+Decker BXSM1000E Soup Maker User Manual

Model: BXSM1000E

INTRODUCTION

Thank you for choosing the Black+Decker BXSM1000E Soup Maker. This appliance is designed to simplify the preparation of various hot and cold recipes, including smooth and chunky soups, compotes, and smoothies. Please read this manual carefully before first use to ensure safe and optimal operation.

This soup maker features a 1040W motor, a 1.6-liter stainless steel carafe, and seven automatic programs. It also includes a keep-warm function and a digital display for ease of use. The materials used are BPA-free for your safety.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before using the appliance.
- Do not immerse the motor base, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always place the appliance on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not use attachments not recommended by the appliance manufacturer.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- This appliance is for household use only.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Black+Decker Soup Maker BXSM1000E.

- Motor Base with Control Panel and Digital Display
- Stainless Steel Carafe (1.6L capacity)
- Lid with integrated blending blades
- Power Cord



Image: Front view of the Black+Decker BXSM1000E Soup Maker, showing the stainless steel carafe and control panel.



Image: The Black+Decker BXSM1000E Soup Maker with the lid and blending unit separated from the carafe, highlighting the stainless steel interior.

SETUP AND FIRST USE

- Unpacking:** Carefully remove all packaging materials and dispose of them responsibly.
- Initial Cleaning:** Before first use, clean the carafe and lid with warm soapy water. Rinse thoroughly and dry all parts completely. Wipe the motor base with a damp cloth. Do not immerse the motor base in water.
- Placement:** Place the soup maker on a stable, flat, and heat-resistant surface, away from the edge of the counter. Ensure there is adequate ventilation around the appliance.
- Assembly:** Place the stainless steel carafe onto the motor base. Ensure it is seated correctly.
- Power Connection:** Plug the power cord into a suitable wall outlet. The digital display will illuminate.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: Close-up view of the Black+Decker BXSM1000E Soup Maker's digital control panel, showing various program icons and the display. The control panel features a digital display and several touch-sensitive buttons for program selection and operation.

Filling the Carafe

- Add your ingredients to the stainless steel carafe.
- Ensure that the liquid level is between the MIN (1300ml) and MAX (1600ml) markings inside the carafe. Overfilling or underfilling can affect performance and safety.



Image: A person pouring soup from the Black+Decker BXSM1000E Soup Maker into a bowl, showing the 1.6L capacity markings inside the carafe.

Program Selection

The BXSM1000E offers 7 automatic programs:

Program	Description	Approx. Time
Smooth Soup	Heats and blends ingredients to a smooth consistency.	21-25 minutes
Chunky Soup	Heats ingredients, blending only at the end for a chunky texture.	28-30 minutes
Compote	Cooks and blends fruits for compotes.	15-20 minutes
Smoothie	Blends cold ingredients for smoothies. No heating.	2-3 minutes
Blend	Manual blending function for desired consistency.	Variable

Program	Description	Approx. Time
Boil/Steam	Heats ingredients without blending.	Variable
Keep Warm	Maintains the temperature of cooked food for up to 26 minutes.	26 minutes

To select a program, press the 'Menu' button repeatedly until the desired program icon is highlighted on the digital display. Press the 'Start/Stop' button to begin the program.

Keep Warm Function

After a cooking program finishes, the soup maker automatically switches to the 'Keep Warm' function for up to 26 minutes. This ensures your soup remains at an optimal serving temperature. You can also select the 'Keep Warm' program manually.

Memory Function

The appliance has a memory function. If the lid is removed during operation, the program will pause. When the lid is replaced within a short period, the program will resume from where it left off.

CARE AND MAINTENANCE

Cleaning

- Unplug:** Always unplug the appliance from the power outlet before cleaning.
- Cool Down:** Allow the appliance to cool completely before handling.
- Carafe and Lid:** Wash the stainless steel carafe and the lid (including blades) with warm, soapy water. Use a non-abrasive sponge or brush. Rinse thoroughly and dry immediately to prevent water spots.
- Motor Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- Stubborn Stains:** For stubborn food residue inside the carafe, fill it with warm soapy water and let it soak for a few minutes before cleaning.

CAUTION: The blades are sharp. Handle with care during cleaning.

Storage

Store the soup maker in a clean, dry place when not in use. Ensure the power cord is neatly wrapped and not kinked.

TROUBLESHOOTING GUIDE

If you encounter any issues with your Black+Decker BXSM1000E Soup Maker, please refer to the following table before contacting customer service.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; lid not properly secured.	Ensure the power cord is securely plugged into a working outlet. Check that the lid is correctly placed and locked onto the carafe.
Soup is not blending properly.	Carafe overfilled; ingredients too large; insufficient liquid.	Do not exceed the MAX fill line. Cut ingredients into smaller pieces. Ensure there is enough liquid for blending.

Problem	Possible Cause	Solution
Soup is not heating.	Heating element malfunction; incorrect program selected.	Ensure a heating program (e.g., Smooth Soup, Chunky Soup) is selected. If the problem persists, contact customer service.
Error message on display.	Specific error code (e.g., E1, E2).	Refer to the specific error code in the full manual (if available) or contact customer service with the error code. Often, unplugging and replugging can reset minor errors.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	BXSM1000E
Brand	BLACK+DECKER
Power	1040 Watts
Capacity	1.6 Liters
Material	Stainless Steel
Dimensions (Depth x Width x Height)	25.4 cm x 19.2 cm x 31.5 cm
Weight	1.24 Kilograms
Special Features	Pre-programmed, Keep Warm setting, Programmable, Digital Display, BPA-free
Components Included	1.6L Stainless Steel Carafe, Stainless Steel Blades
Power Source	Corded Electric
Country of Origin	Spain



Image: Diagram showing the dimensions of the Black+Decker BXSM1000E Soup Maker: 31.5 cm height, 19 cm width, 25.4 cm depth.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Black+Decker website. If you require technical support or have questions not covered in this manual, please contact Black+Decker customer service.

Black+Decker Official Website: www.blackanddecker.com

Please have your model number (BXSM1000E) and purchase date available when contacting support.

