

reMarkable RM81C-1000NW

reMarkable Paper Pro Bundle Instruction Manual

Model: RM81C-1000NW | Brand: reMarkable

PRODUCT OVERVIEW

The reMarkable Paper Pro Bundle offers the ultimate paper tablet experience, allowing users to write, sketch, and read in color. It features an ultra-slim and portable design with a full-size 11.8" Canvas Color display, an adjustable reading light, and an unmatched paper-like writing feel. This digital notebook is designed for focused work, organizing notes and documents with folders and tags, and converting handwriting to typed text.

The included Marker Plus pen provides precise control and responsiveness, enhancing the natural writing experience. The low-glare display ensures comfortable reading day or night, even outdoors. All your work stays organized and can be synced across devices for seamless access.



Figure 1: reMarkable Paper Pro tablet displaying an organized file system.

WHAT'S IN THE BOX

Your reMarkable Paper Pro Bundle includes the following items:

- reMarkable Paper Pro (11.8" Canvas Color display)
- Marker Plus pen with built-in eraser
- 6 spare Marker tips
- USB-C cable

SETUP GUIDE

Follow these steps to set up your reMarkable Paper Pro for the first time:

- 1. Charge the Device:** Connect the reMarkable Paper Pro to a power source using the provided USB-C cable. Ensure it is fully charged before first use.
- 2. Attach the Marker Plus:** The Marker Plus pen attaches magnetically to the side of the reMarkable Paper Pro. This also charges the pen.
- 3. Initial Power On:** Press and hold the power button (located on the top edge) to turn on the device. Follow the on-screen prompts to complete the initial setup, including connecting to Wi-Fi.
- 4. Sync with Apps:** Download the reMarkable app on your desktop or mobile device to seamlessly sync your notes and documents across all your platforms.



Figure 2: The Marker Plus pen attaches magnetically and charges on the device.

OPERATING INSTRUCTIONS

The reMarkable Paper Pro is designed for intuitive and focused use:

- **Creating Notes:** Tap the '+' icon to create a new notebook or quick sheet. Choose from various templates like lined, grid, checklist, or blank pages.
- **Writing and Sketching:** Use the Marker Plus to write, draw, and sketch directly on the screen. The display provides a realistic friction for a natural pen-on-paper feel.
- **Color Functionality:** For the first time, you can write and sketch in color. Select different pen types, thicknesses, and a range of colors from the toolbar.
- **Handwriting Conversion:** Select your handwritten text and use the conversion tool to instantly transform it into typed text, making your notes easy to read and share.
- **Organizing Files:** Sort your notes and documents using folders and tags. Write directly on PDFs for annotations and markups.
- **Adjustable Reading Light:** The device features an adjustable reading light for comfortable use in any lighting condition, from bright sunlight to low-light environments.



Figure 3: Writing and sketching in color on the 11.8" Canvas Color display.

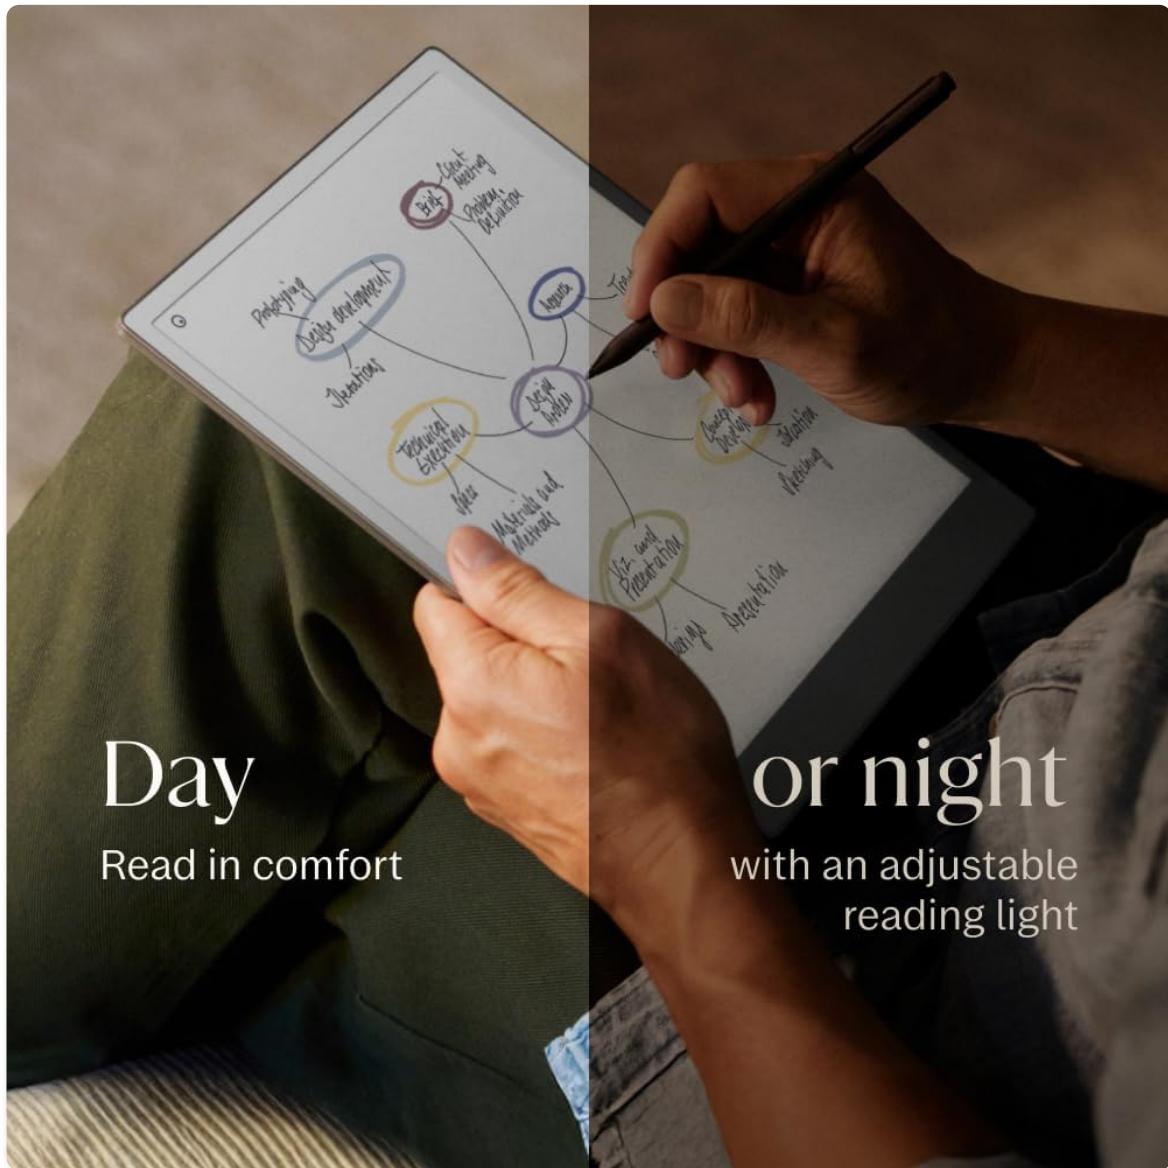


Figure 4: The adjustable reading light allows for comfortable use day or night.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your reMarkable Paper Pro, follow these maintenance guidelines:

- **Cleaning:** Use a soft, lint-free cloth to gently wipe the screen and body of the device. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** The reMarkable Paper Pro boasts an average battery life of up to 2 weeks. For best battery health, avoid fully discharging the device regularly. Charge it using the provided USB-C cable.
- **Marker Tip Replacement:** The Marker Plus pen comes with 6 spare tips. If you notice reduced responsiveness or wear on the tip, gently pull the old tip out and insert a new one.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your reMarkable Paper Pro, try the following common solutions:

- **Device Not Responding:** Try restarting the device by holding down the power button for 10-15 seconds.
- **Pen Not Writing:** Ensure the Marker Plus is properly attached to the device for charging. Check if the pen tip is worn and replace it if necessary.
- **Display Issues (Ghosting/Flickering):** The e-ink display may occasionally show faint remnants of previous content (ghosting) or flicker during refreshes. This is normal behavior for e-ink screens. A full screen refresh (often triggered automatically or manually through settings) will clear this.
- **Syncing Problems:** Verify your Wi-Fi connection. Ensure the reMarkable app on your other devices is updated and properly logged in.

TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	reMarkable
Model Number	RM81C-1000NW
Standing screen display size	11.8 Inches
Screen Resolution	1872x1404
Max Screen Resolution	2160 x 1620 Pixels
Operating System	Linux
Item Weight	1.16 pounds
Product Dimensions	15.04 x 9.33 x 0.1 inches
Average Battery Life	2 weeks
Color	Gray
Connectivity Technology	USB
Pressure Sensitivity	4096 Levels

WARRANTY AND SUPPORT

The reMarkable Paper Pro Bundle is manufactured by reMarkable.

For extended protection, various plans are available:

- **2-Year Protection Plan:** Available for purchase.
- **4-Year Protection Plan:** Available for purchase.
- **Complete Protect:** A monthly plan covering eligible past and future purchases.

For detailed warranty information or technical support, please visit the official reMarkable website or contact their customer service directly.