

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli EN-83801 Replacement Remote Control User Manual for Hisense LCD LED TV Models

## Effireli YK-EN-83801

# Effireli EN-83801 Replacement Remote Control User Manual

For Hisense LCD LED TV Models

## 1. INTRODUCTION

This manual provides instructions for the Effireli EN-83801 replacement remote control, designed for various Hisense LCD LED TV models. This remote control requires no programming or setup; it is ready for immediate use upon battery installation.

## 2. PRODUCT OVERVIEW



Image: Effireli EN-83801 Replacement Remote Control. This remote features a standard layout with a red POWER button at the top left, an AUTO button, and a MUTE button. Number keys (0-9) are centrally located. Below these are SLEEP, RECALL, ZOOM, and F1 buttons. Volume (VOL +/-) and Channel (CH +/-) controls are on the left and right, respectively, flanking a DISPLAY button. A circular navigation pad with an OK button in the center is prominent. Below the navigation pad are MENU, SOURCE, PICTURE,

SOUND, ROOT, and EXIT buttons. The lower section includes TEXT, HOLD, REVEAL, SUBPAGE, INDEX, SIZE, and media control buttons (rewind, play/pause, fast forward, repeat, A-B). Four colored function buttons (red, green, yellow, blue) are also present, along with FAV, FAV-, FAV+, and GOTO buttons. The model number EN-83801 is printed at the bottom.

### 3. SETUP: BATTERY INSTALLATION

To begin using your remote control, follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

*Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.*

### 4. OPERATING INSTRUCTIONS

This remote control is designed for intuitive operation. Simply point the remote towards your Hisense TV and press the desired button.

- **POWER** (🔴): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly select channels.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the channel up or down.
- **MUTE** (🔇): Mutes or unmutes the TV sound.
- **MENU**: Accesses the TV's main menu.
- **Navigation Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections in menus.
- **EXIT**: Exits the current menu or screen.
- **SOURCE**: Selects input sources (e.g., HDMI, AV).
- **PICTURE**: Accesses picture settings.
- **SOUND**: Accesses sound settings.
- **DISPLAY**: Shows current channel information or status.
- **SLEEP**: Sets the TV's sleep timer.
- **RECALL**: Switches between the current and previously viewed channel.
- **FAV / FAV- / FAV+**: Manages favorite channels.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Perform specific functions as indicated on the TV screen for certain applications or menus.

### 5. COMPATIBLE MODELS

The Effireli EN-83801 replacement remote control is compatible with the following Hisense LCD LED TV models:

- 32M2160
- 40M2160
- 32D50
- 40D50

- 30D51
- 40D51
- 40D52
- 24D33
- 32D33
- 40D36
- 32W22

*Note: If your specific TV model number is not listed above or if your original remote control has a different appearance, please contact the seller directly to confirm compatibility before use.*

## 6. TROUBLESHOOTING

If your remote control is not functioning as expected, consider the following common troubleshooting steps:

- **Remote Not Responding:** Ensure the remote is pointed directly at the TV's infrared sensor. Obstructions between the remote and the TV can block the signal.
- **Check Batteries:** Verify that the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with a fresh pair of AAA batteries. Weak batteries are a common cause of remote control issues.
- **Clean Remote Sensor:** Ensure the infrared emitter on the front of the remote control and the sensor on the TV are clean and free from dust or debris.
- **TV Power Cycle:** Turn off your TV, unplug it from the power outlet for a few minutes, then plug it back in and turn it on. This can sometimes resolve minor communication issues.

## 7. SPECIFICATIONS

- **Model Number:** YK-EN-83801
- **Product Dimensions:** 6.69 x 1.97 x 0.79 inches
- **Item Weight:** 2.47 ounces
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television
- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1

## 8. WARRANTY AND SUPPORT

This product comes with a 30-day money-back guarantee, allowing you to return the item if you are not satisfied. Additionally, a 12-month warranty is provided, covering manufacturing defects from the date of purchase. Returns and exchanges are accepted within this warranty period.

For any questions, compatibility concerns, or warranty claims, please contact the seller directly for assistance.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**<https://manuals.plus/asin/B0DGCV16VV>**

More documents and user manuals: **<https://manuals.plus/>**