



[Manuals.plus](#) /

> [Eaerec](#) /

> [Eaerec Erazer Over The Ear Earbuds XP2 User Manual](#)

## Eaerec XP2

# Eaerec Erazer Over The Ear Earbuds XP2 User Manual

Model: XP2 | Brand: Eaerec

## 1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your Eaerec Erazer Over The Ear Earbuds XP2. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

## 2. PACKAGE CONTENTS

Verify that all items listed below are present in your product packaging:

- Eaerec Erazer Over The Ear Earbuds (1 pair)
- Charging Case with Touch Screen
- Type-C Charging Cable
- User Manual (this document)
- Product Box

## 3. PRODUCT OVERVIEW

The Erazer XP2 earbuds feature an open-ear design for comfort and situational awareness, coupled with a smart touch-screen charging case for intuitive control.



Image: The Eaerec Erazer Over The Ear Earbuds XP2 shown with their intelligent touch-screen charging case.

# LCD FULL-COLOR SMART SCREEN

Multi touch intelligent charging compartment, precise control of mobile music playback/switching, comprehensive support for volume adjustment, multiple EQ sound effects selection, free switching between Chinese and English, mobile Bluetooth photography, electronic digital clock, etc



Image: A detailed view of the charging case's full-color smart screen, displaying various control options such as music, volume, sound customization, and settings.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case.
2. Connect the Type-C charging cable to the charging port on the case and to a USB power source.
3. The LED display on the case will indicate the charging status. Allow approximately 1.5 hours for a full charge of the case and earbuds.

# FAST CHARGING

Low power consumption and ultra long endurance

About **1** hour  
Fast charging  
duration

**30** hours



About **8** hours  
Single endurance

About **30** hours  
Cooperate with the  
charging compartment



Image: Illustration of the charging duration: approximately 1 hour for fast charging, 8 hours of single earbud endurance, and 30 hours total with the charging case.

## 4.2 Bluetooth Pairing

To connect your earbuds to a device:

1. Ensure the earbuds are in the charging case and the case is open.
2. On your device (e.g., smartphone), enable Bluetooth and search for new devices.
3. Select "Eraser XP2" from the list of available devices.
4. Once connected, the Bluetooth icon on the charging case screen will turn white.

**Note:** If connection issues occur, long-press the button at the bottom of the charging bay for approximately 3 seconds to enter mandatory connection mode. After connection, the Bluetooth icon will turn white.

# BLUETOOTH 5.4 CHIP

Adopting a brand new Bluetooth 5.4 solution, it enhances anti-interference ability and connection stability, bringing more stability



Image: Diagram illustrating the benefits of Bluetooth 5.4 technology, including low power consumption, faster connection, longer connection distance, and more stable connection.

## 5. OPERATING INSTRUCTIONS

### 5.1 Earbud Touch Controls

The earbuds feature touch operation for basic functions. Specific touch gestures may vary; refer to the quick start guide or product packaging for detailed earbud touch commands.

### 5.2 Charging Case Touch Screen Functions

The intelligent touch screen on the charging case provides comprehensive control over various settings. Swipe left or right to navigate through the interfaces.

- **Music Interface:** Control music playback (play/pause, next/previous track). Requires connection to a Bluetooth device.

- **Volume Interface:** Adjust headset volume. Requires connection to a Bluetooth device.
- **Environmental Sound Interface:** Switch between Transparency, ANC (Active Noise Cancellation), and Normal modes. Requires connection to a Bluetooth device.
- **Equalizer Interface:** Select sound effects (Standard, Pop, Jazz, Rock, Classic) or custom sound effects. Requires connection to a Bluetooth device.
- **Brightness Adjustment Interface:** Control the brightness of the charging case screen (Low, Medium, High).
- **Wallpaper Switching Interface:** Choose from 5 lock screen wallpapers.
- **Space Sound Switching Interface:** Switch between Movie mode, Music mode, and Game mode.
- **Find Headset Interface:** Locate misplaced earbuds by making them sound from the charging bay. **Caution:** Do not wear headphones when using this function to avoid hearing injury due to excessive sound.
- **Flashlight Function:** Activate the built-in flashlight.
- **Language Switch:** Change the charging bay language display (English, German, Spanish, Portuguese, French).
- **Countdown Function Screen:** Enables a countdown timer.
- **Storage Mode Screen:** Enter test screen. Single machine test screen storage mode in the lower right corner of single machine storage screen shutdown enters low power consumption. Exit low power storage mode requires recharging to activate.

### 5.3 Restarting the Charging Case

To restart the charging case, long-press the button at the bottom of the charging bay for approximately 8 seconds. The startup screen will be displayed.

## 6. MAINTENANCE

### 6.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Do not use abrasive cleaners, solvents, or aerosol sprays.
- Avoid getting moisture into any openings.

### 6.2 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.

### 6.3 Waterproof Rating

The earbuds are IPX5 waterproof, meaning they are resistant to a sustained, low-pressure water jet spray. They are not designed for submersion in water. Ensure the charging port is dry before charging.

## 7. TROUBLESHOOTING

If you encounter issues with your Erazer XP2 earbuds, refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	Ensure Bluetooth is enabled on your device. Place earbuds in case, open lid, and try pairing again. Use the mandatory connection function (3-second press on bottom button).
No sound from earbuds	Check volume levels on both earbuds and connected device. Ensure earbuds are properly paired and selected as the audio output.

Problem	Possible Solution
Charging case not charging	Verify the Type-C cable is securely connected to both the case and the power source. Try a different cable or power adapter.
Touch screen unresponsive	Restart the charging case by long-pressing the bottom button for 8 seconds.
Poor sound quality	Ensure earbuds are clean and properly seated. Check for interference from other devices. Adjust equalizer settings.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Erazer Over The Ear Earbuds
Item Model Number	H1
Brand	Eaerec
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	v5.4
Control Mode	Touch Operation (Earbuds), Touch Screen (Case)
Bluetooth Effective Distance	10 meters
Headset Usage Time	Approximately 3.5 hours (single charge)
Charging Time	Approximately 1.5 hours
Waterproof Rating	IPX5
Special Features	Noise Cancellation, Touch Control, LED Display Charging Case, Open Ear Design
Country of Origin	China



Image: Visual summary of key features including Bluetooth 5.4, touch screen display, multiple EQ sound effects, and support for TF card playback.

# UNIDAD MOTRIZ DE ALTA CALIDAD

Excelente calidad de sonido

Composite titanium nanodiaphragm



Φ 16.2mm ultra large drive unit

\*The internal structure is not fully displayed, please refer to the actual product for accuracy\*

Image: An exploded view illustrating the internal components of the earbud, highlighting the composite titanium nanodiaphragm and the 16.2mm ultra-large drive unit for high-quality sound.

## 9. SAFETY INFORMATION

- Do not disassemble or modify the product.
- Keep away from extreme temperatures, direct sunlight, and moisture.
- Avoid prolonged listening at high volumes to prevent hearing damage.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the product and its battery responsibly according to local regulations.

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or contact Eaerec customer service through their official website or the retailer where the product was purchased.

