

## Kemei KM-1551

# Kemei Professional Hair Clipper KM-1551 User Manual

Model: KM-1551 | Brand: Kemei

## INTRODUCTION

Thank you for choosing the Kemei Professional Hair Clipper KM-1551. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your new hair clipper. Please read these instructions thoroughly before first use and keep them for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, injury, or fire, always follow these basic safety precautions:

- Always disconnect the trimmer from the power source before cleaning or storing.
- Keep the trimmer away from water sources to prevent electric shock. Do not use it near bathtubs, showers, basins, or other vessels containing water.
- Do not use the trimmer on infants or children without adult supervision.
- Always keep the trimmer away from your eyes and face to prevent injury.
- Always use the trimmer with the appropriate protective comb attachment for the desired length.
- Clean and maintain the trimmer according to the provided instructions to ensure its longevity and safety.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged.
- This appliance is intended for household use only.

## PACKAGE CONTENTS

Your Kemei KM-1551 Professional Hair Clipper package should include the following items:

- 1 x Kemei KM-1551 Hair Clipper
- 1 x Blade Guard

- 6 x Guide Combs (various sizes)
- 1 x USB Charger Cable
- 1 x Cleaning Brush
- 1 x Lubricating Oil
- 1 x Instruction Manual (this document)

# Kemei®

## KM-1551



[www.globalsources.com/mywkemei.co](http://www.globalsources.com/mywkemei.co)

Image: Kemei KM-1551 Hair Clipper with its included accessories, including guide combs, charging cable, cleaning brush, and oil.

## PRODUCT OVERVIEW

The Kemei KM-1551 is a professional-grade cordless hair clipper designed for precision and ease of use. It features a powerful motor, durable stainless steel blades, and an adjustable cutting head.



Image: Front view of the Kemei KM-1551 Hair Clipper, showcasing its sleek design and digital display.

# ADJUSTABLE TECHNOLOGY OF UPGRADING MOVING KNIFE USE ONE HAND WHILE ADJUSTING

The adjusting lever of moving knife on the side of the foilage can adjust the distance of moving knife according to the situation, so as to grasp it more accurately.



Image: Side view of the Kemei KM-1551, highlighting the adjustable lever for precise blade length control.

## SETUP

1. **Initial Charge:** Before first use, fully charge the clipper for approximately 3 hours. Connect the USB charging cable to the clipper and a suitable USB power adapter (not included). The LCD display will indicate charging status.
2. **Attaching Guide Combs:** Select the desired guide comb for your preferred hair length. Align the comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely attached before use.
3. **Blade Adjustment:** The clipper features an adjustable blade lever on the side. Move the lever up or down to fine-tune the cutting length without a guide comb, or to adjust the base length when a comb is attached.

## OPERATING INSTRUCTIONS

1. **Turning On/Off:** Press the power button to turn the clipper on. Press it again to turn it off. The LCD display will show battery level and speed settings.

## 2. Trimming Hair:

- Ensure hair is clean and dry.
- Start with a longer guide comb if you are unsure of the desired length.
- Hold the clipper with the blade teeth pointing upwards.
- Move the clipper against the direction of hair growth, using smooth, even strokes.
- For blending and tapering, use different guide comb lengths or adjust the blade lever.

## 3. Beard Trimming:

- Use a suitable guide comb for beard length.
- Trim in the direction of hair growth for a more even trim.
- For detailing and sharp lines, remove the guide comb and use the adjustable blade at its shortest setting (ensure caution).

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your clipper.

- Cleaning the Blades:** After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove any loose hairs from the blades.
- Oiling the Blades:** Apply a few drops of the included lubricating oil to the blades after every few uses, or if the clipper starts to pull hair. Turn the clipper on for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and reduces friction.
- Cleaning the Body:** Wipe the body of the clipper with a soft, damp cloth. Do not use abrasive cleaners or immerse the clipper in water.
- Storage:** Store the clipper in a dry place, away from direct sunlight and out of reach of children. Use the blade guard to protect the blades when not in use.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Clipper pulls hair or cuts poorly.	Blades are dull or not oiled. Hair buildup in blades.	Clean and oil the blades. Ensure blades are free of hair debris.
Clipper makes unusual noise.	Blades are not properly aligned or need oiling.	Clean and oil the blades. If the issue persists, contact customer support.

## SPECIFICATIONS

---

<b>Model Number</b>	KM-1551
<b>Brand</b>	Kemei
<b>Voltage</b>	110-220V, 50/60Hz

<b>Power</b>	5W
<b>Battery Type</b>	2000mAh Lithium Battery
<b>Charging Time</b>	Approx. 3 hours
<b>Continuous Use Time</b>	Approx. 3 hours
<b>Blade Material</b>	Stainless Steel
<b>Special Features</b>	Rechargeable, LCD Display, Adjustable Blade
<b>Recommended Use</b>	Hair, Beard
<b>Item Weight</b>	1.2 Kilograms
<b>Dimensions</b>	22.8 x 11.6 x 7.6 cm

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the retailer where you purchased this product or visit the official Kemei website. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in the troubleshooting section, please contact customer service for assistance.

