

[Manuals.plus](#) /

› [SOKANY](#) /

› SOKANY SK-16023 Hair Clipper Instruction Manual

SOKANY SK-16023

SOKANY SK-16023 Hair Clipper Instruction Manual

1. INTRODUCTION

Thank you for choosing the SOKANY SK-16023 Hair Clipper. This universal hair clipper is designed for efficient and precise grooming, suitable for various hair types and lengths. Please read this manual carefully before using the device to ensure safe and optimal performance.

2. SAFETY INFORMATION

Caution: Use this device carefully to avoid cuts. Do not use near water or while the device is charging. Keep out of reach of children. Ensure the device is switched off before cleaning or attaching/detaching accessories.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- SOKANY SK-16023 Hair Clipper (Gold color)
- 4 Trimmer Attachments (various lengths)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil Bottle
- Instruction Manual



Image 1: SOKANY SK-16023 Hair Clipper with its complete set of accessories, including the clipper, four guide combs, USB charging cable, cleaning brush, and oil bottle.

4. SETUP AND CHARGING

4.1 Initial Charge

Before first use, fully charge the hair clipper. Connect the USB charging cable to the clipper's charging port and plug the other end into a compatible USB power adapter (not included) or a computer USB port. The display will indicate charging status. A full charge takes approximately 2 hours and provides up to 120 minutes of cordless operation.



Image 2: The SOKANY SK-16023 Hair Clipper connected for USB charging, highlighting its "plug-and-play" feature.

4.2 Attaching Guide Combs

To attach a guide comb, align the comb with the clipper blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade. Select the appropriate comb for your desired hair length.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button located on the front of the clipper to turn it on or off. The digital display will illuminate when the device is active.

5.2 Hair Trimming

1. Ensure hair is clean and dry for best results, though the clipper supports wet shaving.
2. Attach the desired guide comb for your preferred hair length.
3. Hold the clipper with the blade flat against the hair.
4. Move the clipper slowly against the direction of hair growth.
5. For detailing or edging, remove the guide comb and use the bare blade carefully.

5.3 Facial Hair Grooming

The SOKANY SK-16023 is also suitable for beard and facial hair grooming. Use the beard comb attachment or the bare blade for precise shaping and trimming.

6. MAINTENANCE

6.1 Cleaning the Blades

After each use, turn off the clipper and detach the guide comb. Use the provided cleaning brush to remove any loose hairs from the blade and the clipper body. The stainless steel blades can be rinsed under running water, but ensure the clipper body remains dry.

6.2 Lubricating the Blades

Regularly apply a few drops of the included lubricating oil to the blades to maintain optimal cutting performance and extend blade life. Turn on the clipper for a few seconds after oiling to distribute the oil evenly.

6.3 Storage

Store the clipper in a dry place, away from direct sunlight and extreme temperatures. Ensure it is fully charged before long-term storage to preserve battery health.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Low battery or no charge.	Charge the clipper for at least 2 hours.
Poor cutting performance.	Blades are dirty or not lubricated.	Clean the blades and apply lubricating oil.
Clipper pulls hair.	Blades are dull or hair is too thick/tangled.	Ensure blades are clean and oiled. Trim smaller sections of hair. If problem persists, blades may need replacement.

8. SPECIFICATIONS

Feature	Detail
Model Number	SK-16023

Feature	Detail
Brand	SOKANY
Power Source	Battery Powered (Lithium-Ion)
Battery Charge Time	Approximately 2 hours
Battery Run Time	Up to 120 minutes
Blade Material	Stainless Steel
Trimming Blade Width	40 mm
Included Attachments	4 Guide Combs, Beard Comb
Recommended Uses	Dry Shaving, Wet Shaving, Facial Hair Grooming
Item Weight	1.2 kg
Dimensions (Shipping)	22 x 20 x 15 cm

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact SOKANY customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGDN1BQC>

More documents and user manuals: <https://manuals.plus/>