

Aroepurt Digiland Mid1032 Mid1016 Tablet Case

Aroepurt Tablet Case Instruction Manual

For Digiland Mid1032 and Mid1016 Tablets

INTRODUCTION

This manual provides instructions for the proper use and care of your Aroepurt Tablet Case, designed for Digiland Mid1032 and Mid1016 tablets. This folio cover offers comprehensive protection and versatile viewing options.

PRODUCT FEATURES

- **360-Degree Rotation:** Allows for multi-angle viewing in both portrait and landscape orientations.
- **Multi-Viewing Angles:** Integrated stand with anti-slip strips provides stable support for various viewing positions.
- **Premium Protection:** Constructed from durable synthetic PU leather with a soft anti-slip interior, offering full-body protection against scratches, shocks, fingerprints, and dust. Features thickened anti-drop corner protectors.
- **Camera Access:** Reserved back camera opening ensures full functionality of your tablet's camera.
- **Storage Pocket:** Conveniently located pocket for carrying cards, documents, or cash.
- **Slim and Lightweight Design:** Maintains the tablet's portability while providing robust protection.
- **Precise Cutouts:** Ensures all device ports, speakers, and buttons remain fully accessible.

SETUP: INSTALLING YOUR TABLET

To install your Digiland Mid1032 or Mid1016 tablet into the Aroepurt case, follow these steps:

1. Open the folio cover completely.
2. Align your tablet with the protective frame inside the case.
3. Gently press the tablet into the frame, ensuring all corners are securely seated. The flexible frame will hold the tablet firmly in place.
4. Verify that all ports, buttons, and the camera opening align correctly with the case's cutouts.

COMPATIBLE WITH A LOT OF TABLET

Please kindly check your tablet size before purchase as shown



Image: Tablet securely placed inside the Aroepurt case, demonstrating proper fit and compatibility with various tablet sizes.

OPERATING INSTRUCTIONS

Using the Multi-Viewing Stand

The case features an integrated stand with anti-slip stripes to provide multiple stable viewing angles. To use the stand:

1. Open the folio cover and fold it back to form a triangular support.
2. Position the tablet's edge into one of the anti-slip stripes on the inside cover to achieve your desired viewing angle.

MULTIPLE VIEWING

It turns into a convenient stand.
Frees your hands and gives you a
best viewing angle.



Image: The tablet case configured as a stand, highlighting the anti-slip stripes for secure multi-angle viewing.

360-Degree Rotation

The tablet can be rotated 360 degrees within the case to switch between portrait and landscape viewing modes while using the stand.

1. While the tablet is in the stand position, gently rotate the tablet within its frame to change orientation.
2. Ensure the tablet is securely seated after rotation.

ADJUSTABLE MULTIPLE ANGLES

Supports multiple viewing angles with 360° free rotate



Image: The tablet case showcasing its 360-degree rotation feature, allowing for flexible viewing angles.

Using the Storage Pocket

The case includes a storage pocket on the inside cover for small items.

- Open the folio cover to access the pocket.
- Insert cards, documents, or cash into the designated slot.

STORAGE POCKET

The pocket is convenient for carrying-cards, documents, and cash



Image: The tablet case displaying its convenient storage pocket, suitable for cards, documents, and cash.

Camera Access

The case features pre-cutouts to accommodate various camera positions on compatible tablets, ensuring your camera remains fully functional.

SUITABLE FOR DIFFERENT PLATES

The 3 pre-cutouts can be used by tablets with different camera positions

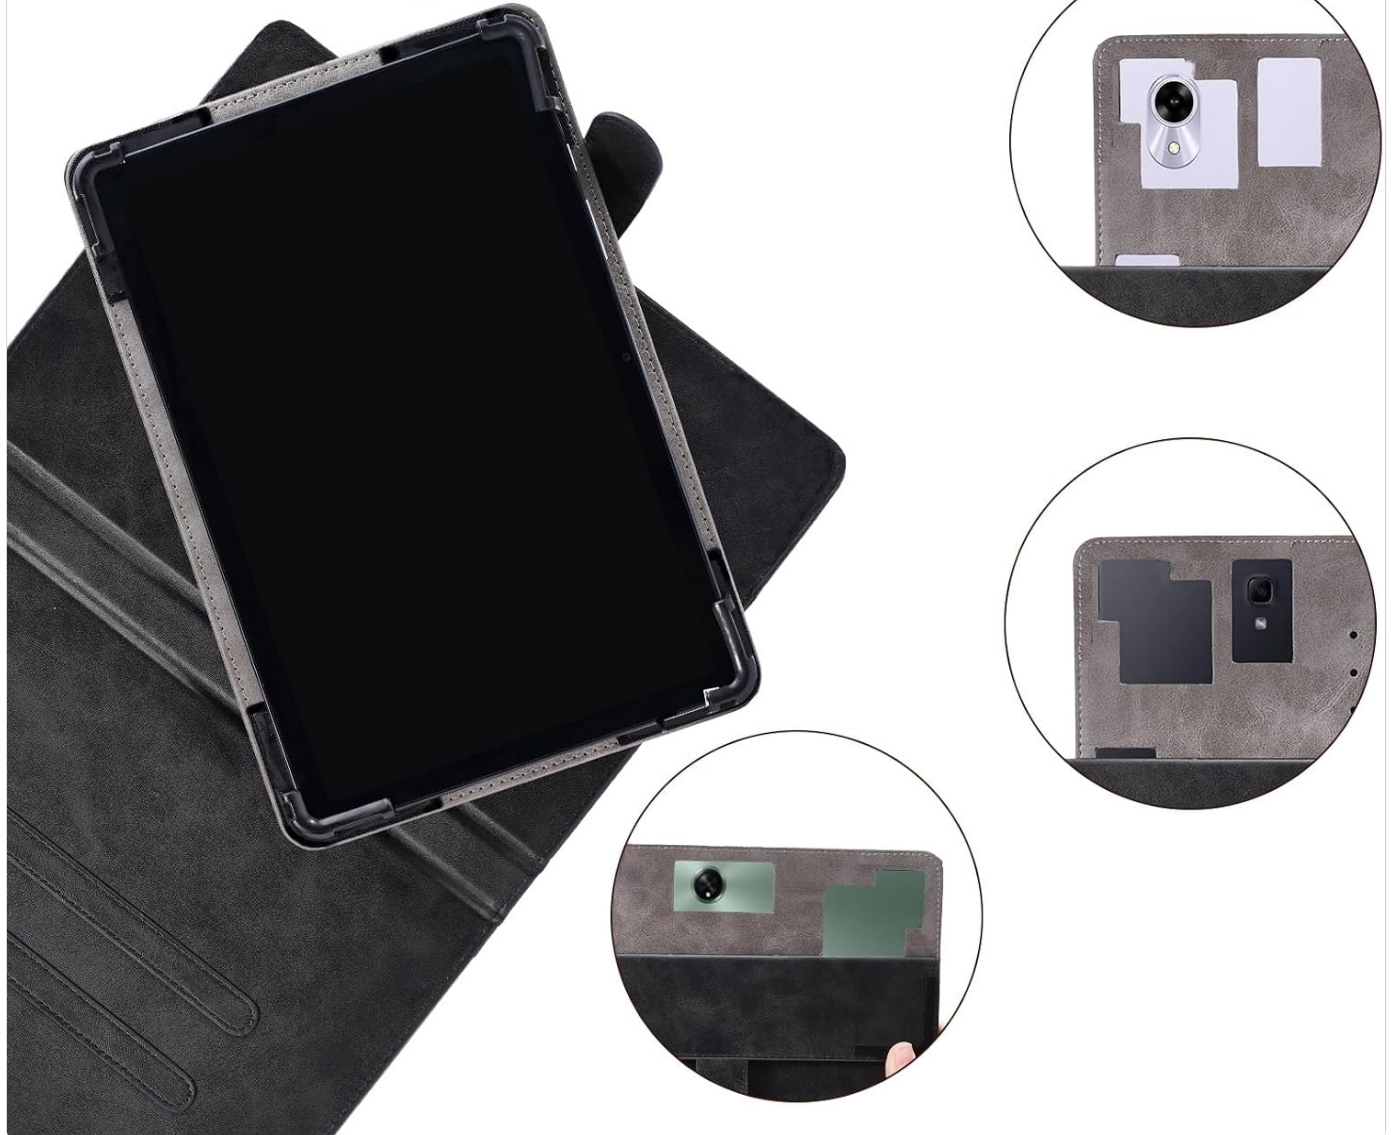


Image: The tablet case illustrating its adaptable camera cutouts, designed to fit various tablet camera placements.

MAINTENANCE

To ensure the longevity and appearance of your Aroepurt Tablet Case:

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use.
- **Avoid Sharp Objects:** Prevent contact with sharp objects to avoid scratches or damage to the PU leather.

TROUBLESHOOTING

- **Tablet does not fit:** Ensure your tablet model is either Digiland Mid1032 or Mid1016. This case is specifically designed for these models.
- **Stand is unstable:** Ensure the tablet's edge is firmly seated in one of the anti-slip stripes. Adjust the angle as needed.
- **Camera is obstructed:** Verify that the tablet is correctly aligned within the case, ensuring the camera lens matches the case's

cutout.

SPECIFICATIONS

Product Dimensions	0.39 x 0.39 x 0.39 inches
Item Weight	2.46 ounces
Special Features	Card insertion, Storage pocket, Thickened anti-drop corner protector, Folding stand
Form Factor	Flip Case
Color	Black
Compatible Devices	Digiland Mid1032, Digiland Mid1016
Shell Type	Hybrid

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any support inquiries or further assistance, please refer to the retailer or manufacturer's customer service channels where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

