

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MOZOTER](#) /

› [MOZOTER M3 Portable Bluetooth Speaker Instruction Manual](#)

MOZOTER M3

MOZOTER M3 Portable Bluetooth Speaker Instruction Manual

Model: M3 | Brand: MOZOTER

INTRODUCTION

This manual provides essential information for the safe and efficient use of your MOZOTER M3 Portable Bluetooth Speaker. Please read it thoroughly before operating the device.

The MOZOTER M3 is a compact, clip-on wireless speaker designed for portability and durability. It features Bluetooth 5.3 connectivity, 360° Hi-Fi stereo sound with deep bass, and an IPX5 waterproof rating, making it suitable for various outdoor and indoor activities.

WHAT'S IN THE BOX

- MOZOTER M3 Portable Bluetooth Speaker
- Power Cable (USB-C)

SETUP

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C power cable to the speaker's charging port and plug the other end into a compatible USB power source. The charging port is protected by a waterproof cover; ensure it is securely closed after charging to maintain the IPX5 rating.

Bluetooth Pairing

1. Press and hold the power button on the speaker to turn it on. You will hear an audio prompt, and an indicator light will blink, signifying it is in pairing mode.
2. On your mobile device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
3. Select the speaker from the list of available devices. It should appear as "M3" or similar.
4. Once connected, you will hear an audio confirmation, and the indicator light will stop blinking.

The speaker will automatically reconnect to the last paired device when turned on, if the device's Bluetooth is active and within range.

Your browser does not support the video tag.

Video: Demonstrates the speaker's compact size, clip, and charging port. It also shows the speaker being paired with a tablet and controlling music playback.

OPERATING INSTRUCTIONS

Basic Controls

- **Power On/Off:** Press and hold the power button.
- **Play/Pause:** Press the play/pause button once.
- **Volume Up:** Press the "+" button.
- **Volume Down:** Press the "-" button.
- **Next Track:** Double-click the "+" button.
- **Previous Track:** Double-click the "-" button.

Hands-Free Calling

The speaker features a built-in microphone for hands-free calls. When a call comes in, press the play/pause button to answer. Press it again to end the call. The microphone includes noise cancellation for clear communication.

Clip-On Functionality

Utilize the durable spring clamp to attach the speaker to your shirt, backpack, belt, or jacket. This design ensures stability during movement, allowing you to enjoy audio while keeping your hands free.

Ultra Durable & Portable Speaker

Clip on your belongings, ready for outdoor



4X Stronger Clip
Super easy&tight clip

Image: A man cycling with the MOZOTER M3 speaker securely clipped to his shirt, demonstrating its wearable design for outdoor activities.

FEATURES

- 360° Hi-Fi Stereo Sound:** Equipped with 10mm drivers for powerful sound and boosted bass, providing a dynamic audio experience.
- IPX5 Waterproof Rating:** Designed to resist water splashes and spills, making it suitable for use near pools, beaches, or in light rain. Do not submerge the speaker in water.
- Advanced Bluetooth 5.3:** Ensures fast pairing, stable connection, and compatibility with a wide range of Bluetooth devices within a 33-foot range.
- Compact and Lightweight:** Measuring approximately 3.07 inches in diameter and 4.5 inches high, weighing 3.2 ounces, for easy portability.

PORTABLE, LIGHTWEIGHT

Tiny Size, Big Power




height:
3.03
inches

weight: 1.58 inches

Image: The MOZOTER M3 speaker is shown next to a smartphone, highlighting its compact and portable dimensions.

| Dust and Water Resistant

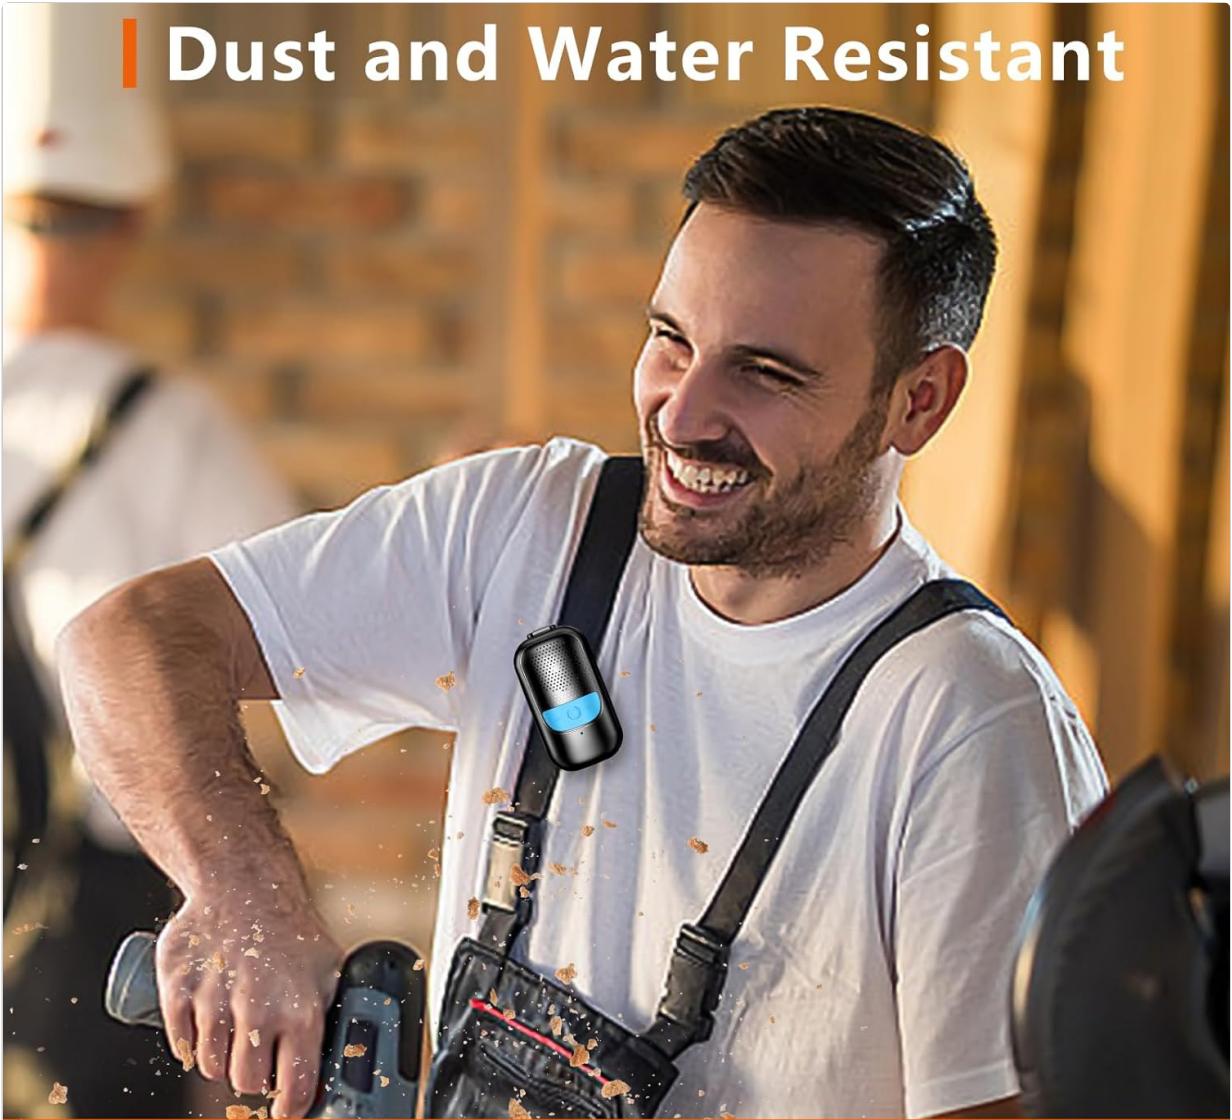

GUARANTEED TOUGH

Image: The MOZOTER M3 speaker is shown in a dusty environment, illustrating its dust and water-resistant design.

| Savor the Shower with Music

IPX5 Waterproof Rating



Image: A woman is singing in the shower with the MOZOTER M3 speaker nearby, emphasizing its IPX5 waterproof rating for use in wet conditions.

SPECIFICATIONS

- **Model Name:** M3
- **Speaker Type:** Atmospheric
- **Color:** Blue
- **Product Dimensions:** 3"D x 2"W x 2"H
- **Item Weight:** 3.2 ounces
- **Manufacturer:** MOZOTER
- **Speaker Maximum Output Power:** 15 Watts
- **Frequency Response:** 20 Hz
- **Connectivity Technology:** Bluetooth

MAINTENANCE

To ensure the longevity of your MOZOTER M3 speaker, follow these maintenance guidelines:

- Keep the charging port cover securely closed when not charging to maintain its waterproof integrity.
- Clean the speaker with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

- **Speaker won't turn on:** Ensure the battery is charged. Connect the speaker to a power source and try again.
- **Unable to pair via Bluetooth:** Make sure the speaker is in pairing mode (blinking indicator light). Check that your device's Bluetooth is enabled and within range. Try forgetting the device on your phone and re-pairing.
- **Poor sound quality:** Ensure the speaker and your device are within Bluetooth range and there are no obstructions. Check the volume levels on both the speaker and your device.
- **Water ingress:** While the speaker is IPX5 rated, it is not designed for submersion. If water enters the device, turn it off immediately and allow it to dry completely before attempting to use it again.

WARRANTY & SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the manufacturer's official website or contact their customer support directly. Keep your purchase receipt for warranty claims.