

Kary KX08

Kary LED Desk Lamp User Manual

MODEL: KX08

Brand: Kary

1. INTRODUCTION

The Kary LED Desk Lamp (Model KX08) is designed to provide versatile and eye-caring illumination for various tasks and environments. Featuring a flexible gooseneck, adjustable height, 5 levels of dimmable brightness, and 5 color temperature settings, this lamp is an energy-efficient solution for your home office, study, or workspace. Its flicker-free, gentle, and uniformly distributed light helps reduce eye strain during prolonged use.

2. WHAT'S IN THE BOX

Please verify that all components are present in the package:

- LED Desk Lamp (x1)
- Screws (x2, 1 for spare)
- Screwdriver (x1)
- Power Adapter (x1)
- User Manual (x1)



Figure 2.1: All components included in the Kary LED Desk Lamp package.

3. SETUP INSTRUCTIONS

Follow these steps to assemble and set up your Kary LED Desk Lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all items listed in Section 2 are present.
2. **Assemble the Base:** Connect the lamp body into the base. Use the provided screwdriver and screws to secure it firmly.
3. **Connect Power:** Plug the power adapter into a standard electrical outlet, then connect the USB end to the lamp's power input.
4. **Power On:** Once connected, the lamp is ready for use. Press the power button on the control panel or remote to turn it on.



Figure 3.1: Visual guide for lamp assembly and initial power-on.

4. OPERATING INSTRUCTIONS

The Kary LED Desk Lamp offers intuitive controls for personalized lighting.

4.1. Control Panel / Remote Functions

The lamp can be controlled via the touch-sensitive panel on its base or the included remote control. The control panel features buttons for On/Off, Mode (color temperature), Timer, and Brightness adjustment.



Figure 4.1: Lamp dimensions and control panel overview.

4.2. Power On/Off

Press the **Power** button to turn the lamp on or off. The lamp features a soft fade-in/fade-out effect.

4.3. Brightness Adjustment

The lamp offers 5 levels of brightness. Use the brightness control buttons (often indicated by sun icons or '+' / '-' symbols) to cycle through the intensity levels from 20% to 100%.

4.4. Color Temperature Adjustment

Select from 5 color temperature settings (e.g., 3500K Warm Yellow for reading, 4500K Warm White for general use, 6500K Daylight for focusing on work). Press the **Mode** button to switch between these settings.



Figure 4.2: Customizable brightness and color temperature settings.

4.5. Flexible Gooseneck and Angle Adjustment

The lamp features a flexible gooseneck that allows height adjustment from 14 to 24.4 inches. The lamp head can rotate

270 degrees, enabling precise light direction to avoid glare and illuminate specific areas.



Figure 4.3: Lamp head angle adjustment.



Figure 4.4: Flexible gooseneck and height adjustment.

4.6. Timer Function

Activate the 60-minute timer function by pressing the **Timer** button. The lamp will automatically shut off after 60 minutes, serving as a reminder to take breaks during long work sessions.

4.7. Eye-Caring and Flicker-Free Lighting

The Kary LED Desk Lamp is designed with a premium LED light source that provides gentle, uniform, and flicker-free illumination. This feature helps to relax eye pressure and prevent discomfort associated with prolonged work or reading.

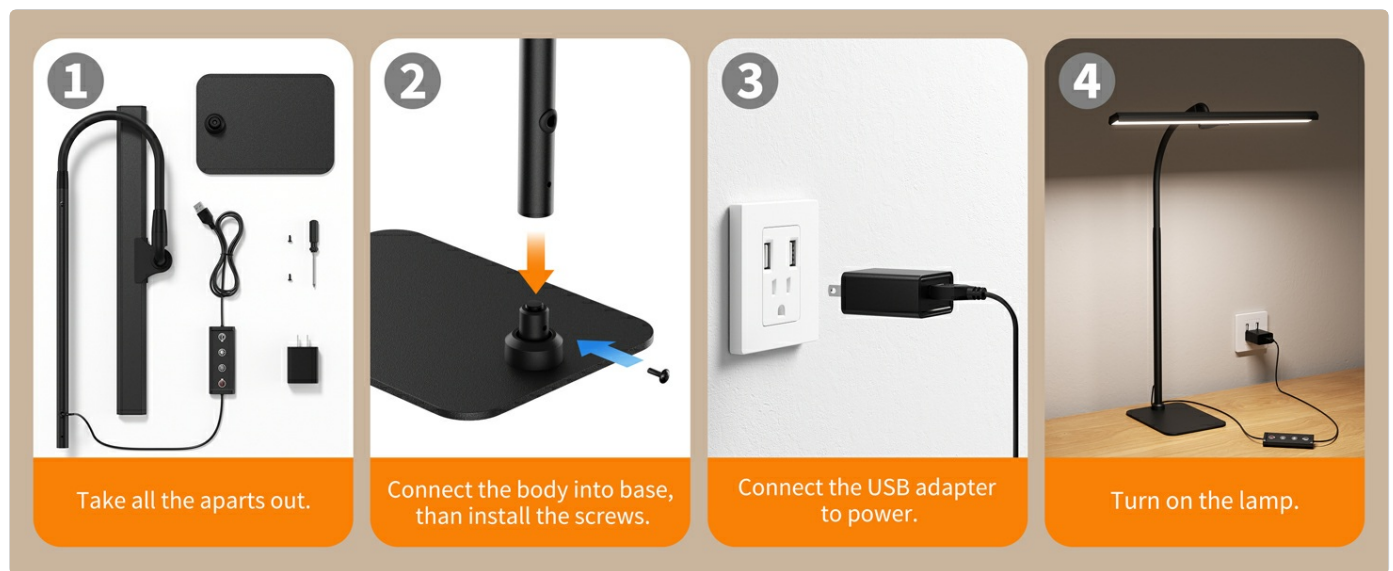


Figure 4.5: Flicker-free light source for eye comfort.

4.8. Product Demonstration Video

Video 4.1: Official product video demonstrating the Kary LED Desk Lamp's adjustable light settings and flexible design for various home office tasks.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Kary LED Desk Lamp, follow these maintenance guidelines:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the lamp. Avoid abrasive cleaners, solvents, or harsh chemicals that may damage the finish or electrical components.
- **Storage:** If storing the lamp for an extended period, ensure it is clean and dry. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the flexible gooseneck and lamp head gently to prevent damage to the adjustable mechanisms.

6. TROUBLESHOOTING

If you encounter any issues with your Kary LED Desk Lamp, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on	No power connection; Faulty adapter/outlet	Ensure the power adapter is securely plugged into both the lamp and a working electrical outlet. Try a different outlet.
Light flickers or is unstable	Loose connection; Power supply issue	Check all connections. Ensure the power adapter is providing stable power. Avoid using with incompatible power sources.
Controls are unresponsive	Temporary software glitch; Power cycle needed	Disconnect the lamp from power for 30 seconds, then reconnect. Try using the remote control if the touch panel is unresponsive, or vice-versa.
Lamp head does not adjust smoothly	Dust or debris in joints; Over-tightened joints	Gently clean the joints. Do not force movement. If joints are too tight, check for any visible obstructions.

7. SPECIFICATIONS

Feature	Detail
Model Name	KX08
Brand	Kary
Lamp Type	Desk Lamp
Light Source Type	LED
Wattage	12 watts
Brightness	850 Lumens (Max)
Color Temperature	3500K - 6500K (5 levels)
Dimmable	Yes (5 levels)
Special Features	Adjustable Color Temperature, Adjustable Height, Dimmable, Timer
Control Method	Touch
Power Source	Corded Electric (5 Volts DC)
Material	Aluminum
Product Dimensions	7"D x 6.34"W x 9.84"H
Item Weight	3.14 pounds (1.43 Kilograms)
Installation Type	Freestanding (Desktop)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Kary website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question