

Midea MPC6002SBSK

Midea 12-in-1 Electric Pressure Cooker User Manual

Model: MPC6002SBSK | Brand: Midea

1. INTRODUCTION

Thank you for choosing the Midea 12-in-1 Electric Pressure Cooker. This versatile appliance is designed to simplify your cooking process, offering 12 preset functions including pressure cook, sauté, steam, slow cook, oatmeal, soup/broth, rice, bean chili, yogurt, pasta, cake, and sauce thicken. Its durable stainless steel construction and advanced safety features ensure reliable and efficient performance for a wide range of culinary tasks.

2. SAFETY INFORMATION

Your safety is paramount. Please read all instructions carefully before operating the appliance. This pressure cooker is equipped with the advanced REALSAFE SYSTEM, incorporating 9-in-1 safety protection features:

- **Pressure Limit Protection:** Prevents pressure from exceeding safe levels.
- **Over Temperature Protection:** Automatically shuts off if internal temperature becomes too high.
- **Overpressure Automatic Release:** Safely releases excess pressure if needed.
- **Anti-Blocking Protection:** Prevents food particles from blocking the steam release.
- **Device Open Protection:** Ensures the lid is properly closed and locked during operation.
- **Micro-Switch Protection:** Additional safety mechanism for lid closure.
- **Pressure Controller:** Maintains consistent pressure during cooking.
- **Over Current Protection:** Safeguards against electrical surges.
- **No-Load Switch Off Function:** Prevents operation without contents.

Always ensure the steam release valve is in the correct position for pressure cooking. Do not touch the float valve or steam release valve during operation. Allow the pressure to release naturally or use the quick release method as instructed before opening the lid.

9-IN-1 SATETY FEATURES

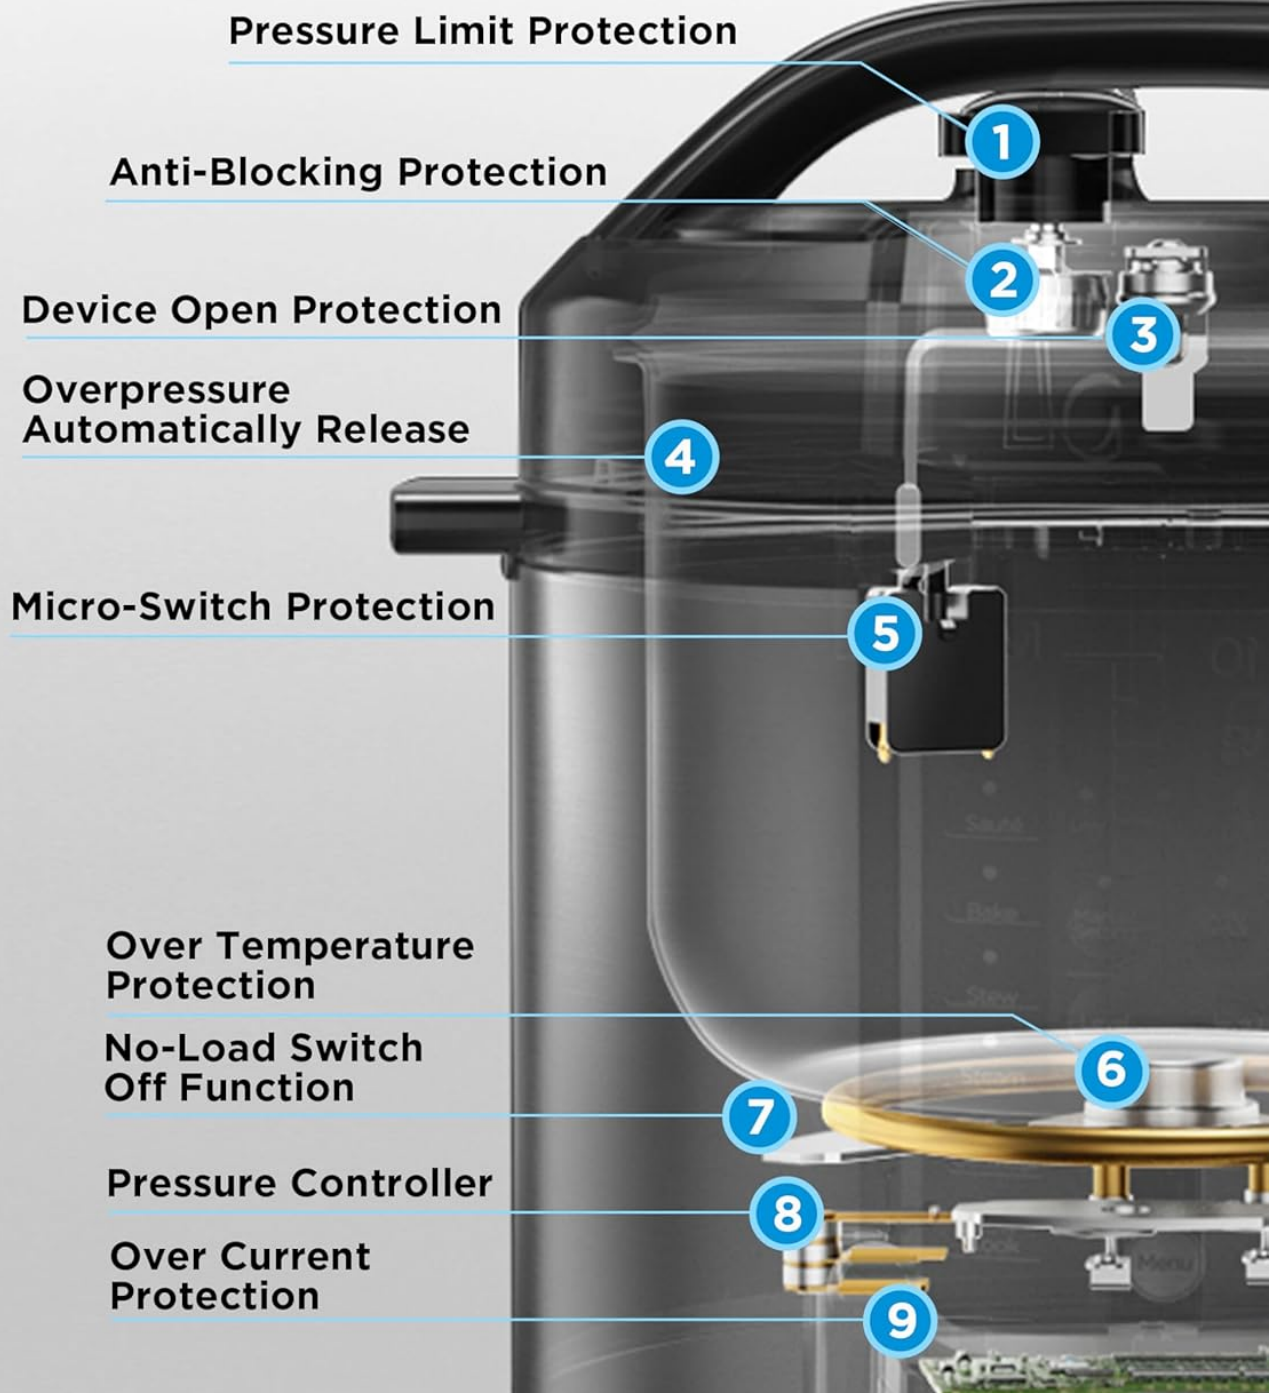


Figure 1: Illustration of the 9-in-1 safety features.

3. PRODUCT OVERVIEW

Components

- Main Unit with Control Panel
- Removable Stainless Steel Inner Pot

- Lid with Steam Release Valve and Float Valve
- Condensation Collector (located at the back)
- Power Cord
- Accessories (e.g., measuring cup, rice paddle, steaming rack)



Figure 2: Midea 12-in-1 Electric Pressure Cooker and its accessories.

Control Panel

The intuitive control panel features a digital display and various function buttons for easy operation.

MULTIPLE RECIPES VERSATILE COOKING MODES



Figure 3: Detailed view of the control panel.

- **Digital Display:** Shows cooking time, status, and error codes.
- **Pressure Cook:** For high-pressure cooking. Adjustable low, medium, high settings.
- **Sauté:** For browning or simmering.
- **Steam:** For steaming vegetables, fish, etc.
- **Oatmeal:** Pre-set for cooking oatmeal.
- **Slow Cook:** For slow cooking recipes.
- **Cake:** For baking cakes.
- **Sauce Thicken:** For thickening sauces.

- **Pasta:** Pre-set for cooking pasta.
- **Soup/Broth:** Pre-set for making soups and broths.
- **Rice:** Pre-set for cooking rice.
- **Bean Chili:** Pre-set for cooking beans and chili.
- **Yogurt:** For making homemade yogurt.
- **Manual Setting:** Allows custom time and pressure settings.
- **Delay Timer:** Delays the start of cooking.
- **Cooking Timer:** Displays remaining cooking time.
- **Keep Warm:** Automatically activates after cooking to keep food warm.
- **Menu:** Cycles through cooking programs.
- **Cancel:** Stops the current cooking program.
- **Start:** Begins the selected cooking program.
- **+/- Buttons:** Adjust cooking time or other settings.

4. SETUP

Before first use, unpack all components and remove any packaging materials. Wash the inner pot, lid, and accessories with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are dry before plugging in the appliance.

Initial Test Run (Water Test)

It is recommended to perform a water test to familiarize yourself with the pressure cooker's operation and ensure it is functioning correctly.

1. Place the inner pot into the cooker base.
2. Add 2-3 cups of water to the inner pot.
3. Close the lid, ensuring it is properly aligned and locked. The lid handle should align with the arrow on the base.
4. Ensure the steam release valve is in the 'Sealing' position.
5. Plug in the power cord.
6. Select the 'Pressure Cook' function and set the time to 5 minutes.
7. Press 'Start'. The cooker will preheat and then begin the pressure cooking cycle.
8. Once cooking is complete, the cooker will beep and switch to 'Keep Warm' mode.
9. Carefully turn the steam release valve to the 'Venting' position to release pressure. Once the float valve drops, it is safe to open the lid.

5. OPERATING INSTRUCTIONS

The Midea 12-in-1 Electric Pressure Cooker offers a variety of cooking programs to suit your needs. Always ensure the inner pot is correctly placed in the base and contains sufficient liquid for pressure cooking.

70% FASTER

Pressure cook delicious one-pot meals up to 70% faster than traditional cooking methods



Figure 4: The pressure cooker in use, demonstrating steam release.

General Cooking Steps

1. Add ingredients and liquid to the inner pot. Do not fill above the MAX line.
2. Place the lid on the cooker and turn it clockwise until it locks into place.
3. Ensure the steam release valve is set to the 'Sealing' position for pressure cooking.
4. Select your desired cooking program using the 'Menu' button or direct function buttons.
5. Adjust cooking time or pressure level using the '+/-' buttons if necessary.

6. Press 'Start' to begin cooking. The display will show 'On' during preheating.
7. Once pressure is reached, the float valve will rise, and the timer will begin counting down.
8. After cooking, the cooker will beep and automatically switch to 'Keep Warm' mode.
9. Release pressure using the desired method (Natural Release or Quick Release) before opening the lid.

Specific Functions

The Midea 12-in-1 Electric Pressure Cooker simplifies meal preparation with its diverse functions. From quick pressure cooking to slow simmering, this appliance handles a wide array of recipes.

CUSTOMIZE YOUR COOKING!

Easily cook all your favorite meals to perfection.



Figure 5: Examples of meals prepared using the cooker's versatile functions.

For a visual guide on using the Midea 12-in-1 Electric Pressure Cooker and its 12 presets, please watch the official product video below:

Video 1: Official Midea demonstration of the 12-in-1 Electric Pressure Cooker and its presets.

The cooker also features a 24-hour pre-set timer for delayed cooking and a DIY manual setting for customized recipes.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Midea Electric Pressure Cooker.

Cleaning the Inner Pot

The stainless steel inner pot is designed for easy cleaning. It is dishwasher safe, making cleanup convenient after each use.

EASY OPERATION, MORE FAMILY TIME

Easy to maneuver and heats up quickly,
allowing you to spend more time with your family for meals



Figure 6: The stainless steel inner pot is easy to clean.

Cleaning the Lid and Exterior

- Remove the sealing ring and anti-block shield from the lid for thorough cleaning.
- Wash the lid with warm, soapy water. Rinse and dry completely.
- Wipe the exterior of the cooker base with a damp cloth. Never immerse the base in water.
- Clean the condensation collector regularly.

7. TROUBLESHOOTING

If you encounter any issues with your Midea Electric Pressure Cooker, please refer to the following common troubleshooting tips:

- **Pressure not building:** Ensure the lid is properly sealed and the steam release valve is in the 'Sealing' position. Check if the sealing ring is correctly installed and not damaged.
- **Food undercooked:** Verify that the correct cooking program and time were selected for the ingredients. Ensure sufficient liquid was added.
- **Error codes:** Refer to the specific error code in the comprehensive manual (if available) or contact customer support for assistance.
- **Steam leaking from lid:** Check the sealing ring for proper placement or damage. Ensure the lid is securely locked.

For more detailed troubleshooting or issues not listed here, please contact Midea customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Midea
Model Number	MPC6002SBSK
Capacity	6 Quarts
Material	Stainless steel
Color	Black
Wattage	1000 watts
Voltage	120 Volts
Control Method	Touch
Product Dimensions	1.01"D x 1.08"W x 1.1"H
Item Weight	14.17 pounds
UPC	840296511091

9. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Midea website or contact Midea customer service. Keep your purchase receipt for warranty claims.

Midea Customer Service: www.midea.com/us/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question