

## MBYULO EHBL-A001-V01-US-1

# MBYULO EHBL 500 Cordless Vacuum Cleaner

## Instruction Manual

### 1. INTRODUCTION

---

Thank you for choosing the MBYULO EHBL 500 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and retain it for future reference.

### 2. SAFETY INFORMATION

---

To reduce the risk of fire, electric shock, or injury, always observe basic safety precautions when using your vacuum cleaner.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.



- Sofa Brush Nozzle
- 2-in-1 Brush and Crevice Nozzle
- Brush Cleaning Tool
- HEPA Filter Replacement (one pre-installed, one spare)
- Power Adapter
- Rechargeable Wall Mount
- Instruction Manual

## 4. PRODUCT OVERVIEW

Familiarize yourself with the different parts of your MBYULO EHBL 500 Cordless Vacuum Cleaner.



Image: An exploded view diagram showing the main vacuum unit, extension wand, floor brush, various attachments, and the OLED display.

1. **Main Unit:** Contains the motor, dust cup, and control panel.
2. **OLED Color Screen:** Displays battery level, suction mode, and alerts.
3. **Dust Cup:** Collects dust and debris.
4. **Battery Pack:** Removable and rechargeable lithium-ion battery.
5. **Extension Wand:** Connects the main unit to the floor brush or other attachments for extended reach.
6. **Motorized Floor Brush:** Designed for various floor types, featuring anti-tangle and edge cleaning capabilities.
7. **Sofa Brush Nozzle:** Ideal for upholstery and fabrics.
8. **2-in-1 Brush and Crevice Nozzle:** Versatile tool for tight spaces and delicate surfaces.
9. **Rechargeable Wall Mount:** For convenient storage and charging.

## 5. ASSEMBLY

---

Follow these steps to assemble your vacuum cleaner.

1. **Attach the Extension Wand:** Insert the top end of the extension wand into the main unit until it clicks securely into place.
2. **Attach the Floor Brush:** Insert the bottom end of the extension wand into the motorized floor brush until it clicks securely into place.
3. **Install Battery:** Ensure the battery pack is fully charged. Slide the battery pack into the slot on the main unit until it clicks.
4. **Attach Accessories:** For handheld use, attach the sofa brush nozzle or the 2-in-1 brush and crevice nozzle directly to the main unit. For extended reach, attach them to the end of the extension wand.

## 6. CHARGING

---

Before first use, fully charge the battery. The OLED screen will indicate charging status.

# Rechargeable Wall Bracket

4-Hour Quick Charge


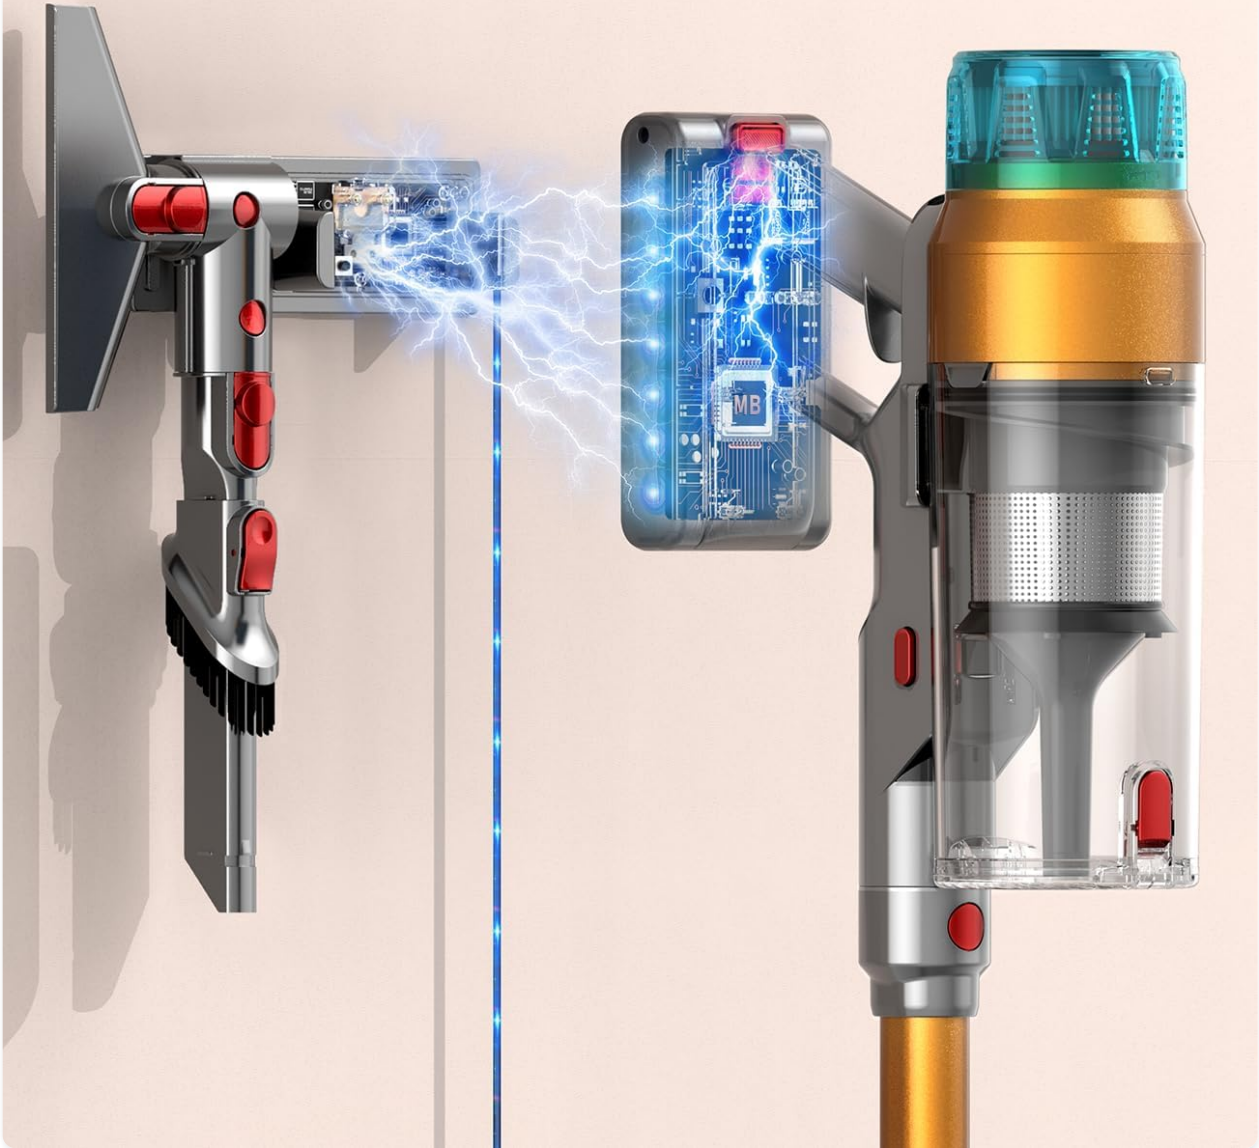


Image: The vacuum cleaner is shown mounted on its wall bracket, with an electrical charge symbol indicating it is charging.

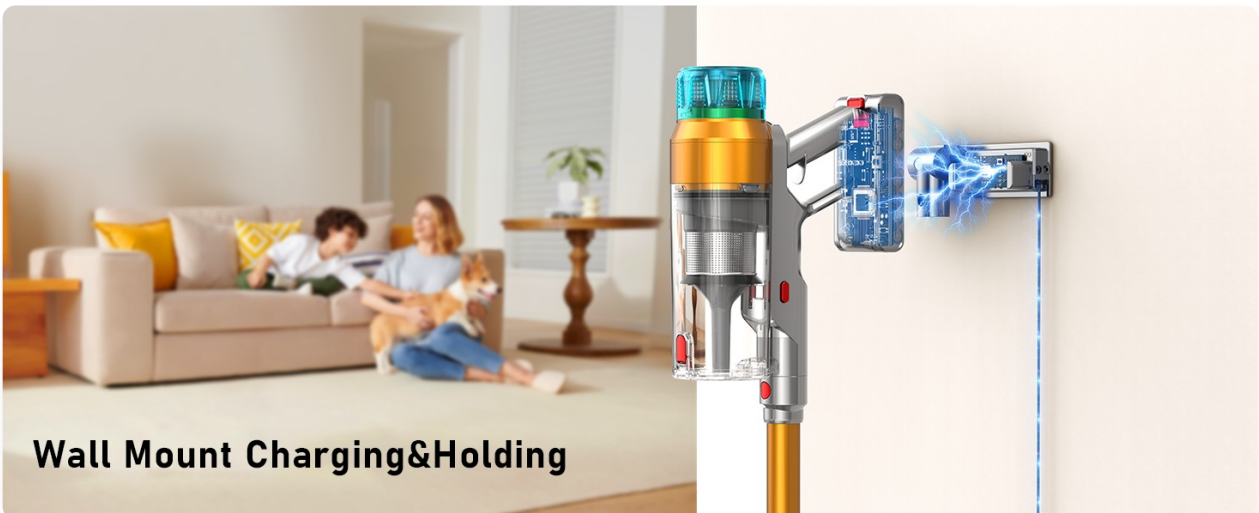

**Wall Mount Charging&Holding**

Image: A detailed view of the vacuum cleaner being charged and stored on its wall mount, highlighting the convenience of the system.

1. **Wall Mount Installation:** Choose a suitable location near a power outlet to install the rechargeable wall mount. Secure it firmly to the wall using appropriate hardware (not included).
2. **Charging the Battery:**
  - **Via Wall Mount:** Place the vacuum cleaner onto the wall mount. Ensure the charging contacts align. The OLED screen will illuminate to show charging progress.
  - **Directly:** Remove the battery pack from the main unit. Connect the power adapter directly to the battery pack's charging port.
3. A full charge typically takes approximately 4 hours. The battery indicator on the OLED screen will show 100% when fully charged.

## 7. OPERATION

---

Learn how to effectively use your MBYULO EHBL 500 Cordless Vacuum Cleaner for various cleaning tasks.

# ALL-in-One LED Display



Image: The OLED screen displays battery percentage and suction mode indicators, showing the user interface.



Image: An overhead view of the vacuum cleaner's floor brush and the OLED screen, with icons indicating Eco, Mid, Max modes, battery level, roller blockage, and clogged air ducts.

1. **Power On/Off:** Press the power button on the handle to turn the vacuum cleaner on. Press it again to turn off.
2. **Adjusting Suction Power:** The vacuum cleaner features 3 suction levels: Eco, Mid, and Max. Press the mode button on the OLED screen to cycle through the suction modes. The OLED screen will display the current mode. Max mode provides up to 55KPa suction for deep cleaning.
3. **OLED Color Screen:** The screen provides real-time information:
  - **Battery Level:** Shows remaining battery percentage.
  - **Suction Mode:** Indicates the active power setting (Eco, Mid, Max).
  - **Alerts:** Notifies you of potential issues such as roller blockage or clogged air ducts.
4. **Using Attachments:**
  - **Motorized Floor Brush:** Suitable for hardwood floors, carpets, and pet hair. Its 270-degree flexible rotation and edge cleaning design allow for thorough cleaning around furniture and in corners.
  - **Sofa Brush Nozzle:** Use for cleaning sofas, curtains, and other fabric surfaces.
  - **2-in-1 Brush and Crevice Nozzle:** Use the crevice tool for narrow gaps and corners. Slide the brush down for dusting delicate surfaces.
5. **Battery Life:** A fully charged battery provides up to 55 minutes of runtime in Eco mode, sufficient for cleaning a 2500 sq ft home. Runtime will vary based on suction mode and attachment used.

## 8. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.



Image: A diagram illustrating the multi-layer filtration system, including the stainless steel filter, H13 HEPA cartridge, and outlet HEPA cartridge.

## UPGRADED ANTI-TANGLE FLOOR BRUSH



Edge Cleaning Design



270° Flexible Brush Head

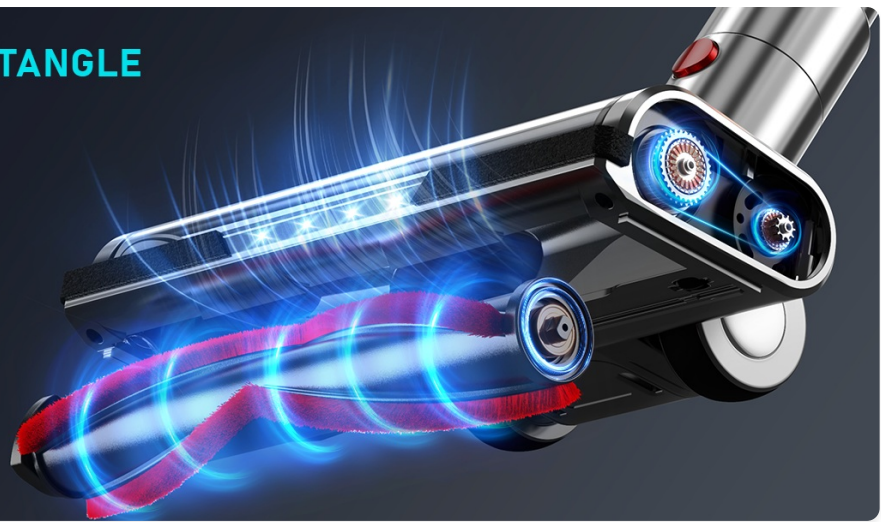


Image: A close-up of the motorized floor brush, highlighting its anti-tangle design, edge cleaning capability, and flexible brush head.

### 8.1. Emptying the Dust Cup

Empty the 1.6L dust cup regularly to maintain suction power. It is recommended to empty it after each use or when the MAX fill line is reached.

1. Hold the main unit over a trash bin.
2. Locate the dust cup release button (usually near the bottom of the dust cup). Press the button to open the bottom flap and release the contents.
3. Close the flap securely until it clicks.

### 8.2. Cleaning the Filters

The 11-level filtration system includes an extended H13 HEPA cartridge, a stainless steel cartridge, and an outlet HEPA cartridge. Clean these filters regularly to prevent clogging and maintain filtration efficiency.

1. **Remove Filters:** Twist and pull to remove the dust cup from the main unit. Then, remove the stainless steel filter and the H13 HEPA filter from the dust cup. The outlet HEPA filter is located at the rear of the main unit.
2. **Clean Filters:**
  - Tap the stainless steel filter and H13 HEPA filter gently over a trash bin to remove loose dust.
  - Rinse both filters under cold running water until the water runs clear. Do not use detergent.
  - Allow all filters to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.
3. **Reassemble:** Once completely dry, place the H13 HEPA filter back into the stainless steel filter, then insert them into the dust cup. Reattach the dust cup to the main unit. Reinstall the outlet HEPA filter.

### 8.3. Cleaning the Brush Roll

Periodically check the motorized floor brush for tangled hair or debris.

1. Turn off the vacuum cleaner and disconnect it from any power source.
2. Locate the brush roll release tab on the side of the floor brush. Open the cover and remove the brush roll.
3. Use the included brush cleaning tool or scissors to cut and remove any tangled hair or fibers from the brush roll.
4. Reinsert the brush roll and close the cover securely until it clicks.

## 9. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged; Battery not properly installed; Power button not pressed.	Charge the battery fully; Ensure battery is clicked into place; Press the power button firmly.
Low suction power	Dust cup full; Filters clogged; Brush roll tangled; Blockage in hose/wand.	Empty dust cup; Clean/wash filters and allow to dry; Remove tangled hair from brush roll; Check for and remove any blockages.
Brush roll not spinning	Brush roll tangled; Floor brush blocked; Incorrect mode selected.	Clean brush roll; Check for blockages in the floor brush; Ensure vacuum is in a mode that activates the brush roll.
OLED screen shows error/alert	Roller blockage; Air duct clogged; Battery issue.	Refer to the specific icon on the screen and follow corresponding maintenance steps (e.g., clean brush roll, check for blockages). If battery related, ensure proper charging.
Short battery life	Using Max suction mode frequently; Battery not fully charged; Battery degradation.	Use Eco or Mid mode for longer runtime; Ensure battery is fully charged before use; Contact customer support if battery life significantly decreases over time.

## 10. SPECIFICATIONS

Feature	Specification
Model Name	EHBL-A001-V01-US-1
Motor Wattage	600W
Suction Power	Up to 55KPa (Max Mode)
Battery Type	Lithium-ion (7x2500mAh)
Max Runtime	Up to 55 minutes
Dust Cup Capacity	1.6 Liters
Filtration System	11-Level (H13 HEPA, Stainless Steel, Outlet HEPA)

Feature	Specification
Noise Level	72 dB
Product Dimensions	16"L x 11"W x 7"H
Item Weight	5 pounds
Special Features	OLED Color Screen, Rechargeable Wall Mount, 270-Degree Flexible Brush Head, Edge Cleaning Design, Anti-tangle Floor Brush

## 11. WARRANTY AND SUPPORT

MBYULO products are manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included in your package or visit the official MBYULO website. Please have your model number (EHBL-A001-V01-US-1) and purchase details ready when contacting support.



Image: A customer service representative smiling, symbolizing available support for product inquiries.