

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KLIM](#) /

> [KLIM Discover Portable CD Player User Manual](#)

KLIM KLIM Nomad

KLIM Discover Portable CD Player User Manual

MODEL: KLIM NOMAD

1. Introduction

The KLIM Discover is a versatile portable CD player designed to provide a comprehensive audio experience. It supports various playback options including standard CDs, MP3 CDs, FM radio, SD card media, and offers multiple connectivity methods such as Bluetooth, AUX, and FM transmission. This manual provides detailed instructions for setting up, operating, and maintaining your device.

2. What's in the Box

- KLIM Discover CD Player
- KLIM Headset
- Earphone Accessories
- USB-C Charging Cable
- Carry Pouch



KLIM DISCOVER + HEADSET

- ✓ FM/AM Radio
- ✓ CD Player
- ✓ SD/TF Card reader
- ✓ Bluetooth
- ✓ FM Transmitter
- ✓ Record function

**GET YOURS
NOW!**



Image: KLIM Discover Portable CD Player, headphones, and accessories.

Ensure all items are present upon unboxing. If any components are missing or damaged, please contact customer support.

3. Product Overview

Controls and Ports

REMEMBER THE GOOD OLD TIMES



CD

CD-R

CD-RW

HDCD

MP-3

Image: Detailed view of the KLIM Discover's controls and ports.

- **Backlit Display:** Shows track information, mode, and settings.
- **Stop Button:** Stops playback.
- **Play/Pause Button:** Starts or pauses playback.
- **Next Track/Fast Forward Button:** Skips to the next track or fast forwards during playback.
- **Previous Track/Fast Backward Button:** Skips to the previous track or fast backwards during playback.
- **DIR/Speed + Button:** Changes directory (for MP3 CDs/SD cards) or increases playback speed.
- **FM Radio/Speed - Button:** Activates FM radio mode or decreases playback speed.
- **FM Transmitter Button:** Activates FM transmission mode.
- **MODE/FM (+) Button:** Changes playback mode or adjusts FM frequency up.
- **PROG/FM (-) Button:** Programs tracks or adjusts FM frequency down.
- **EQ/Recording Button:** Cycles through equalizer presets or initiates recording.
- **Bluetooth Button:** Activates Bluetooth pairing mode.
- **Volume Control:** Adjusts audio output level.
- **Hold Switch:** Locks all buttons to prevent accidental operation.
- **SD Card Slot:** For inserting an SD/TF memory card.
- **DC 5V Charge Port:** For connecting the USB-C charging cable.
- **Headphone Jacks (2):** For connecting headphones or an AUX cable.

4. Setup

4.1. Charging the Device

The KLIM Discover is equipped with a rechargeable battery. Before first use, fully charge the device using the provided USB-C cable connected to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

4.2. Inserting a CD

1. Slide the 'OPEN' switch to open the CD compartment lid.
2. Carefully place the CD onto the spindle with the label side facing up.
3. Gently press the center of the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.



Image: KLIM Discover CD Player with a CD visible through the transparent lid.

Note: Bluetooth compatibility with car infotainment systems may vary. Some car systems may not fully support all Bluetooth features of the KLIM Discover.

5.3. FM Radio

Press the FM Radio button to switch to FM mode. Use the FM (+) and FM (-) buttons to tune to desired radio stations. The device will display the current frequency.

5.4. SD Card Playback

Insert an SD/TF card into the SD card slot. The device will automatically detect the card. Use the MODE button to switch to SD card playback. Use the DIR button to navigate through directories if your card contains multiple folders of MP3 files.

5.5. FM Transmitter

The FM transmitter allows you to broadcast audio from the KLIM Discover to your car's FM radio. Press the FM Transmitter button to activate this feature. Tune your car's FM radio to the frequency displayed on the KLIM Discover to listen to your music wirelessly.



Image: Visual representation of connecting the KLIM Discover to a car via Bluetooth, FM Transmitter, or AUX cable.

5.6. Recording Function

The KLIM Discover includes a recording function. Refer to the detailed instructions in the full manual for specific steps on how to record audio to an SD card.

5.7. Speed Control

Adjust playback speed using the Speed + and Speed - buttons. This feature is useful for audiobooks or language learning.

5.8. Equalizer Settings

Press the EQ button to cycle through various equalizer presets (e.g., Pop, Jazz, Rock, Classic, Bass). Select the preset that best suits your listening preference.

6. Maintenance

To ensure the longevity and optimal performance of your KLIM Discover CD player:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. For the laser lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the device to about 50% and store it in a cool, dry place.
- **Storage:** Store the device in its carry pouch when not in use to protect it from dust and scratches.
- **Handling:** Handle CDs by their edges to avoid fingerprints and scratches, which can affect playback quality.

ENJOY FOR
YEARS AND YEARS

Quality electronics
Made with
durable materials



Image: A user enjoying music with the KLIM Discover, illustrating its durable design.

7. Troubleshooting

- **Disc Skipping/Interruption:** The KLIM Discover features an anti-shock protection chip that preloads 100 seconds of music to prevent interruptions. Ensure the disc is clean and free of scratches. Avoid excessive movement during playback.
- **No Power:** Ensure the device is fully charged. Check the power switch and the 'Hold' switch to ensure it's not locked.
- **No Sound:** Check headphone connections and volume level. Ensure the correct playback mode (CD, Bluetooth, FM, SD) is selected.
- **Bluetooth Pairing Issues:** Ensure the KLIM Discover is in pairing mode (flashing Bluetooth icon). Make sure the receiving device is also in pairing mode and within range. If connecting to a car, be aware of potential incompatibilities as noted in section 5.2.
- **FM Transmitter Not Working:** Ensure the FM transmitter is activated and your car radio is tuned to the same frequency displayed on the KLIM Discover. Adjust the frequency if interference occurs.

8. Specifications

Product Dimensions	5.51 x 5.51 x 1.1 inches
Item Weight	8.1 ounces
Model Name	KLIM Nomad
Batteries	1 Lithium Ion battery (included)
Connectivity Technology	Auxiliary, Bluetooth, USB
Special Features	Equalizer, FM Radio, SD Card Reader, FM Transmitter, Recording, Speed Control

9. Warranty and Support

KLIM is committed to manufacturing high-quality electronics using superior components, built to stand the test of time. This portable CD player is designed for durability and reliable performance for many years.

Should you experience any issues with your KLIM Discover, our dedicated customer service team is available 24/7 to provide prompt and professional assistance. Please refer to the product packaging or the official KLIM website for contact information.