

VACEXT VTT143

VACEXT Non-Electric Extension Wand Instruction Manual

Model: VTT143

1. INTRODUCTION

This manual provides instructions for the proper use, setup, and maintenance of your VACEXT Non-Electric Extension Wand. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This extension wand is designed to enhance the reach and versatility of compatible Miele vacuum cleaners and other vacuums utilizing 1-3/8 inch (35mm) accessories.

2. PRODUCT OVERVIEW

The VACEXT Non-Electric Extension Wand is constructed from stainless steel, offering durability and a smooth finish. It features an adjustable length mechanism to accommodate various cleaning tasks and user heights. This wand is specifically designed for non-electric vacuum attachments.



Image 2.1: Overall view of the VACEXT Non-Electric Extension Wand.



VACUUM EXTENSION WAND

Compatible with Miele



HEAVY-DUTY STAINLESS STEEL



RUSTPROOF & DURABLE



EXPENSIVE LOOK

Image 2.2: Key features including heavy-duty stainless steel construction, rustproof design, and durability.

2.1 Dimensions and Material

- **Material:** Stainless Steel
- **Inner Diameter:** 1-3/8 inches (35mm)
- **Adjustable Length:** Approximately 24 inches (60.1 cm) to 40.5 inches (102.8 cm)
- **Item Weight:** Approximately 0.65 pounds (10.4 ounces)

PACKING LIST:

24 inches - 60.1 cm

40.5 inches - 102.8 cm

1 X



Image 2.3: Visual representation of the wand's minimum and maximum lengths.

3. COMPATIBILITY

This extension wand is designed for vacuum cleaners that use 1-3/8 inch (35mm) inner diameter accessories. It is a non-electric wand and will not power electric brush heads.

3.1 Compatible Models

- Miele Classic C1, Complete C1, Complete C2, Complete C3
- Miele Compact C1, Compact C2
- Miele S2 Series (S2000-S2999)
- Miele S4 Series (S4000-S4999)
- Miele S5 Series (S5000-S5999)
- Miele S6 Series (S6000-S6999)
- Miele S8 Series (S8000-S8999)
- Miele S140 - S168, S227 - 456i, S500 - 858
- Shark Rocket HV301, HV302 (Note: Other Shark models may not fit)



Image 3.1: The wand is compatible with Miele C1, C2, and C3 series vacuum cleaners.

3.2 Non-Compatible Models and Attachments

- Miele S7/U1 upright vacuum cleaners.
- Any vacuum cleaner hose or attachment that requires an electrical connection through the wand.
- Electric brush heads such as Electro Comfort Brush or Electro Brush.



Image 3.2: This non-electric wand is not compatible with electric brush heads or hoses that require electrical power.

4. SETUP

Follow these steps to properly set up your extension wand with your vacuum cleaner.

4.1 Attaching to Vacuum Hose

1. Ensure your vacuum cleaner is turned off and unplugged.
2. Locate the end of your vacuum hose where attachments are typically connected.
3. Align the wider end of the VACEXT extension wand with the vacuum hose connection point.
4. Push firmly until the wand clicks securely into place. Ensure a tight fit to prevent suction loss.

4.2 Attaching Accessories

1. Select the desired non-electric vacuum attachment (e.g., floor nozzle, crevice tool, upholstery tool).
2. Align the attachment with the narrower end of the VACEXT extension wand.
3. Push firmly until the attachment is securely seated on the wand.

4.3 Adjusting Wand Length

1. Locate the adjustment button or lever on the wand.

2. Press and hold the button/lever.
3. Extend or retract the wand to your desired length.
4. Release the button/lever to lock the wand in position. Ensure it is securely locked before use.

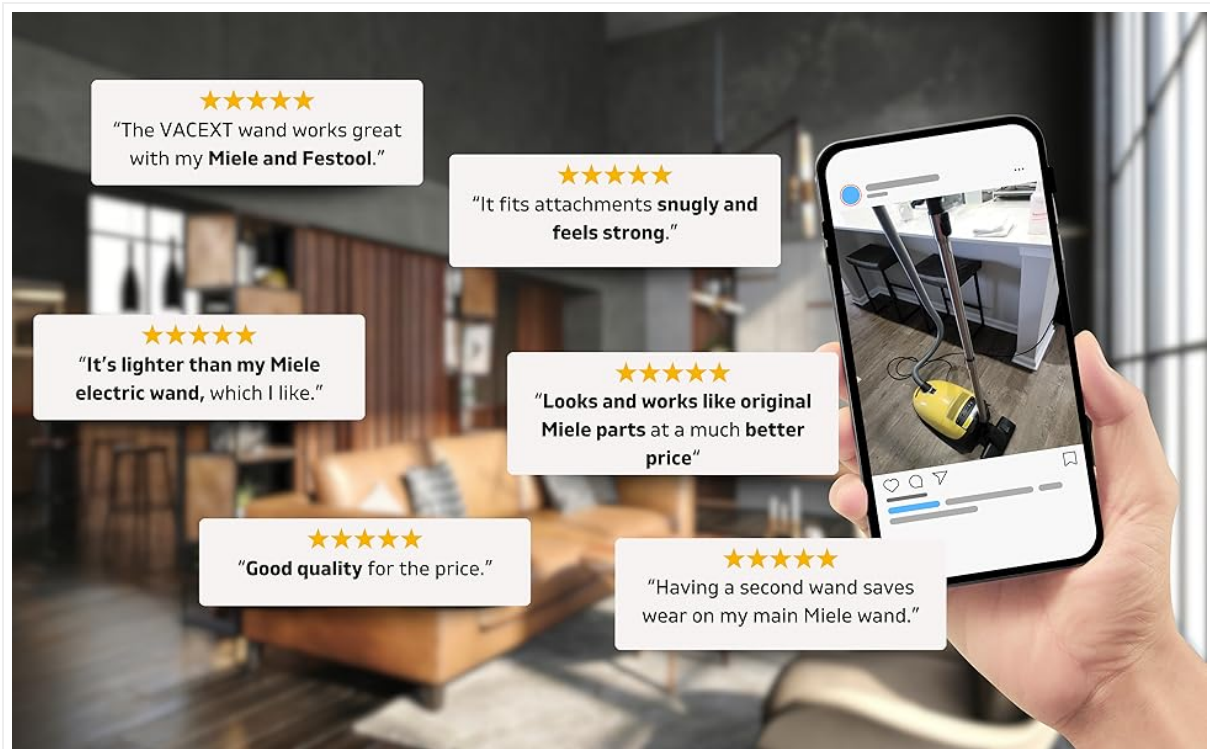


Image 4.1: The wand extends from approximately 23 inches to 35 inches, allowing for comfortable cleaning without excessive bending or reaching.

5. OPERATION

Once the extension wand and desired attachment are securely connected, you can begin vacuuming. The adjustable length allows for versatile cleaning in various areas.

- Use the extended wand for reaching high ceilings, curtains, or under furniture.
- Adjust to a shorter length for comfortable floor cleaning.
- Always ensure the wand is securely locked at the desired length before applying pressure during cleaning.



Image 5.1: The extension wand provides extended reach for cleaning high areas like curtains.



Image 5.2: The wand connected to a vacuum and used for floor cleaning, demonstrating its versatility.

6. MAINTENANCE

Regular maintenance ensures the longevity and proper functioning of your extension wand.

6.1 Cleaning

- Wipe the exterior of the wand with a soft, damp cloth to remove dust and debris.
- Avoid using abrasive cleaners or solvents, as these can damage the stainless steel finish.
- Ensure the wand is dry before storing.

6.2 Storage

- Store the wand in a clean, dry place away from extreme temperatures.
- If possible, store the wand in its retracted position to protect the internal mechanism.

7. TROUBLESHOOTING

If you encounter issues with your VACEXT extension wand, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Wand does not attach securely to hose/attachment.	Incorrect diameter; debris in connection; not pushed firmly enough.	Verify your vacuum uses 1-3/8" (35mm) accessories. Clean connection points. Push firmly until it clicks.
Wand length cannot be adjusted.	Adjustment button/lever not fully pressed; debris in mechanism; internal damage.	Ensure the button/lever is fully depressed. Check for visible obstructions. If damaged, contact support.
Loss of suction.	Loose connection between wand and hose/attachment; crack in wand.	Ensure all connections are tight. Inspect the wand for any visible damage or cracks.

8. SPECIFICATIONS

Specification	Detail
Brand	VACEXT
Model Number	VTT143
Material	Stainless Steel
Color	Silver
Inner Diameter	1-3/8 inches (35mm)
Product Dimensions (L x W x H)	24.4 x 1.37 x 1.37 inches (retracted)
Adjustable Length Range	Approx. 24 inches to 40.5 inches
Item Weight	0.65 Pounds (10.4 ounces)
Connector Type	Direct Hose Connection
UPC	793931626035

9. WARRANTY AND SUPPORT

Warranty information for your VACEXT Non-Electric Extension Wand is typically provided with your purchase documentation or can be obtained from the retailer where the product was purchased. For further assistance, technical support, or inquiries regarding your product, please refer to the contact information provided by your seller or the VACEXT brand's official support channels.