

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ieGeek](#) /

› [ieGeek 5MP Wireless Doorbell Camera User Manual](#)

ieGeek Bell J9 Plus

ieGeek 5MP Wireless Doorbell Camera User Manual

Model: Bell J9 Plus

1. INTRODUCTION

This user manual provides detailed instructions for the installation, operation, and maintenance of your ieGeek 5MP Wireless Doorbell Camera (Model: Bell J9 Plus). Please read this manual thoroughly before using the product to ensure proper functionality and safety. Keep this manual for future reference.

2. SAFETY INFORMATION

To prevent damage or injury, observe the following safety precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or excessive moisture.
- Use only the specified charging accessories.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure the installation location is secure and stable to prevent the doorbell from falling.
- This doorbell operates on 2.4GHz Wi-Fi only. It does not support 5GHz Wi-Fi connections.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- ieGeek 5MP Wireless Doorbell Camera
- Wireless Chime Unit
- Mounting Bracket
- USB Charging Cable
- Mounting Screws and Wall Anchors
- User Manual
- Anti-theft Bracket Pin



Image: The ieGeek 5MP Wireless Doorbell Camera and its accompanying wireless chime unit, shown together as part of the package contents.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your doorbell camera.

4.1 Doorbell Camera Features

- **5MP High-Resolution Camera:** Provides clear and sharp video footage.
- **166° Wide Viewing Angle:** Captures a broad area around your doorstep.
- **PIR Motion Detection:** Detects human movement and sends instant alerts.
- **Two-Way Audio & Voice Changer:** Communicate with visitors or use voice modulation for privacy.
- **Night Vision:** Ensures clear visibility even in low-light conditions.

- **Local Storage (Micro SD Card):** Supports up to 128GB for video recording without subscription.
- **Cloud Storage:** Offers free basic cloud storage (6s video, 7-day loop coverage).
- **Wi-Fi 6 Module:** Enhances connection stability and speed for smoother video streaming.
- **Weather Resistance:** Designed to withstand various outdoor conditions (rain, snow, dust).



**5MP image quality,
captures more details**


Image: A smartphone displaying a clear 5MP image from the doorbell camera, highlighting its ability to capture fine details like text on a package.

See Clearly Even at Night

Night Vision **130ft/10M**



Image: A night-time view captured by the doorbell camera, demonstrating its clear night vision capabilities up to 30 feet (10 meters).

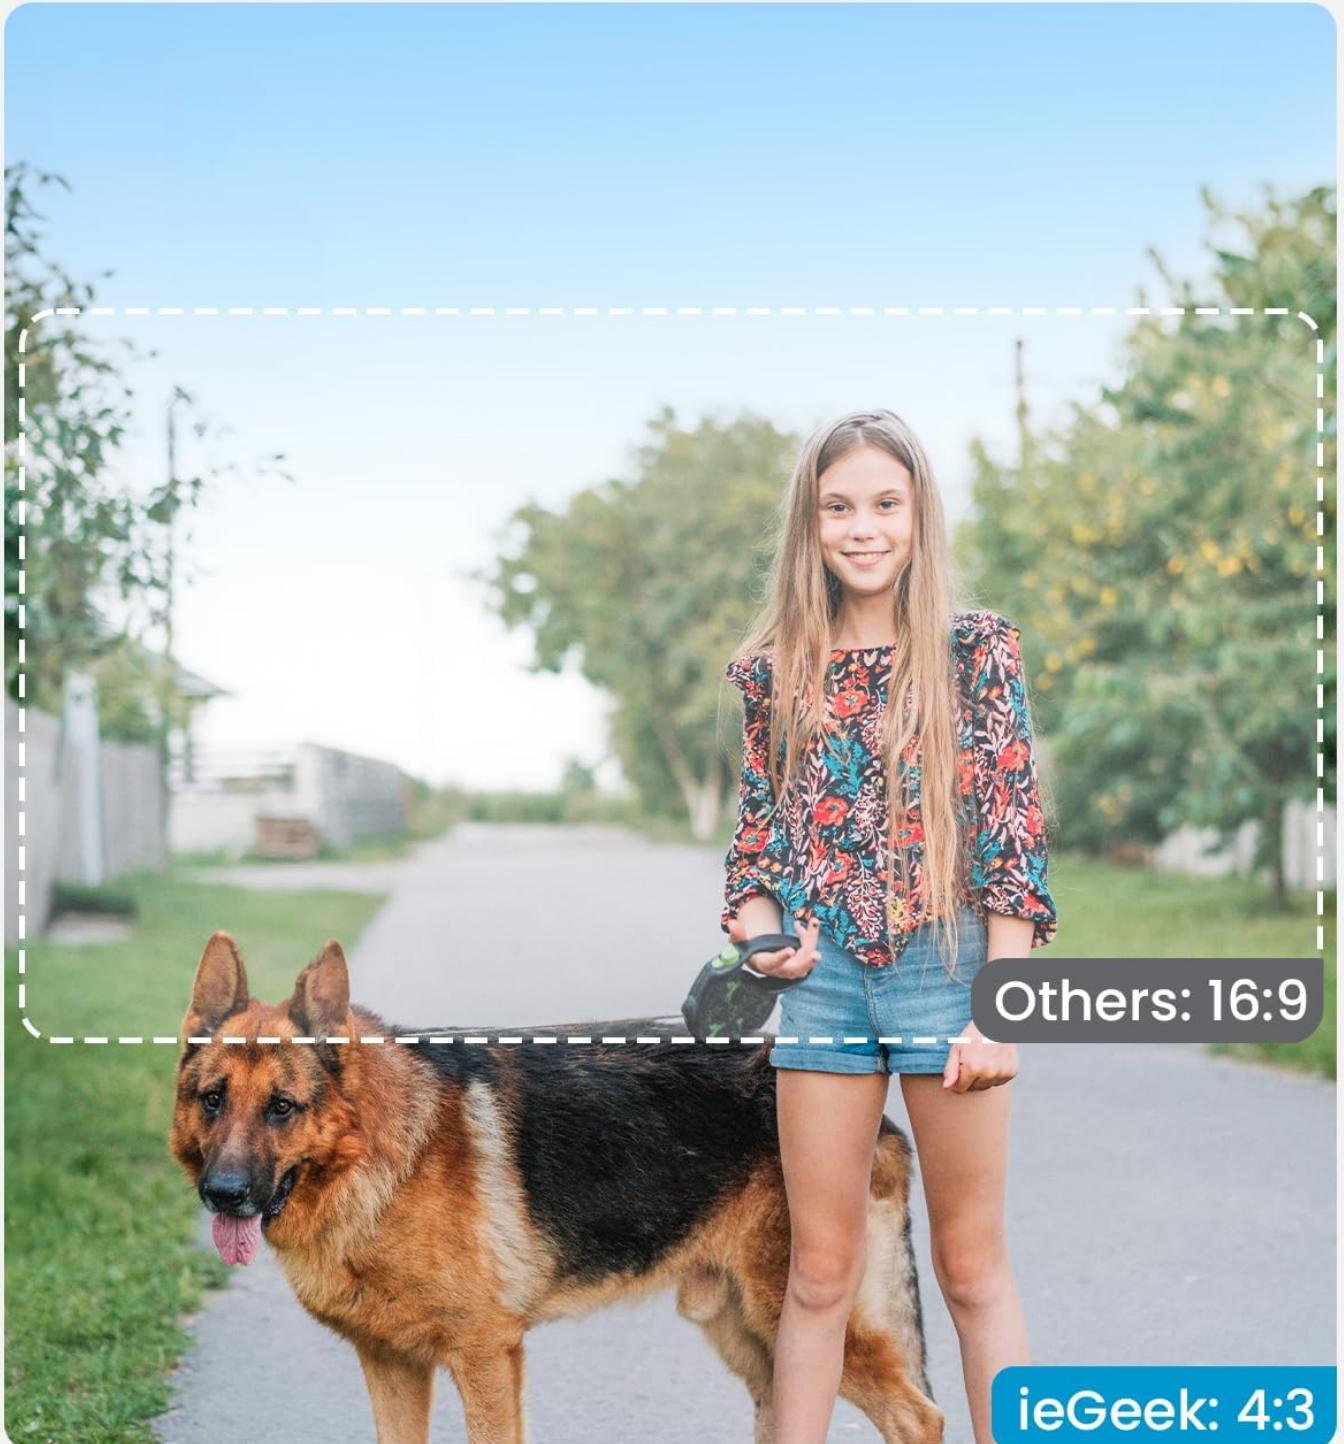

**Get more of the
picture with 4:3 view**

Image: A comparison showing the wider 4:3 aspect ratio view of the ieGeek doorbell camera compared to a standard 16:9 view, allowing more vertical coverage.

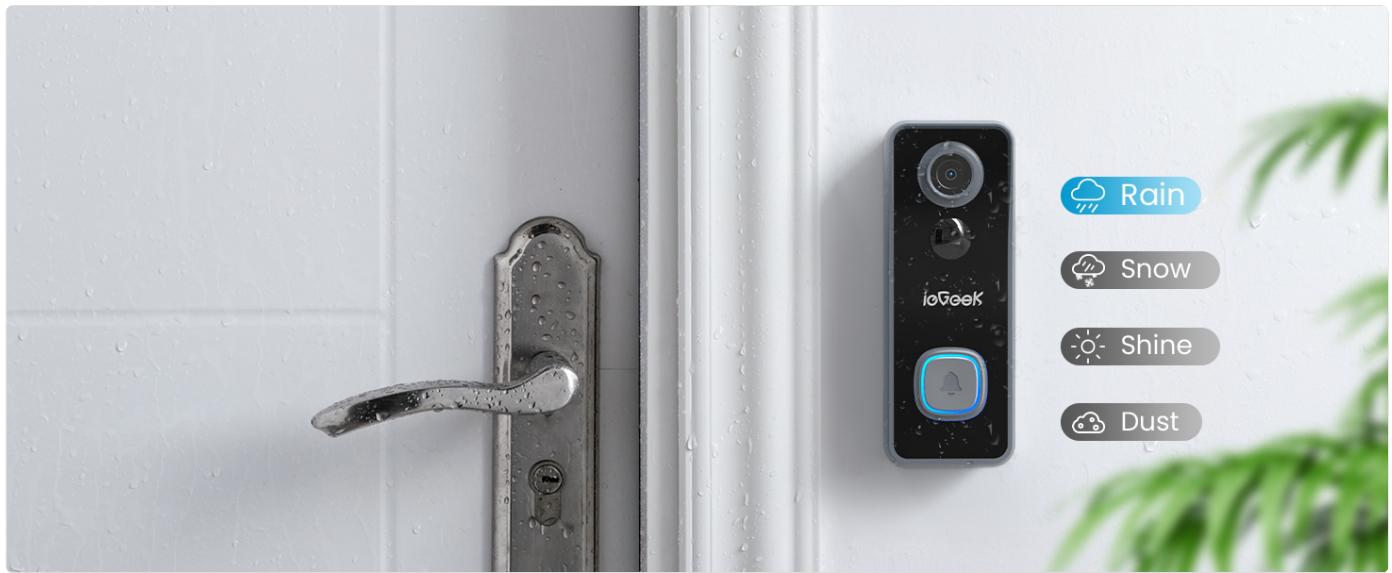


Image: The doorbell camera mounted on a wall, with icons indicating its resistance to various weather conditions including rain, snow, sunshine, and dust.

4.2 Wireless Chime Unit

- Battery Powered:** Offers flexible placement without needing a power outlet.
- Adjustable Volume:** Four levels of volume from 0-100dB.
- Multiple Ringtones:** Four distinct ringtones to choose from.

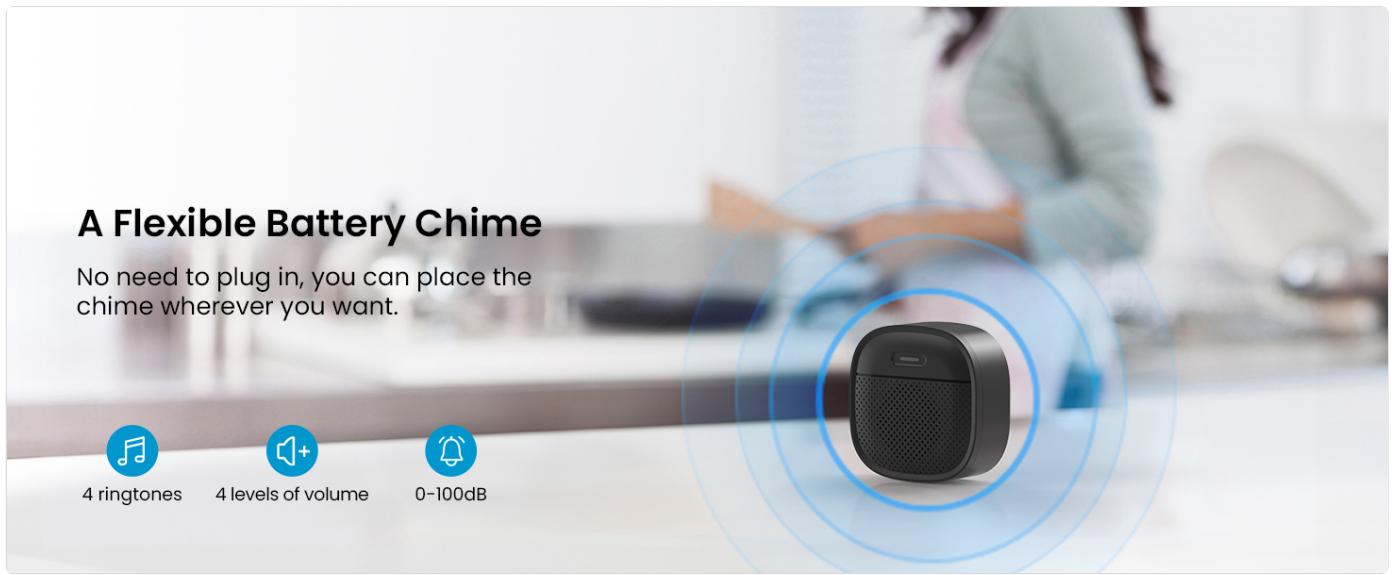


Image: The compact wireless chime unit placed on a kitchen counter, illustrating its portability and battery-powered operation.

5. SETUP

5.1 Charging the Doorbell

Before first use, fully charge the doorbell camera using the provided USB cable. The battery status can be monitored via the ieGeek Cam app.

5.2 Downloading the ieGeek Cam App

Search for "ieGeek Cam" on the App Store (iOS) or Google Play Store (Android) and download the application. Create an account or log in if you already have one.



Image: The ieGeek Cam application icon, representing the mobile app used to manage the doorbell camera.

5.3 Connecting to Wi-Fi

Ensure your Wi-Fi network is 2.4GHz. The doorbell does not support 5GHz Wi-Fi. Follow the in-app instructions for connection. You can connect via one-step Bluetooth connection or by scanning a QR code generated by the app.



Image: Two methods for connecting the doorbell to Wi-Fi: one-step Bluetooth connection and scanning a QR code generated by the app.

5.4 Installing a Micro SD Card (Optional)

To store recordings locally, install a Micro SD card (up to 128GB, not included). Use the provided anti-theft bracket pin to open the doorbell casing and access the SD card slot.



Install in minutes

Image: A hand inserting a Micro SD card into the side slot of the doorbell camera, which is mounted on a wall.

How to Install Micro Memory Card?



Step 1
Insert pin into the hole



Step 2
Take apart doorbell and bracket



Step 3
Card slot is on the left side

Image: A three-step visual guide demonstrating how to install a Micro Memory Card: 1. Insert pin into the hole, 2. Take apart doorbell and bracket, 3. Card slot is on the left side.

5.5 Mounting the Doorbell

The doorbell can be mounted using either double-sided tape for a no-drilling option or screws for a more stable installation. Ensure the mounting location provides a clear view and good Wi-Fi signal.

Double-sided Tape for No Drilling



Screw Mounting for Stability

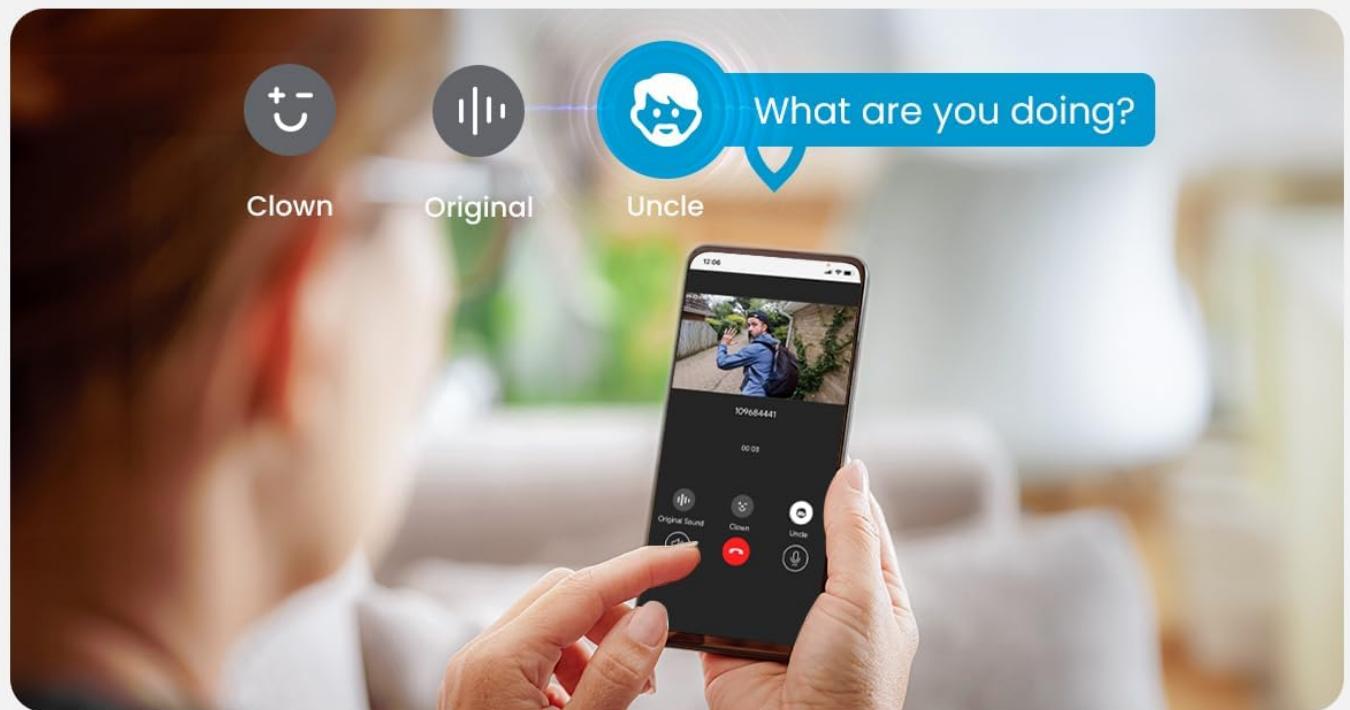


Image: Two diagrams illustrating mounting options for the doorbell: using double-sided tape for a no-drilling installation, and using screws for enhanced stability.

6. OPERATING INSTRUCTIONS

6.1 Live View and Two-Way Audio

Access the live feed from your doorbell camera through the ieGeek Cam app. Use the two-way audio feature to speak with visitors. The app also includes a voice changer function (Clown, Original, Uncle) for added privacy or fun.



Talk to strangers with voice changer

Image: A user interacting with the doorbell via the app, showing options for voice changing (Clown, Original, Uncle) and a person outside reacting to the voice.

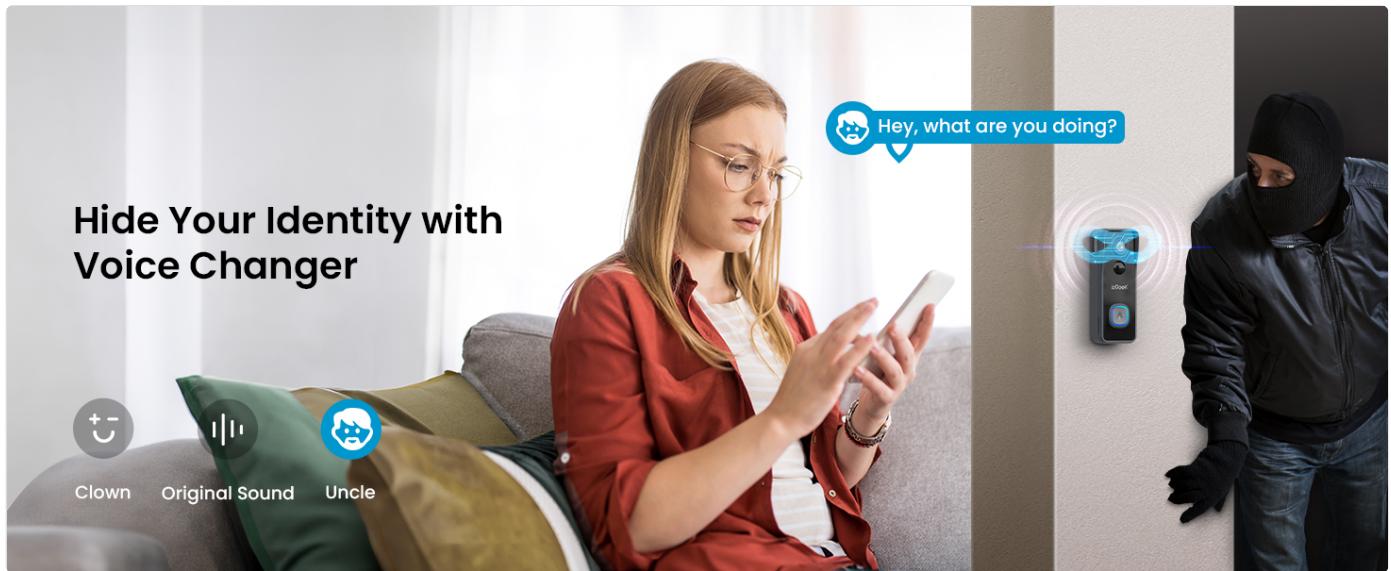


Image: A person using the voice changer feature on the app to communicate with someone outside, illustrating how it can be used to hide one's identity.

6.2 Pre-recorded Voice Messages

When you are busy, you can select from up to three pre-recorded voice messages to quickly respond to visitors.


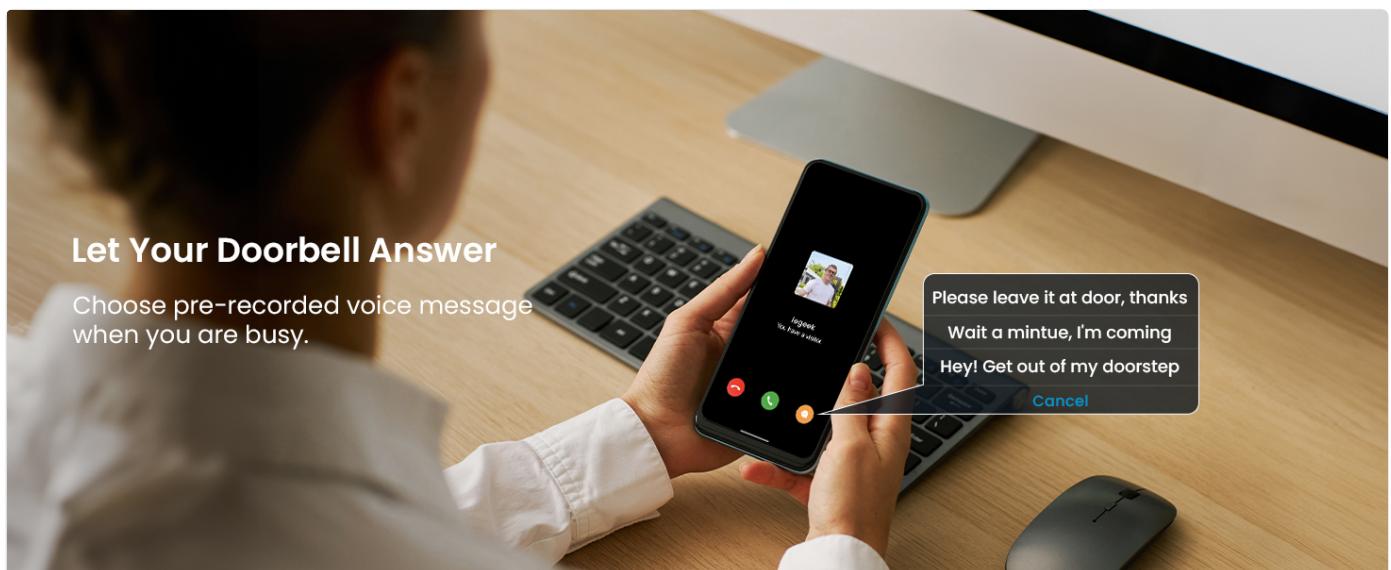


Image: A smartphone screen showing options for pre-recorded voice messages, allowing users to quickly respond when unable to speak live.

6.3 Motion Detection and Alerts

The doorbell features PIR motion detection with a range of up to 20ft. When motion is detected, you will receive real-time alerts on your phone within 3 seconds. You can customize sensitivity and enable humanoid recognition to reduce false alarms.

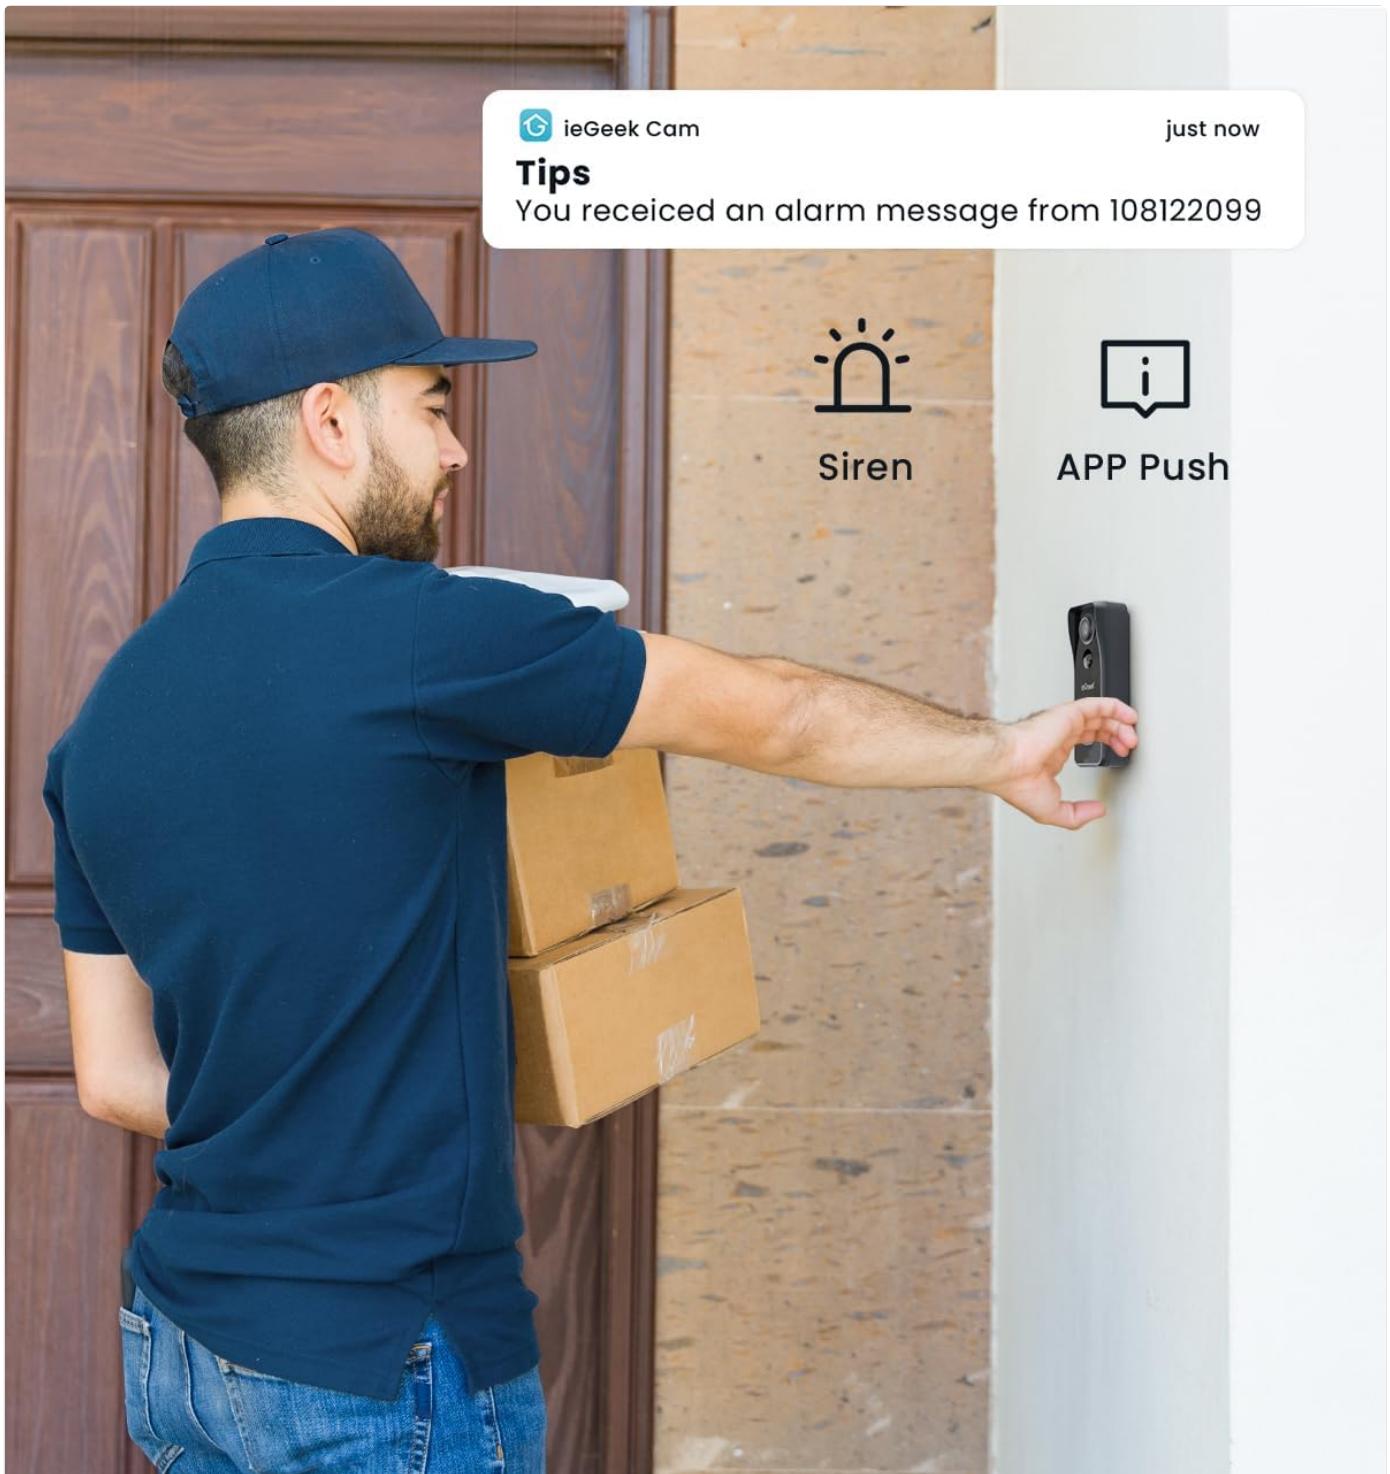

Know who's knocking in advance

Image: A delivery person at a door, with an overlay showing a notification from the ieGeek Cam app indicating an alarm message, along with siren and app push icons.

Get Smart Alerts in 3S

Know what's happening at home whenever and wherever you are.



Image: A person approaching the doorbell, with an overlay showing a notification from the ieGeek Cam app, indicating quick smart alerts.

6.4 Storage Options


The doorbell supports both local storage via a Micro SD card (up to 128GB) and free basic cloud storage. The free cloud storage provides 6-second video recordings with a 7-day loop coverage.



**Max 128GB
Memory Card
(Not Included)**



**6s Free Video
Cloud Storage**

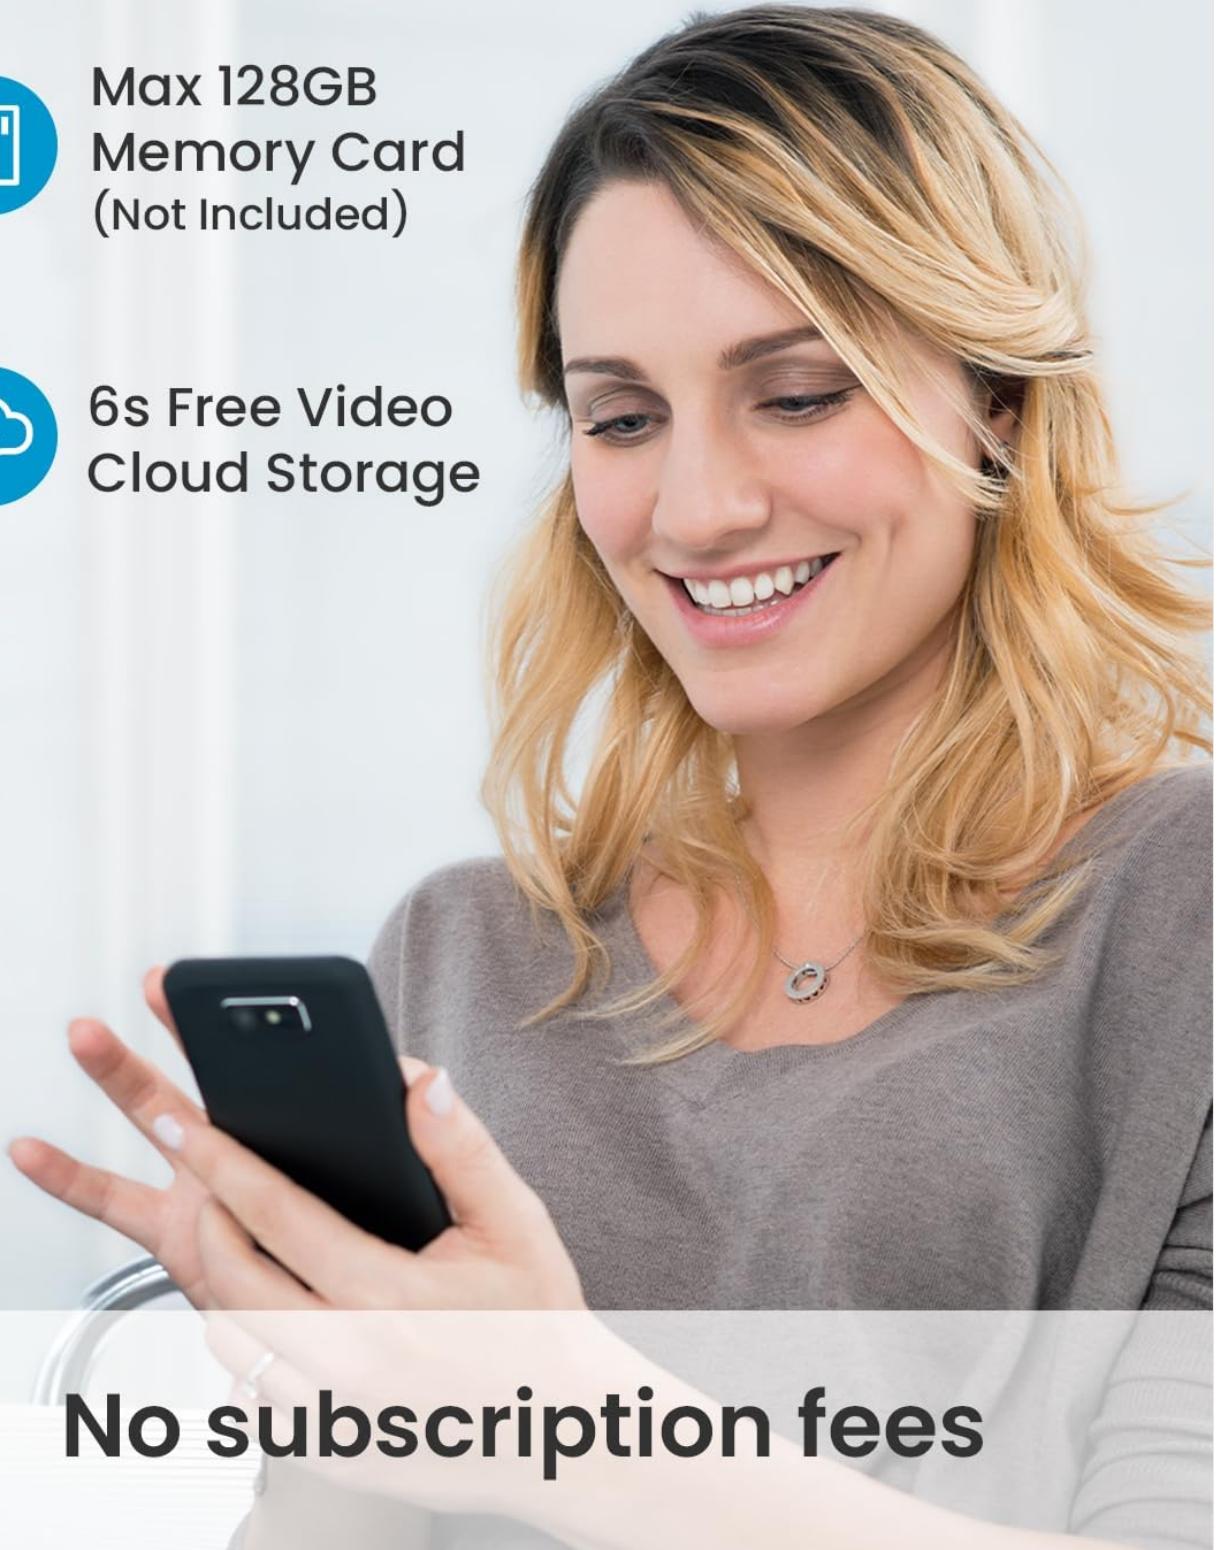

No subscription fees

Image: A woman using her smartphone, with icons indicating support for a Max 128GB Memory Card (not included) and 6s Free Video Cloud Storage, emphasizing no subscription fees.

Totally No Subscription Fee

Provide Free Basic Cloud Storage
(Video Record 6s & Save for 7 Days)

 Up to 128GB
Memory Card

 6s Video Free
Cloud Storage



Image: A visual representation of the doorbell camera and a smartphone, highlighting the availability of free basic cloud storage (6s video, 7-day loop) and support for up to 128GB memory card, indicating no subscription fees.

6.5 Alexa Integration

The ieGeek doorbell camera is compatible with Amazon Alexa. You can connect the doorbell to Alexa via the ieGeek Cam app to view the live feed on compatible Alexa devices (e.g., Echo Show).

"Alexa, talk to the front door."



Add doorbell to alexa via APP

Image: An Echo Show device displaying the live feed from the doorbell camera, with a speech bubble indicating "Alexa, talk to the front door," demonstrating Alexa compatibility.

Connect Doorbell to Alexa Via APP



Image: A woman interacting with an Echo Show device, which displays the doorbell camera's view, illustrating the process of connecting the doorbell to Alexa through the app.

6.6 Sharing with Family

You can easily share access to your doorbell camera's live feed and recordings with family members through the ieGeek Cam app.

Share the Doorbell with Family



Image: A world map with icons representing different family members in various locations, all connected to and viewing the doorbell camera feed on a smartphone, demonstrating the family sharing feature.

7. MAINTENANCE

7.1 Battery Charging

The doorbell camera is powered by a 5600mAh battery. When the battery level is low, remove the doorbell from its mounting bracket and charge it using the provided USB cable. Battery life may vary based on usage frequency and environmental factors, especially in cold weather.

7.2 Cleaning

Periodically clean the camera lens and the doorbell's exterior with a soft, damp cloth to ensure optimal video clarity and sensor performance. Do not use harsh chemicals or abrasive materials.

7.3 Firmware Updates

Ensure your ieGeek Cam app and doorbell firmware are up to date for the best performance and security features. The app will notify you of available updates.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------------|---|--|
| Doorbell not connecting to Wi-Fi. | Attempting to connect to 5GHz Wi-Fi; weak 2.4GHz signal. | Ensure you are connecting to a 2.4GHz Wi-Fi network. Move the doorbell closer to the router or use a Wi-Fi extender. |
| Short battery life. | Frequent motion detections; cold weather; high live view usage. | Adjust motion detection sensitivity; enable humanoid recognition; reduce live view frequency. Note that cold weather can significantly impact battery performance. |
| Frequent false alarms. | High motion detection sensitivity; environmental factors (e.g., passing cars, animals). | Lower motion detection sensitivity in the app. Enable humanoid recognition. Define specific monitoring zones to exclude high-traffic areas. |
| Video lag or poor quality. | Weak Wi-Fi signal; network congestion. | Ensure strong 2.4GHz Wi-Fi signal at the doorbell's location. Reduce network traffic or restart your router. |
| Cannot install Micro SD card. | Incorrect method of opening the casing. | Refer to Section 5.4 and use the provided anti-theft bracket pin to safely open the casing. Do not force it. |



Image: A visual representation of a doorbell camera's view with two defined monitoring zones (Zone 1 and Zone 2), illustrating how to reduce false alarms by excluding areas like driveways with passing cars.

Quickly Find Events by Time

Supports live viewing and video downloading
Not support RTSP / ONVIF / NVR / FTP

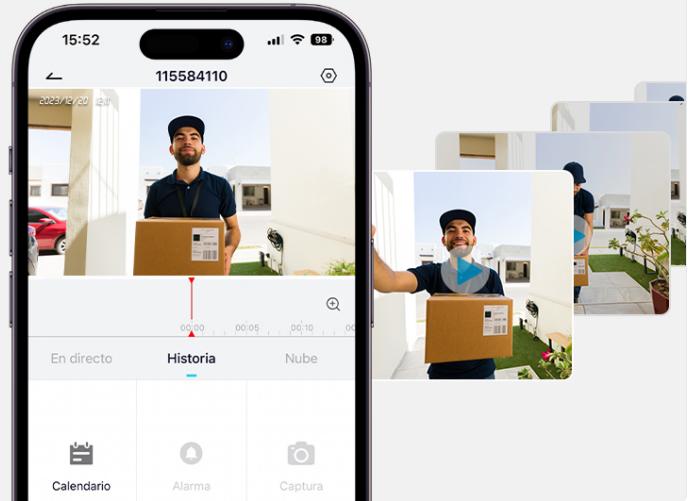


Image: A smartphone screen showing the ieGeek Cam app's timeline feature, allowing users to quickly navigate and find specific events by time, with options for live viewing and video downloading.

9. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|-----------------------------------|
| Model Name | Bell J9 Plus |
| Video Capture Resolution | 5MP |
| Viewing Angle | 166° |
| Power Source | Battery Powered (5600mAh) |
| Connectivity Protocol | Wi-Fi (2.4GHz only) |
| Local Storage | Micro SD Card (up to 128GB) |
| Cloud Storage | Free Basic (6s video, 7-day loop) |
| Motion Detection | PIR, up to 20ft range |
| Night Vision Range | 16 Feet (approx. 5 meters) |
| Two-Way Audio | Yes, with Voice Changer |
| Compatible Devices | Tablet, Smartphone, Amazon Alexa |
| Indoor/Outdoor Usage | Outdoor |
| Material | Plastic |
| Product Dimensions (L x W x H) | 3.15 x 2.36 x 7.09 inches |
| Item Weight | 15.8 ounces |
| UPC | 734931733217 |

10. WARRANTY AND SUPPORT

ieGeek is committed to 100% customer satisfaction. Your ieGeek 5MP Wireless Doorbell Camera comes with a 3-year warranty and 90 days of free return and exchange. Our dedicated service team is available 24/7, 365 days a year, to assist you with any product-related inquiries or issues.

For support, please visit the official ieGeek website or contact our customer service team directly. We are here to ensure your experience with our products is satisfactory.

ieGeek Serves Every Customer with Sincerity

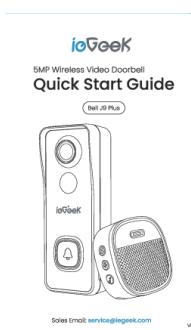
We will definitely deal with any product problems you encounter satisfactorily.



Image: An illustration of the ieGeek Customer Service Center, symbolizing the brand's commitment to providing sincere and satisfactory support to every customer.

© 2024 ieGeek. All rights reserved.

Related Documents - Bell J9 Plus

| | |
|---|--|
|  | <p><u>ieGeek Bell J9 Plus 5MP Wireless Video Doorbell Quick Start Guide</u></p> <p>This quick start guide provides essential information for setting up and using the ieGeek Bell J9 Plus 5MP Wireless Video Doorbell. Learn about the components, charging, app download, and basic operation for your ieGeek security product.</p> |
|  | <p><u>ieGeek Bell J1 Smart Video Doorbell User Manual</u></p> <p>Comprehensive user manual for the ieGeek Bell J1 Smart Video Doorbell, covering installation, setup, features, troubleshooting, and after-sale support.</p> |

| | |
|--|---|
|  <p>USER MANUAL After sales: support@iegeek.com</p> | <p>ieGeek PTZ Outdoor Security Camera User Manual User manual for the ieGeek PTZ Outdoor Security Camera, providing setup instructions, features, and troubleshooting.</p> |
|  <p>USER MANUAL Office: 00000000000000000000000000000000</p> | <p>ieGeek DQ201 PTZ Battery Security Camera User Manual Comprehensive user manual for the ieGeek DQ201 PTZ Battery Security Camera, covering introduction, app installation, camera setup, charging, installation guides, PIR motion sensor notes, and FAQs.</p> |
|  <p>Bell J5 www.iegeek.com service@iegeek.com</p> | <p>ieGeek Bell J5 Quick Start Guide A comprehensive guide to setting up and using the ieGeek Bell J5 video doorbell, including installation, app configuration, features, and troubleshooting.</p> |
|  <p>ieGeek Smart Video Doorbell www.iegeek.com service@iegeek.com</p> | <p>ieGeek Smart Video Doorbell User Manual and Guide Comprehensive user manual for the ieGeek Smart Video Doorbell, covering installation, app setup, features like live viewing and playback, and troubleshooting tips. Learn how to connect and use your smart doorbell.</p> |

Documents - ieGeek – Bell J9 Plus



5MP Wireless Video Doorbell
Quick Start Guide

Bell J9 Plus



Sales Email: service@legeek.com

vi

[ieGeek Bell J9 Plus 5MP Wireless Video Doorbell Quick Start Guide](#)

This quick start guide provides essential information for setting up and using the ieGeek Bell J9 Plus 5MP Wireless Video Doorbell. Learn about the components, charging, app download, and basic operation for your ieGeek security product.

lang: score:26 filesize: 10.95 M page_count: 80 document date: 2024-11-19