

YITAHOME MAYIHCgME9

YITAHOME FullXL Air Mattress with Headboard and Pump User Manual

Model: MAYIHCgME9

1. INTRODUCTION

Thank you for choosing the YITAHOME FullXL Air Mattress. This manual provides essential information for the safe and efficient use, setup, and maintenance of your new air mattress. Please read these instructions thoroughly before initial use and retain them for future reference.



Image 1.1: The YITAHOME FullXL Air Mattress with its integrated headboard, designed for comfort and convenience in various settings.

2. SAFETY INFORMATION

To reduce the risk of injury, electric shock, or damage, please observe the following safety precautions:

- Do not jump on the air mattress.
- Keep sharp objects away from the mattress surface to prevent punctures.
- Ensure children are supervised when using the air mattress.
- Do not use the air mattress near open flames or heat sources.
- The electric pump operates on 110-120V. Do not use with other voltage sources.
- Avoid over-inflation, which can damage the mattress.
- Do not immerse the pump or mattress in water.

3. PACKAGE CONTENTS

Verify that all components are present before setup:

- YITAHOME FullXL Air Mattress with Headboard
- External Electric Air Pump (120V)
- Carry Bag
- Repair Kit

4. SPECIFICATIONS

Feature	Detail
Size	Full XL
Product Dimensions (Inflated)	80"L x 53"W x 18"Th
Material	Polyvinyl Chloride (PVC) with Flocked Surface
Weight Limit	650 Pounds
Item Weight	15.48 pounds
Pump Voltage	110-120V
Special Features	Adjustable Headboard, Inflatable, Portable, Built-in Cup Holders

QUEEN SIZE



Image 4.1: Visual representation of the YITAHOME FullXL Air Mattress dimensions (80"L x 53"W x 18"H) and weight capacity (650 lbs).

5. SETUP AND OPERATION

5.1. Inflation

1. Unroll the air mattress on a clean, flat surface, free from sharp objects.
2. Locate the inflation valve on the mattress. Ensure the valve cap is open.
3. Attach the appropriate nozzle from the external electric pump to the inflation valve.
4. Plug the pump into a standard 110-120V electrical outlet.
5. Turn on the pump to begin inflation. The mattress will inflate quickly, typically within 2-3 minutes.
6. Once the desired firmness is reached, turn off the pump and quickly close the inflation valve cap to prevent air leakage.
7. Inflate the headboard and armrests separately using their dedicated valves.

EXTERNAL AIR PUMP FOR QUICK INFLATION



Air Pump



Just Plug In



Image 5.1: The YITAHOME air mattress can be quickly inflated in approximately two minutes using the external pump.

SURFACE FLOCKING MATERIAL



Easy Cleaning



Waterproof



Image 5.2: The external air pump connects to the mattress valve for efficient inflation and deflation.

5.2. Deflation

1. Open the main inflation valve and the headboard/armrest valves.
2. Attach the pump nozzle to the deflation port (if available) or simply allow air to escape naturally.
3. For faster deflation, turn on the pump in deflation mode (if applicable) or gently roll the mattress from the opposite end of the valve to push out remaining air.
4. Once fully deflated, fold or roll the mattress neatly for storage in the provided carry bag.

5.3. Usage

The YITAHOME FullXL Air Mattress is suitable for various applications, including:

- **Home Use:** Ideal for guest rooms, temporary bedding, or as an extra bed.
- **Camping:** Provides a comfortable sleeping surface for outdoor adventures.
- **Travel:** Easily transportable for use in hotels or other accommodations.
- **Office:** Can serve as a comfortable resting spot during breaks.



ULTIMATE COZY AIR MATTRESS

Round Air Coils Provide Evenly Distributed Full-Body Support For A Restful Sleep



Carry Bag



Saves Space



Easy To Carry

Image 5.3: The YITAHOME air mattress offers versatile applications for home, camping, office, and travel.

The integrated headboard provides back support, and the built-in cup holders on both sides offer convenience for beverages or small items.

Your browser does not support the video tag.

Video 5.1: This video demonstrates the inflation process and highlights key features of the YITAHOME FullXL Air Mattress, including the headboard and cup holders.

6. MAINTENANCE AND CARE

6.1. Cleaning

The flocked surface of the mattress is designed for easy cleaning. For general cleaning, wipe the surface with a damp cloth. For stubborn stains, use a mild soap solution and then wipe clean with a damp cloth. Ensure the mattress is completely dry before storage.



VERSATILE APPLICATIONS



Home



Camping



Office



Travel

Image 6.1: The flocked surface material is designed for easy cleaning and is waterproof.

6.2. Storage

After deflation, ensure the mattress is clean and completely dry. Fold or roll it neatly and place it in the provided carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.

6.3. Repair Kit

In case of accidental punctures or tears, use the included repair kit. Clean the damaged area, apply the patch according to the repair kit instructions, and allow sufficient time for it to cure before re-inflating.

EVENLY LOADED STRUCTURE



Full Body Support



Waist Protection



Image 6.2: The mattress features anti-puncture PVC material and a non-slip bottom for durability and stability.

7. TROUBLESHOOTING

If you encounter issues with your YITAHOME air mattress, refer to the following common problems and solutions:

- **Mattress deflates slowly:** Check that all valves are securely closed. Inspect the mattress for small punctures or leaks. Use the repair kit if a leak is found.
- **Pump not working:** Ensure the pump is securely plugged into a working 110-120V outlet. Check for any obstructions in the pump's air intake or output.
- **Uneven surface/bulge:** This can sometimes occur if internal structures are compromised. Ensure the mattress is not over-inflated. If the issue persists and affects comfort, contact customer support.
- **Difficulty inflating/deflating:** Ensure the correct nozzle is used and properly attached to the valve. Verify the pump is set to the correct mode (inflation/deflation).

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact YITAHOME customer service. Keep your purchase receipt as proof of purchase. You can typically find contact details on the YITAHOME official website or through your retailer.

© 2024 YITAHOME. All rights reserved.

Related Documents - MAYIHCgME9



[YITAHOME SZYY-V1 Queen Bed Frame Assembly Instructions](#)

Comprehensive assembly guide for the YITAHOME SZYY-V1 Queen Bed Frame, detailing parts, hardware, and step-by-step instructions for proper installation.

