

## MangoKit MS4

# MangoKit MS4 CD Player HiFi System User Manual

Model: MS4 | Brand: MangoKit

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your MangoKit MS4 CD Player HiFi System. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience. The MS4 is a versatile audio system featuring FM radio, CD playback, Bluetooth connectivity, USB, and AUX inputs, all housed in an acoustic wood cabinet with powerful stereo sound.



Image: The MangoKit MS4 CD Player HiFi System, showcasing its metallic black finish, front display, controls, and included remote control.

## 2. WHAT'S IN THE Box

Upon unboxing your MangoKit MS4 system, please verify that all the following components are present:

- 1 x MangoKit MS4 CD Player System
- 1 x Remote Control
- 1 x Mains Power Adapter with Cable
- 1 x User Manual (this document)



Mains power adaptor included



User manual & remote control included

Image: A visual representation of the package contents, including the MS4 unit, remote control, power adapter, and user manual, alongside product dimensions.

### 3. PRODUCT FEATURES

#### 3.1 Multi-Source Audio Playback

The MS4 offers a comprehensive range of audio playback options:

- **FM Radio:** Tune into your favorite FM stations with 40 preset memory slots for quick access.
- **CD Player:** Enjoy your CD collection with premium sound quality.
- **Bluetooth Connectivity:** Stream audio wirelessly from your smartphone, tablet, or other Bluetooth-enabled devices. Includes Bluetooth-out for wireless headphone connection.
- **USB Playback:** Play MP3 and other digital audio files directly from a USB drive.

- **AUX Input:** Connect external audio devices via the auxiliary input.



**All in one Hifi System with CD player, DAB+ Radio, Bluetooth Streaming & FM Radio.**

Image: The MangoKit MS4 unit with a CD partially inserted, demonstrating its multi-source capabilities including CD, Bluetooth, and FM radio.

### 3.2 Superior Audio Performance

Experience rich, clear, and powerful sound with the MS4's acoustically engineered design:

- **Powerful Stereo Sound:** Equipped with dual stereo speakers and rear-facing bass ports, delivering 100W output.
- **Acoustic Wood Cabinet:** The oak-style cabinet enhances sound resonance and clarity.
- **Customizable EQ:** Fine-tune your audio experience with the built-in equalizer for music or speech.



The Mangokit MS4 is your full audio system, With CD player, DAB+ Radio, Bluetooth Streaming, FM Radio, USB & AUX.

Image: An exploded view of the MangoKit MS4 highlighting its internal speaker components and the concept of powerful sound delivery.

### 3.3 User-Friendly Interface

The MS4 is designed for ease of use with intuitive controls and a clear display:

- **2.4" Full Color Display:** Provides clear information on radio stations, music playback, and settings.
- **Front Panel Controls:** Easily accessible buttons and a central rotary dial for volume and navigation.
- **Full Function Remote Control:** Conveniently operate all features from a distance.



The image shows a black MangoKit MS4 digital radio system with a small screen and a remote control on a wooden kitchen counter. The radio has a silver speaker grille on the left and right sides. A digital display screen in the center shows 'FM 90.70MHz 9:30 AM' and 'Acete'. Below the screen are several buttons and a large volume knob. A small antenna is attached to the top. A black remote control is placed in front of the radio on the counter. The background shows a blurred kitchen interior with shelves and a bottle.



**The complete user friendly entertainment system, clear controls on front panel, full function remote control, full colour TFT display with large text, clock and pictures**

Image: The MangoKit MS4 system positioned on a kitchen counter, demonstrating its user-friendly interface and the included remote control.

### 3.4 Smart Features for Daily Use

Enhance your daily routine with integrated smart functionalities:

- **Dual Alarms:** Set multiple alarms with weekday and weekend modes, choosing FM radio or alarm sounds.
- **Sleep Timer:** Program the system to turn off automatically after a set period, ideal for falling asleep to music or radio.
- **Headphone Jack:** For private listening with wired headphones.



**Your bedroom companion with Dual Alarm & Sleep Timer, plus Bluetooth-out connection to wireless headphones for personal listening**

Image: The MangoKit MS4 on a bedside table, illustrating its use as a bedroom companion with alarm and sleep timer functions, and Bluetooth-out for headphones.

## 4. SETUP GUIDE

### 4.1 Unpacking and Placement

1. Carefully remove all components from the packaging.
2. Place the MS4 unit on a stable, flat surface, away from direct sunlight, heat sources, and excessive moisture. Ensure adequate ventilation around the unit.

### 4.2 Power Connection

1. Connect the provided mains power adapter to the DC IN port on the rear of the MS4 unit.
2. Plug the power adapter into a standard wall outlet.
3. Press the Power button on the unit or remote control to turn on the system.

### 4.3 Antenna Setup

For optimal FM radio reception, fully extend the telescopic antenna located at the rear of the unit. Adjust its

position for the best signal quality.



**Advance your audio with additional features, USB to play MP3 and digital files, AUX to connect music players, Headphone Jack or Bluetooth-out for private listening on wired and wireless headphones.**

Image: The rear panel of the MangoKit MS4, showing the USB port, AUX input, headphone jack, and the extended FM antenna.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Controls

- **Power Button:** Turns the unit on/off.
- **Volume Dial:** Adjusts the master volume.
- **Mode Button:** Switches between FM, CD, Bluetooth, USB, and AUX modes.
- **Play/Pause Button:** Controls playback for CD, USB, and Bluetooth.
- **Skip/Tune Buttons:** Navigates tracks or tunes radio frequencies.
- **Info/Menu/Back Button:** Accesses menus, displays information, or goes back.

### 5.2 FM Radio Operation

1. Press the **Mode** button until 'FM Radio' is displayed.

2. Use the **Tune +/-** buttons to manually adjust the frequency or press and hold to auto-scan for the next available station.
3. To save a preset: Tune to the desired station, press and hold the **Preset** button, select a preset number using the **Tune +/-** buttons, and press **Enter** to confirm.
4. To recall a preset: Press the **Preset** button, then use the **Tune +/-** buttons to select the desired preset number.



Image: A close-up of the MangoKit MS4 display showing FM radio tuning information, indicating its premium radio capabilities.

### 5.3 CD Player Operation

1. Press the **Mode** button until 'CD Player' is displayed.
2. Gently insert a CD into the CD slot with the label side facing up. The system will automatically load the CD.
3. Playback should begin automatically. If not, press the **Play/Pause** button.
4. Use the **Skip +/-** buttons to navigate between tracks.
5. Press the **Stop** button to stop playback.

### 5.4 Bluetooth Operation

1. Press the **Mode** button until 'Bluetooth' is displayed. The system will enter pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your Bluetooth-enabled device (e.g., smartphone), go to its Bluetooth settings and search for available devices.
3. Select 'MangoKit MS4' from the list. Once connected, the Bluetooth icon on the MS4 display will become solid.
4. You can now play audio from your device through the MS4 system. Use the MS4's controls or your device's controls for playback.
5. To connect Bluetooth headphones: Ensure the MS4 is in Bluetooth mode. On the MS4, navigate to the Bluetooth-out setting (refer to the manual's detailed Bluetooth section). Put your headphones into pairing mode and select them from the MS4's display.

### 5.5 USB Playback

1. Insert a USB flash drive into the USB port on the rear of the unit.
2. Press the **Mode** button until 'USB Playback' is displayed.
3. The system will automatically scan and begin playing compatible audio files.
4. Use the **Skip +/-** buttons to navigate between files.

## 5.6 AUX Input

1. Connect an external audio device (e.g., MP3 player) to the AUX IN port on the rear of the unit using a 3.5mm audio cable (not included).
2. Press the **Mode** button until 'AUX' is displayed.
3. Control playback directly from your connected external device.

## 5.7 Setting Alarms and Sleep Timer

Refer to the detailed instructions in the full user manual for setting dual alarms with weekday/weekend modes and configuring the sleep timer function.



Image: The MangoKit MS4 display showing dual alarm settings, highlighting its utility for scheduling wake-up times and reminders.

## 6. MAINTENANCE

### 6.1 Cleaning the Unit

To clean the exterior of the unit, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as these may damage the finish. Ensure the unit is unplugged before cleaning.

### 6.2 CD Care

Handle CDs by their edges to avoid fingerprints. Clean CDs with a soft, lint-free cloth, wiping from the center outwards. Do not use harsh chemicals or abrasive materials.

## 7. TROUBLESHOOTING

If you encounter any issues with your MangoKit MS4, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; outlet not active.	Ensure power cable is securely connected to the unit and a working wall outlet.

Problem	Possible Cause	Solution
No sound	Volume too low; incorrect mode selected; headphones connected.	Increase volume; select the correct input mode (CD, FM, Bluetooth, etc.); disconnect headphones if sound is desired from speakers.
CD not playing	CD inserted incorrectly; CD is dirty or scratched; unsupported disc format.	Re-insert CD correctly; clean the CD; try a different CD.
Bluetooth not connecting	MS4 not in pairing mode; device too far; device already connected to another unit.	Ensure MS4 is in Bluetooth pairing mode; move device closer; disconnect from other Bluetooth devices.
Poor FM reception	Antenna not extended or positioned correctly; strong interference.	Fully extend and adjust the telescopic antenna; try moving the unit to a different location.

If the problem persists after attempting these solutions, please contact MangoKit customer support for further assistance.

## 8. SPECIFICATIONS


Feature	Specification
Model Number	MS4
Product Dimensions (L x W x H)	13.78" x 8.5" x 5.66" (350W x 144H x 215D mm)
Item Weight	9.44 pounds
Connectivity Technology	Bluetooth 5.3, USB, AUX
Tuner Technology	FM
Power Source	Corded Electric
Display	2.4" Full Color Display
Audio Output	100W Stereo Sound
Radio Presets	40
Included Components	MS4 CD Player System, Remote Control, Mains Power Adapter, User Manual

## 9. WARRANTY AND SUPPORT

MangoKit is committed to providing high-quality audio products. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact details provided on the official MangoKit website or the warranty card included with your product. MangoKit has been producing audio devices since 2009, serving millions of customers worldwide.

For the most up-to-date support information, please visit: [www.mangokit.com/support](http://www.mangokit.com/support) (Example Link)

## Documents - MangoKit – MS4

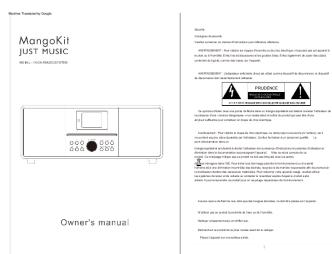

### [\[pdf\] Instructions](#)

PRUDENCE 1Connectez votre casque Bluetooth au MS4 Dès que vous passez en tente de se connecter dernier appareil auquel il était associé Si c est la91CoTg4E6ELm media amazon images | 91CoTg4E6EL ref dp product quick view |||

Machine Translated by Google MS ALL I NON EMUSICSYSTEM Scurit Consignes de scurit Veuillez conserv ... rmement. 2 Contenu du carton Aprs avoir dball la bote, vous trouverez les lments suivants : 1 unit **MS4** 1 adaptateur secteur 1 manuel du propritaire 1 tlcommande Commandes principales 11 589 3610 1...

lang:fr score:22 filesize: 615.9 K page\_count: 8 document date: 2025-07-11