

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli RMT-TZ120E Replacement Remote Control User Manual

Effireli RMT-TZ120E

Effireli RMT-TZ120E Replacement Remote Control User Manual

Model: RMT-TZ120E

INTRODUCTION

This user manual provides essential information for the operation and maintenance of your Effireli RMT-TZ120E replacement remote control. This remote is designed to be compatible with various Sony TV models, offering a direct replacement without the need for complex programming.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Effireli RMT-TZ120E Remote Control. The back of the remote shows the battery compartment, typically located at the bottom, where two AAA batteries are inserted according to polarity markings.

2. Initial Use

This replacement remote control is designed for immediate use with compatible Sony TV models. No programming or setup is required. Simply insert the batteries and point the remote towards your television to begin operation.

OPERATING INSTRUCTIONS

The RMT-TZ120E remote control provides standard functions for your Sony TV. Below are common button functions:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Silences the TV audio.

- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Pad (Up/Down/Left/Right/Enter):** Used for menu navigation and selection.
- **Menu/Home Button:** Accesses the TV's main menu or smart TV interface.
- **Back/Return Button:** Returns to the previous screen or menu.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback if supported by your TV.



Image: Effireli RMT-TZ120E Remote Control. The front of the remote displays various buttons for power, channel, volume, navigation, and media control, arranged in a standard layout.

MAINTENANCE

Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Some functions not working:**
 - Verify that your TV model is listed as compatible. While this remote is broadly compatible, specific advanced functions may vary by TV model.
 - If your original remote looked significantly different, contact support to confirm compatibility.

SPECIFICATIONS

Model Number	RMT-TZ120E (YK-RMT-TZ120E)
Brand	Effireli
Compatible Devices	Sony Televisions (various KDL series models)
Special Feature	No Programming Required
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7.87 x 1.77 x 0.79 inches
Item Weight	2.82 ounces
Color	Black

WARRANTY AND SUPPORT

Your Effireli RMT-TZ120E replacement remote control comes with a **30-day money-back guarantee** and a **12-month warranty** covering manufacturing defects. Returns and exchanges are accepted within the warranty period. For any questions regarding compatibility, troubleshooting, or warranty claims, please contact Effireli customer support. If your specific TV model number is not listed in the product description or your original remote looks different, it is recommended to contact us directly to confirm compatibility before purchase or for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DGG523V5>

More documents and user manuals: <https://manuals.plus/>